



INSTALLATION INSTRUCTIONS

To suit Volkswagen Amarok Dual Cab



INSTALLATION TIME: 2 Hours (Approximately)

IMPORTANT	• Do not stand/sit or rest heavy objects on Roll R Cover • Humans or animals are not to be under the closed cover at any given time • Tonneau Cover is not dust or water tight • If contact with volatile chemicals occur, clean Cover with mild detergent and water solution		
Care Instructions	• Read Instructions fully before commencing installation. • Clean Cover with a mild detergent and water solution • Do not use abrasive cleaners or solvents • Refer to manufactures instructions applicable to power drill. • Protect Tub floor against scratches during installation process.		
Maintenance	Refer to Maintenance instructions.		
Tools Required	• Pen / Marker • Centre Punch • Drill & Drill bits • Caulking Gun • Silicon - Non Acetic	• Scissors & Knife • Spanner & Socket • Tape measure • Holesaw • Filing tool	• Soapy water solution • Allen Key set • Screw driver • Rust Inhibitor • Trim Removal Tool

PERSONAL PROTECTIVE EQUIPMENT:



Rubber Gloves



Goggles



Hearing Protection

 
BOX CONTENTS

LEFT & RIGHT SIDE RAIL


S2.5-DC-AE-002ps-A4



S2.5-DC-AE-003ds-A4



CANISTER ASSEMBLY

 

S3-DC-AF-A4R-001/002

CANISTER TOP COVER



S2.5-DC-AE-005 -A

STANDARD KIT

COVER END CAPS



S2.5-DC-PI-004ps



S2.5-DC-PI-004ds



COUNTERSUNK
SCREW Qty - 4



 
FLAT PLATE
Qty - 2




CABLE TIE
Qty x 16




BATTERY
LOOM S2.75



Drainage pipe
Qty - 2

 

SIDERRAIL CLAMP
Qty - 6

 


M8 x 35mm
Qty - 6



M8 WASHER
Qty - 6



 M8 SPRING
WASHER
Qty - 6



M8 x 70 mm
Qty - 2

 


M8 NUT
Qty - 8



Rear Drainage pipe
Qty - 2

SPECIFIC KIT A4R



50449 D-SPONGE
Qty-2



CL-LOOM-SHORT



A-PATCH-K



Clear protective
tape (30mm x
65mm)
Qty - 2

TRUCK BED PREPARATION

INSTALL WIRING

INSTALL TO TRUCK BED


ROLL R COVER ASSEMBLY

TEST OPERATION


FINISH

TUB PREPARATION


If the Vehicle is fitted with a cabin guard or sports styling bar, remove from Ute Tub (truck bed).

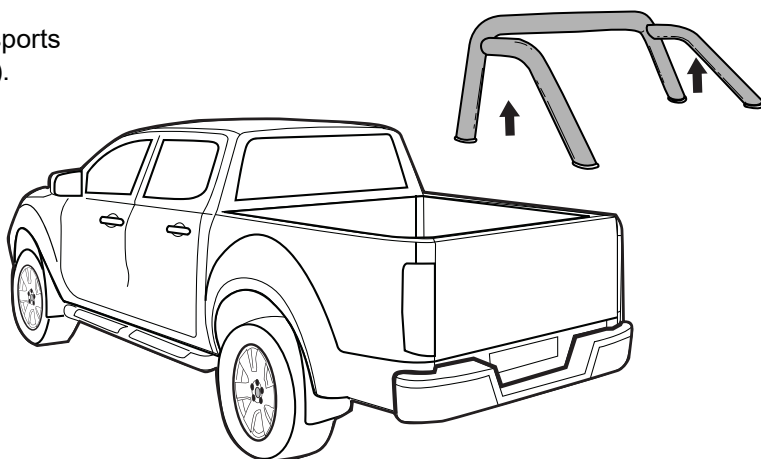







Clean as indicated.

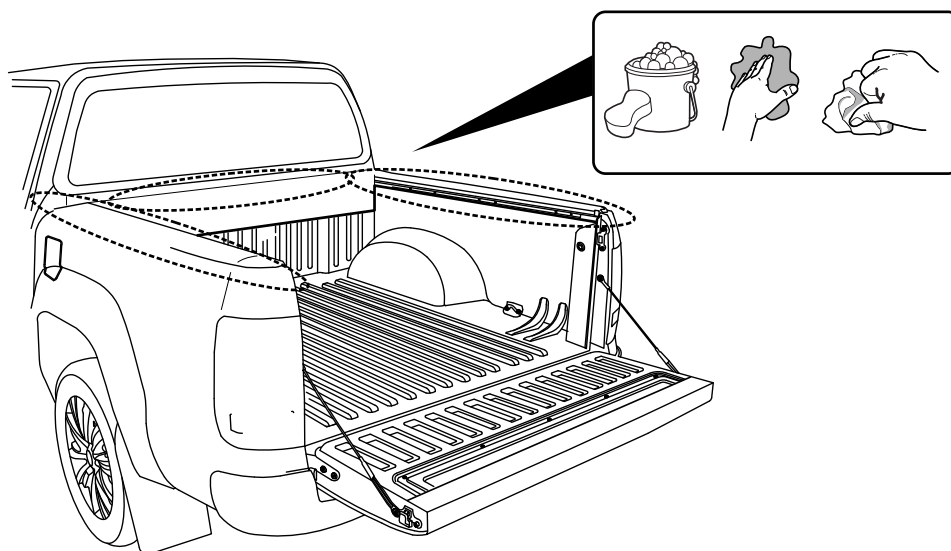






Measure 10mm down from top of tailgate and trim tailgate liner.

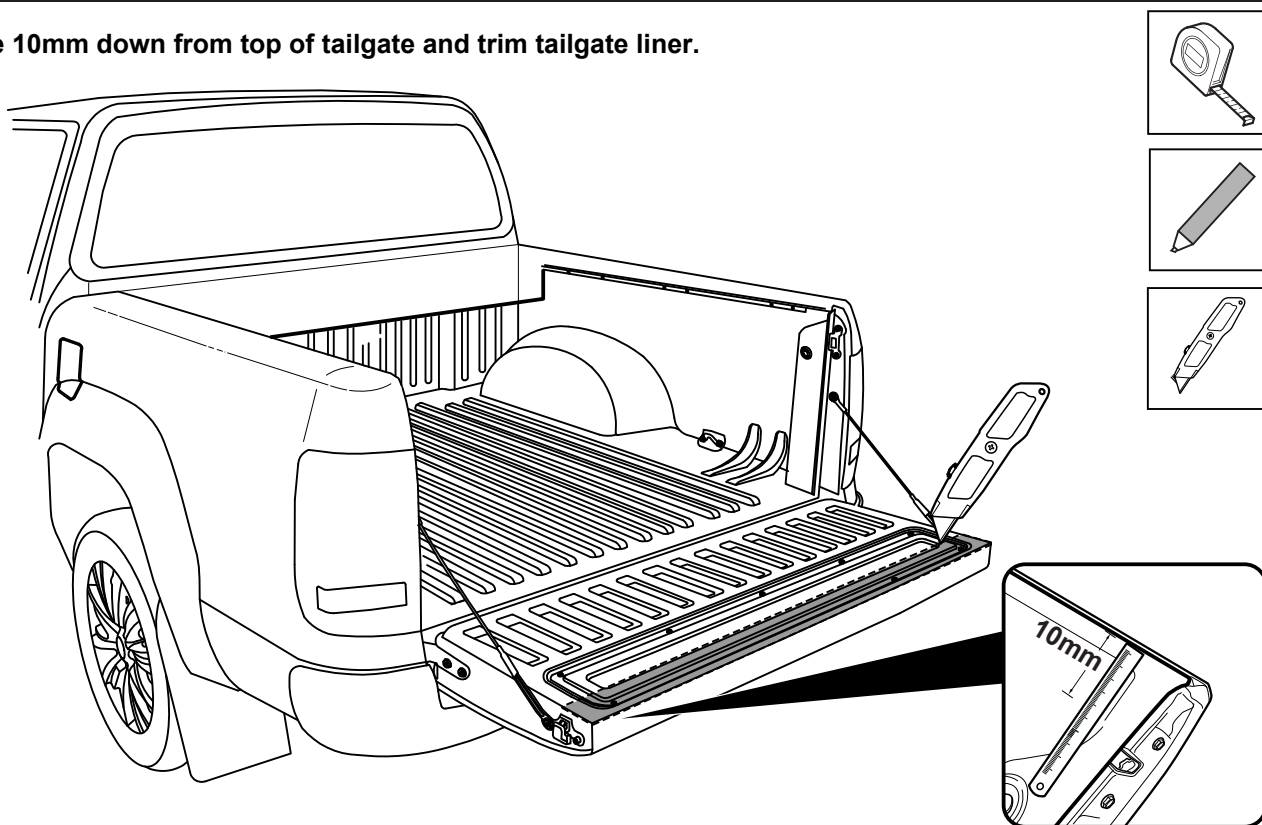

 Measure down from top of assembly bar 210mm & 135 mm from inside wall of bed liner as shown. Repeat to the other side. Using a 50mm hole-saw drill the liner only as indicated.

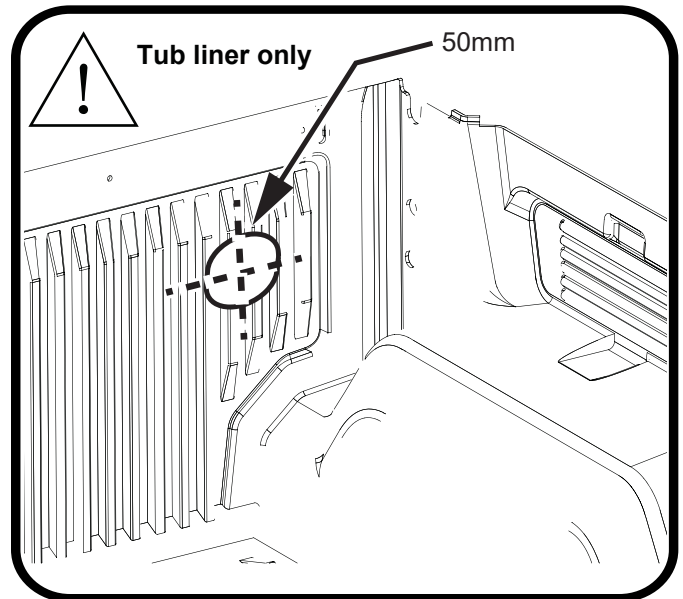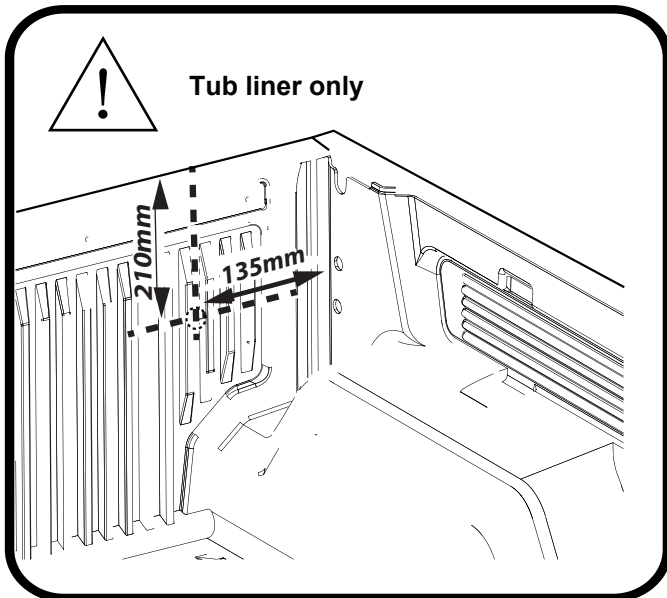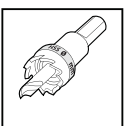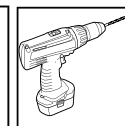

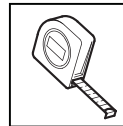


Measure down from top of headboard 210mm & 145mm from inside wall of bed as shown. (or 115mm if measuring from the side of the top rail) Repeat to the other side. Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.

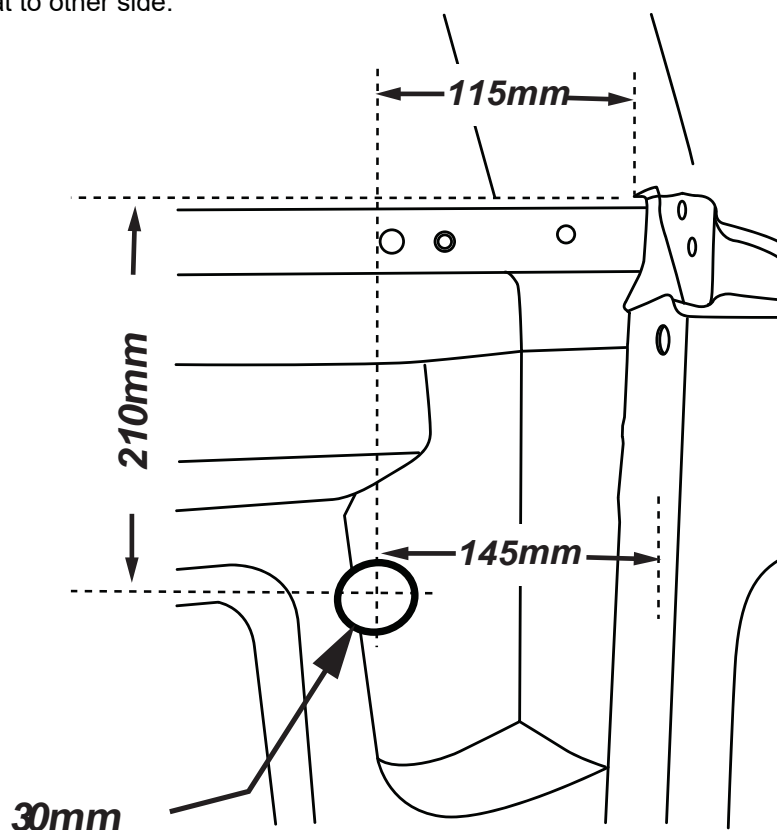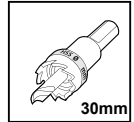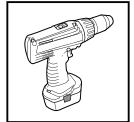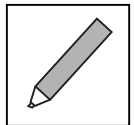
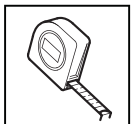


! ATTENTION: Do not exceed 30mm hole.

Seal any exposed gaps or holes on the front panel of the Ute bed with sealant.

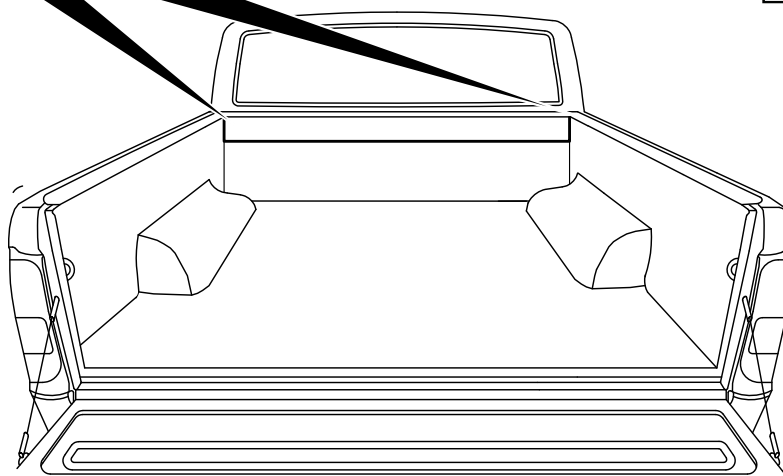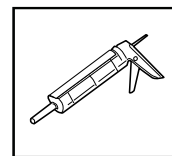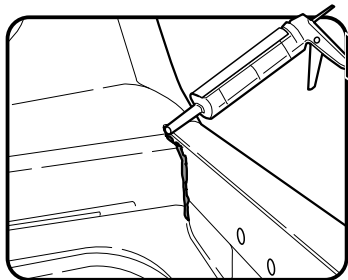



Carefully unpack the box.

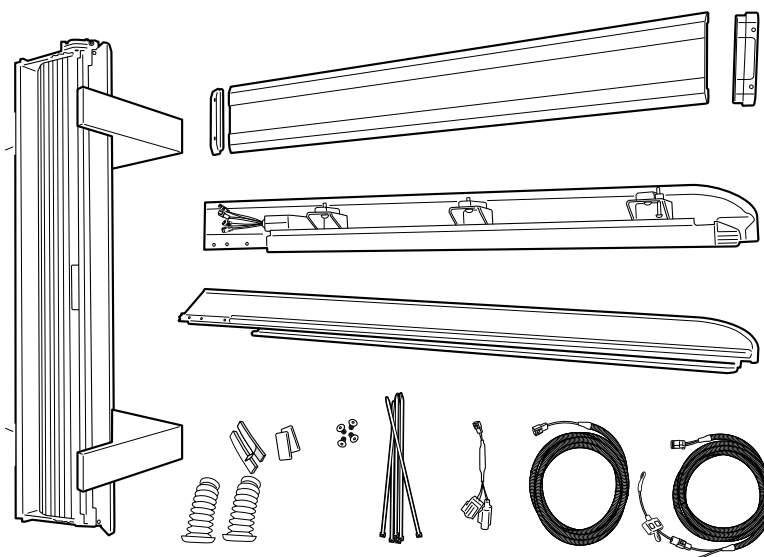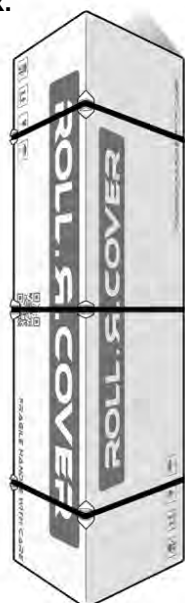


Install front drain pipes (55mm diameter end of hose) through pre-drilled holes on the front tub panel.






Note: With care push tube in.
Taking care pull the tube back so it seals
correctly against the front panel of the tub.

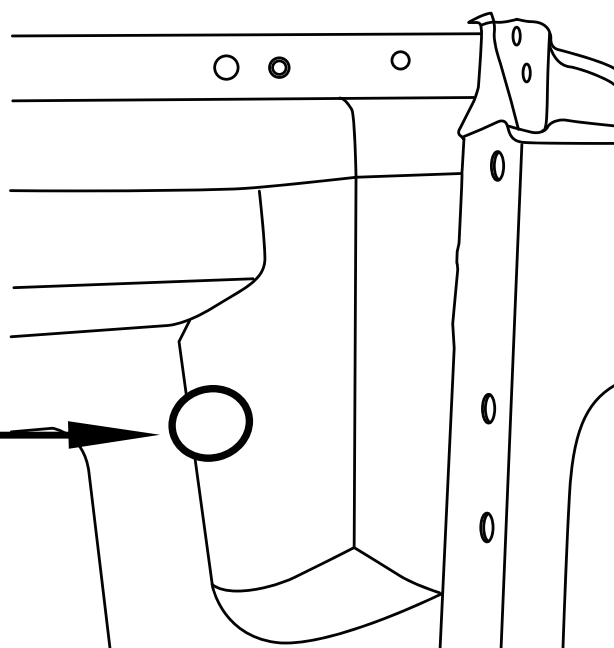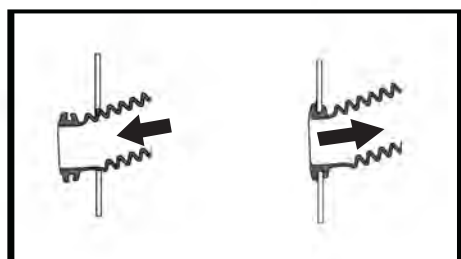


Remove and retain tail lights.

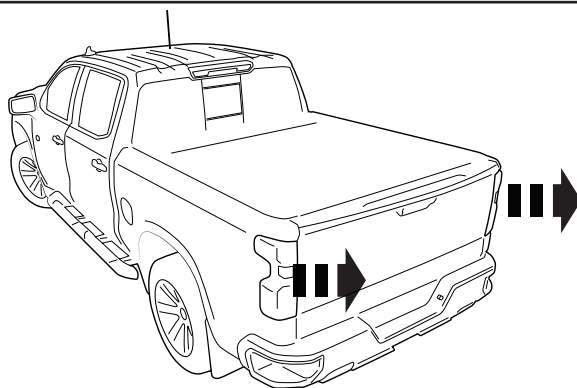

- a** In the specified orientation insert the rear drainage pipe into the factory hole.
- b** Leaving 150mm hanging of the pipe hanging out.
- c** Check the tail light cavity to ensure there are no obstructions to the drainage pipe. Repeat to the other side.
Re-fit the tail lights.

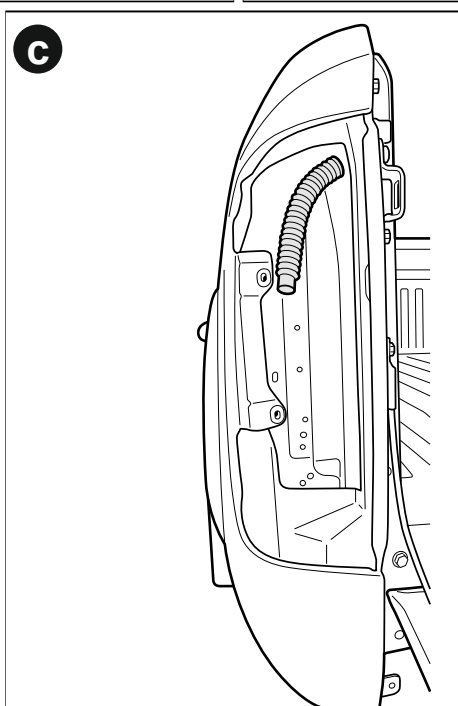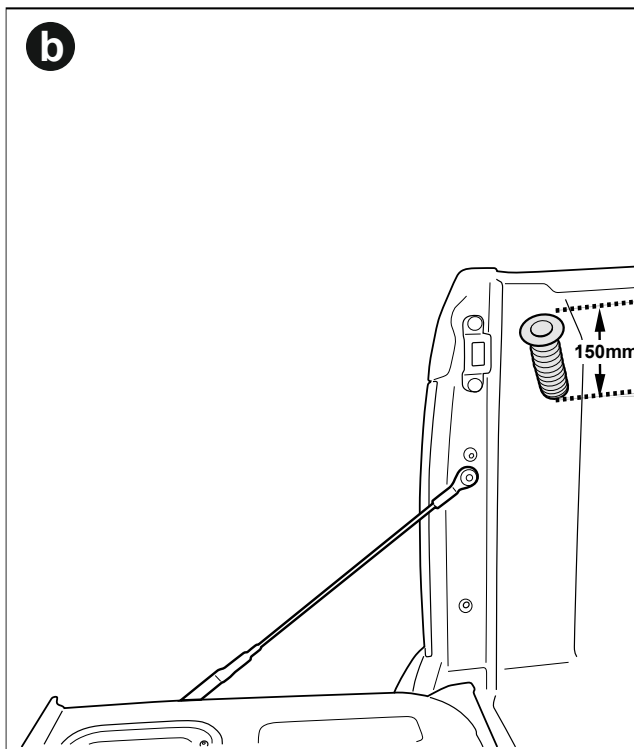
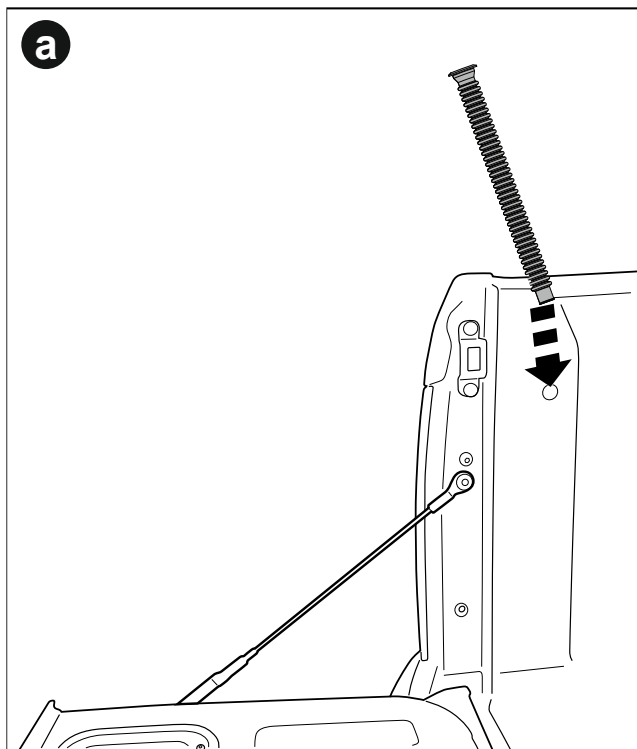


Disconnect fuse patch from battery loom S2.75.

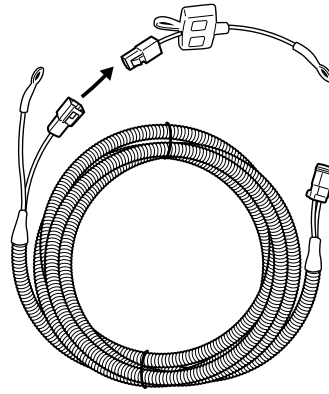


Wiring Harness steps

- 1** Feed Battery Loom S2.75 through the cavity

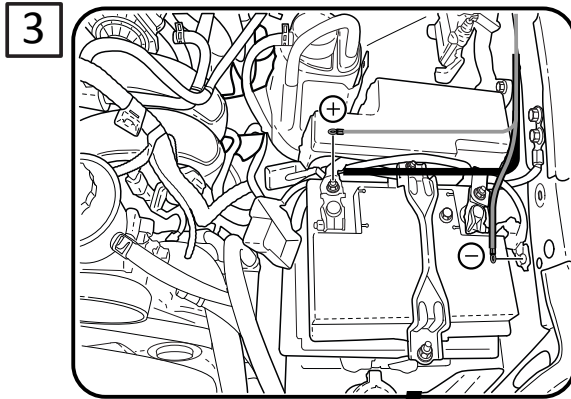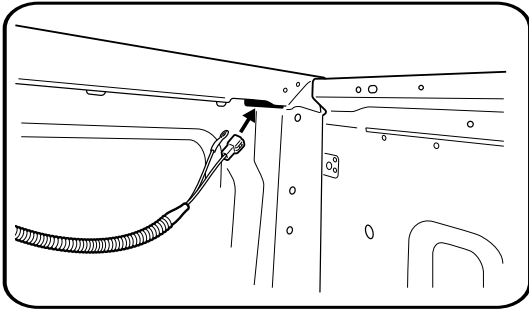


2

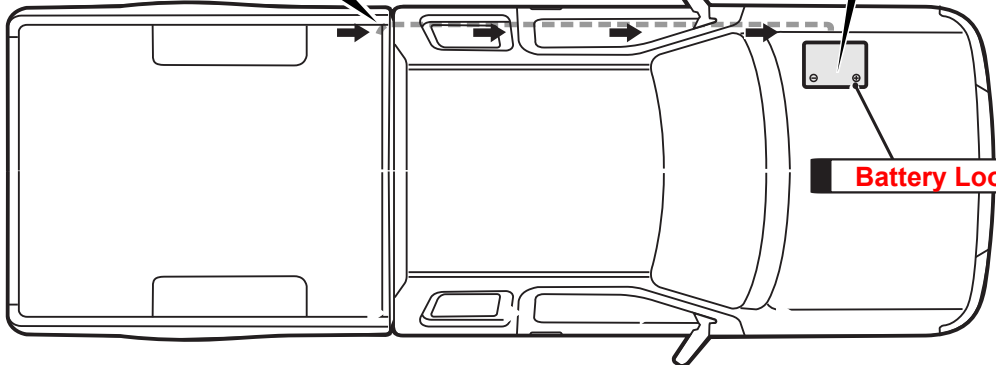


Run the wiring from the front corner cavity (leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.


Feed CL-Short-Loom through the cavity.

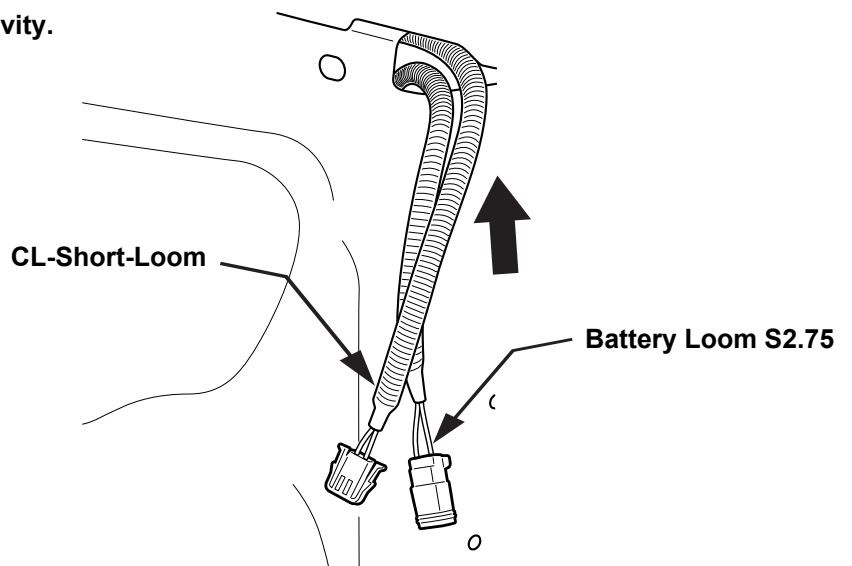


Locate connectors behind rear LHS wheel.

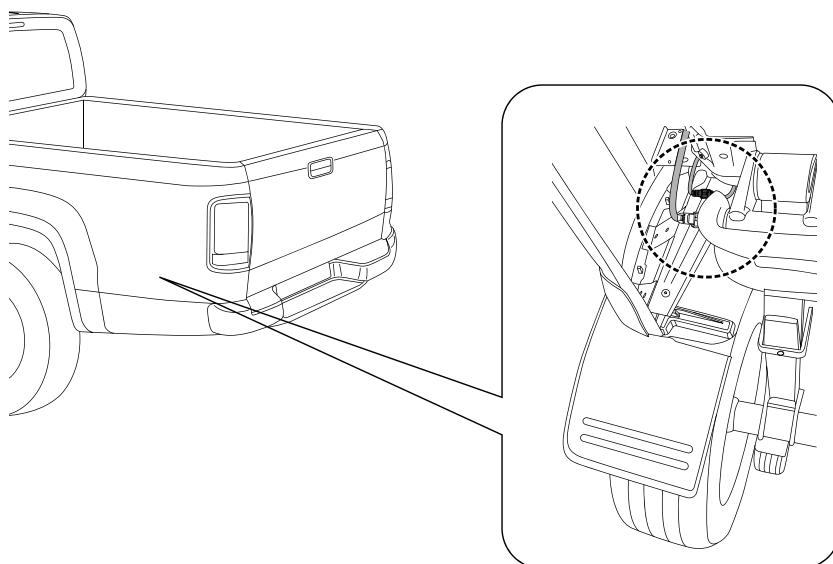



Disconnect the existing vehicle harness connectors under the vehicle as shown.

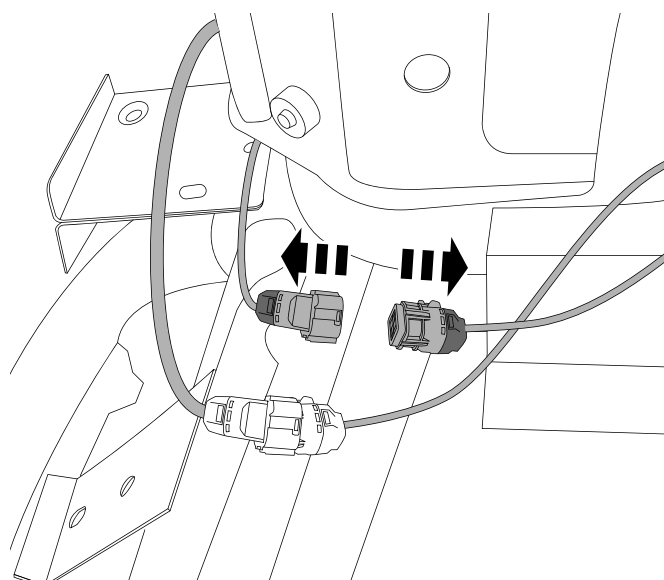


Connect the vehicle harness connectors to the A-patch supplied. Then connect the A-patch to the CL short loom.

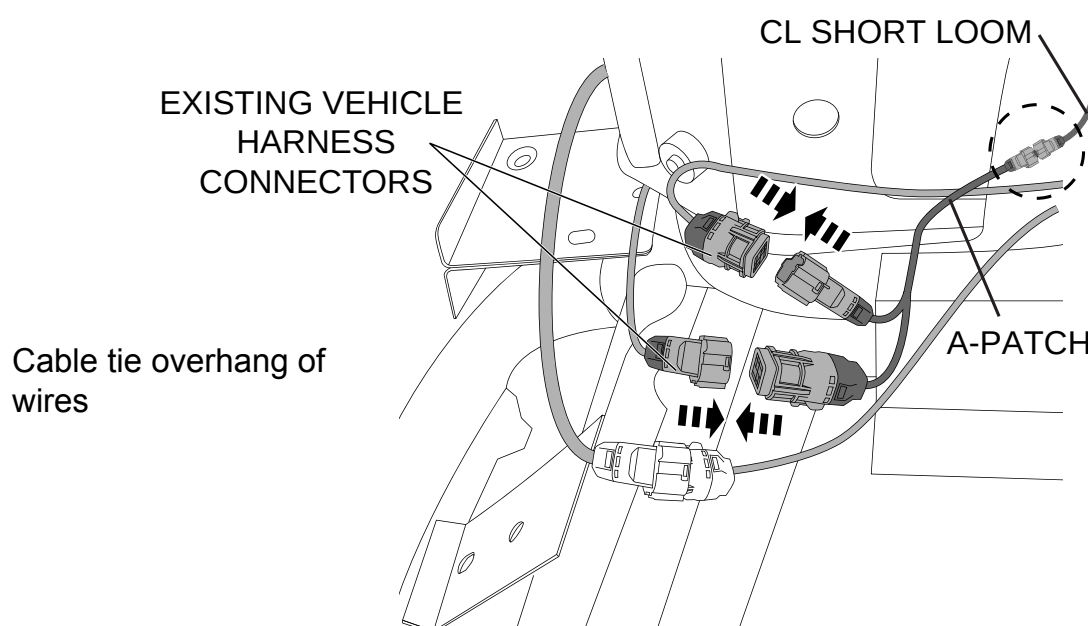

keep the cannister in the foam blocks from the packaging for assembly.

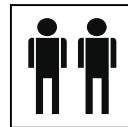
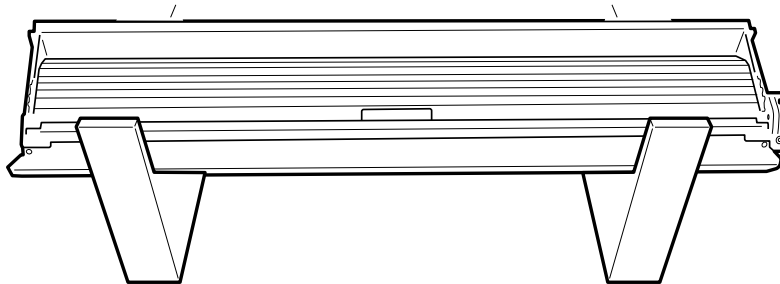


With assistance turn the canister on its back on the foam blocks.


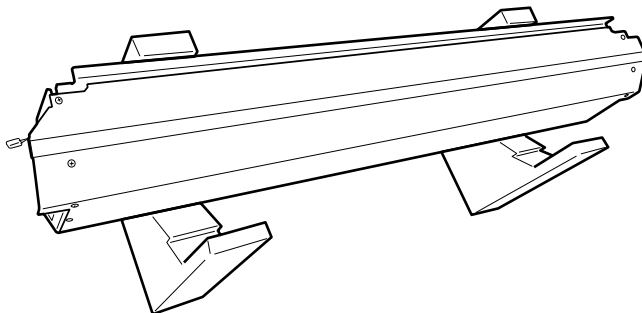


Disengage motor from the axle by unfastening the 3 Screws as indicated. Retain all parts.

Remove and retain the 3 screw from the canister as indicated.

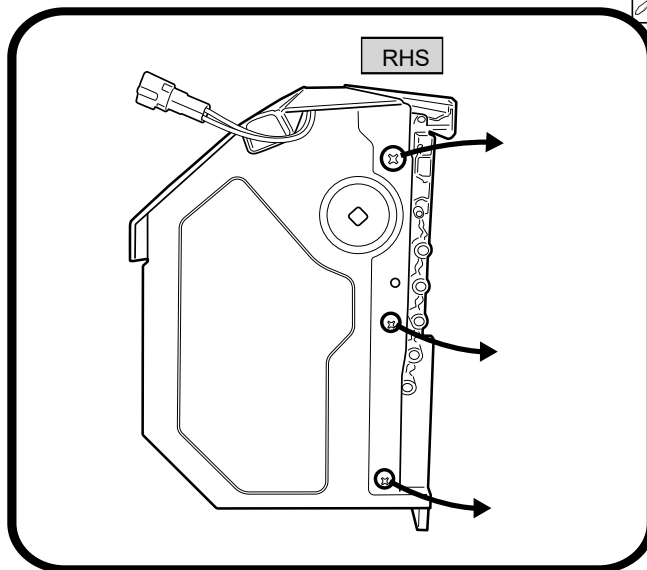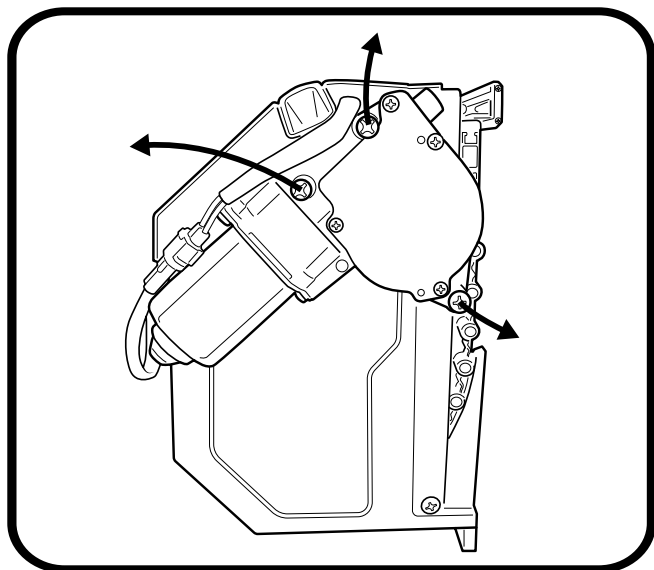


Now on the other side, remove and retain the 4 screws from the canister as indicated.

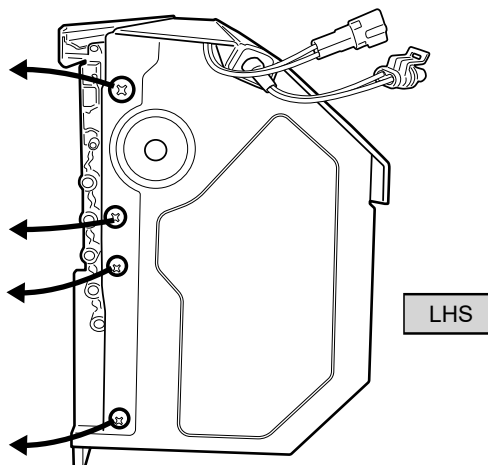
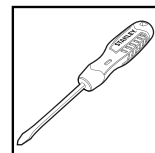




Important Note: Ensure that the Z seal within the track is positioned over the curtain and not folded inward. **WARRANTY** voided if assembled incorrectly.


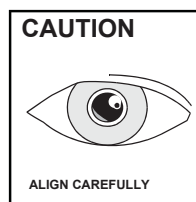


VISUAL TIP


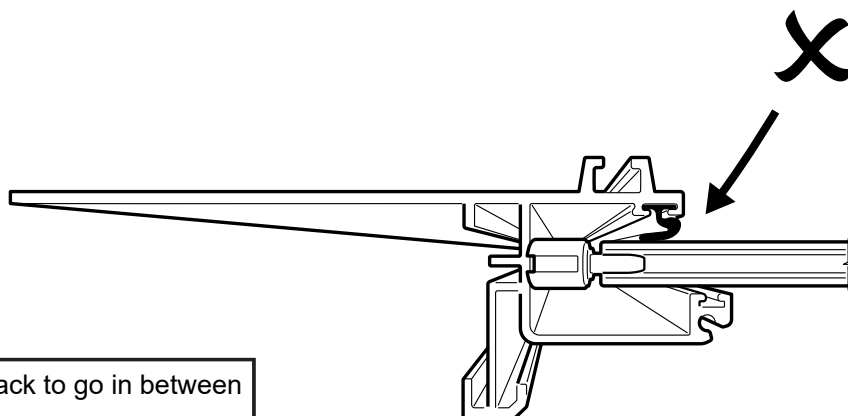
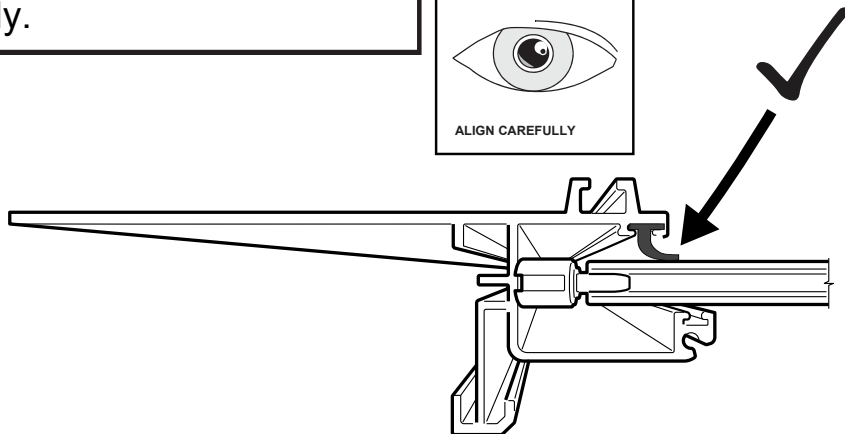


Align side rail to side of canister, guide the track to go in between the curtain end rubber stop.


NOTE: LHS side rail to be assembled first.

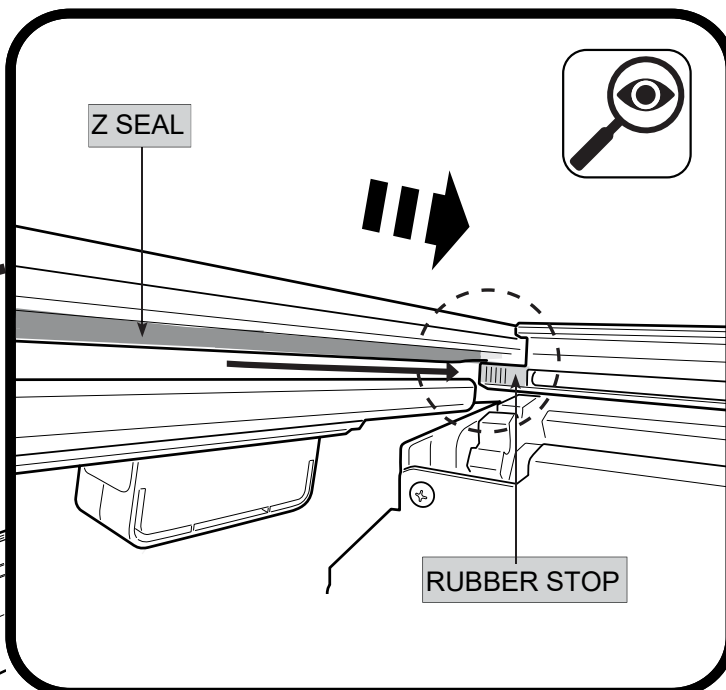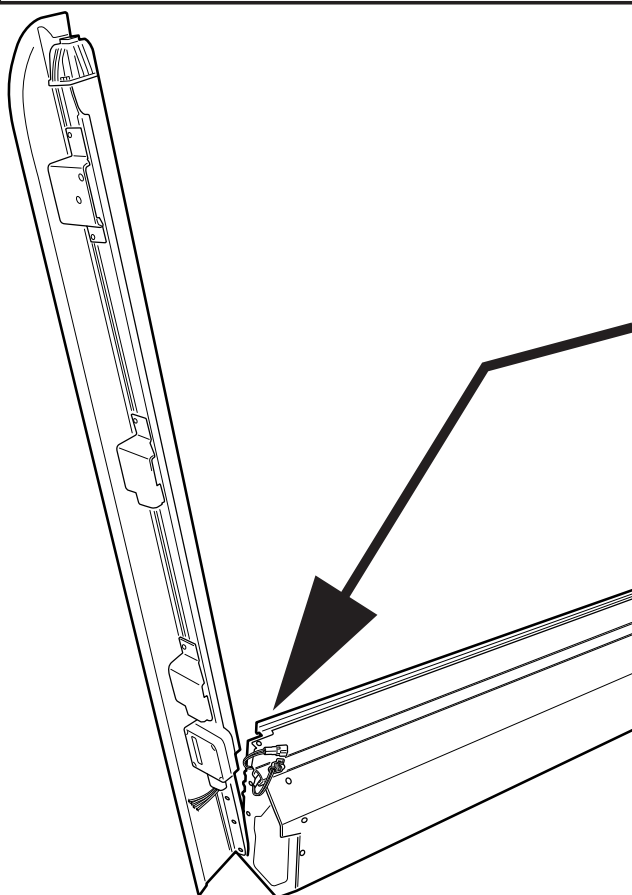


1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
2. Side rail edge must compress and meet with the canister profile as indicated below.
3. Fasten all screws tight.

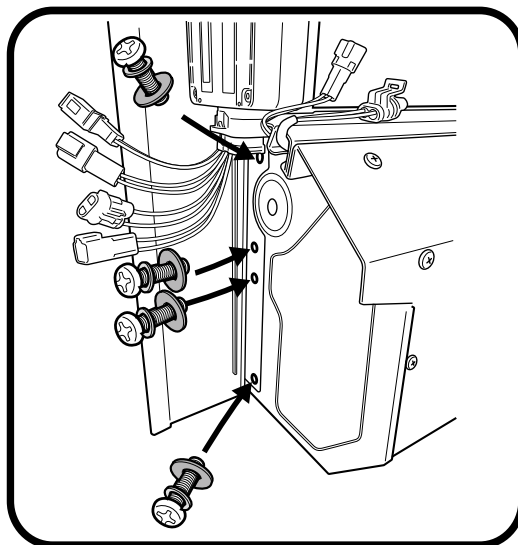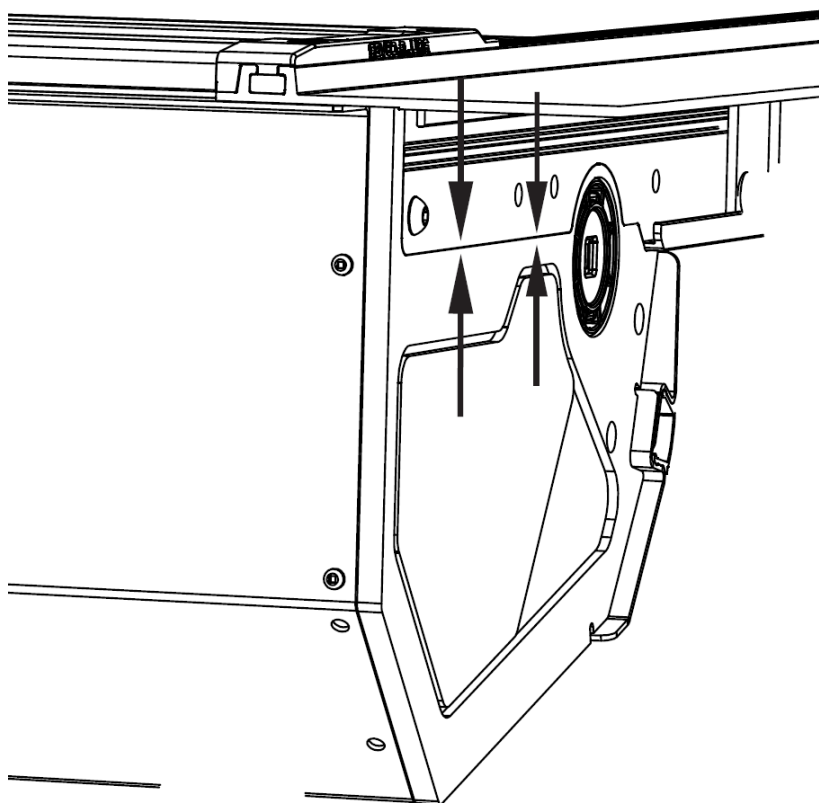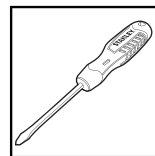

Connect motor connector to receiver



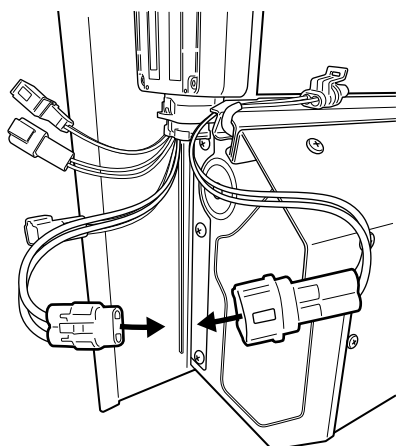


Connect LED Loom to receiver

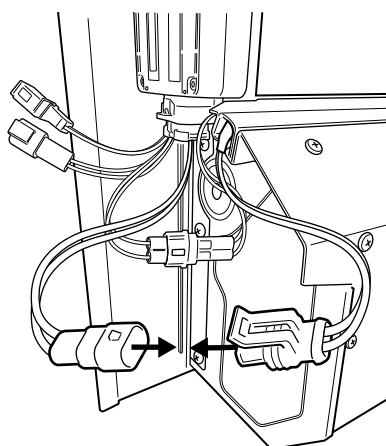





Important Note: Ensure that the Z seal within the track is positioned over the curtain and not folded inward. **WARRANTY** voided if assembled incorrectly.

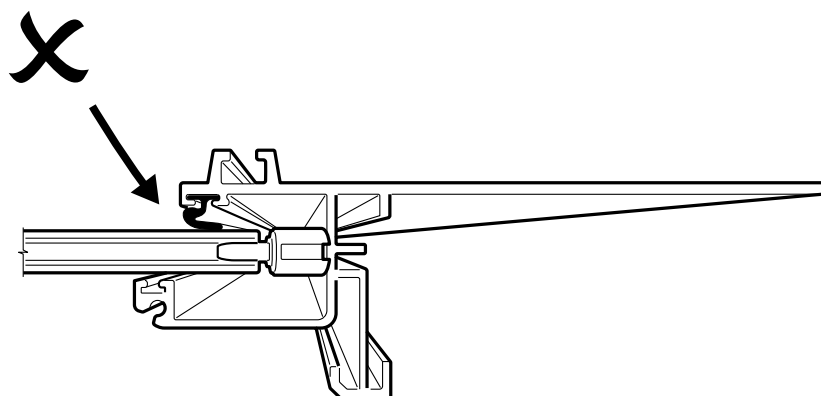
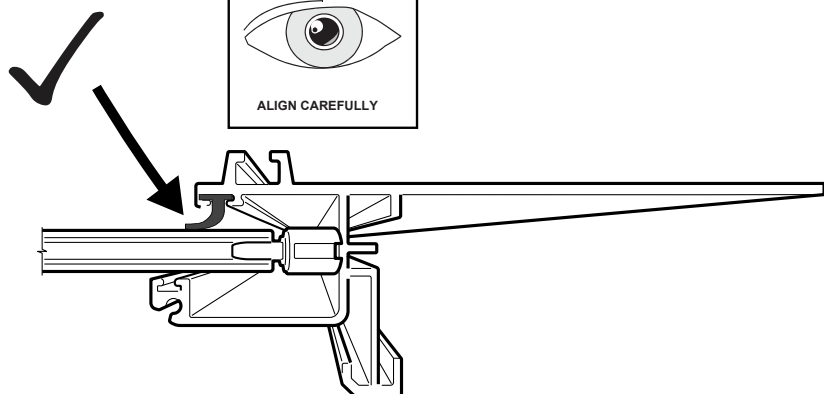
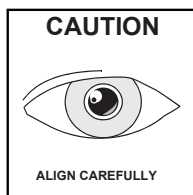


Align side rail to side of canister, guide the track to go in between the curtain end rubber stop.

NOTE: LHS side rail to be assembled first.

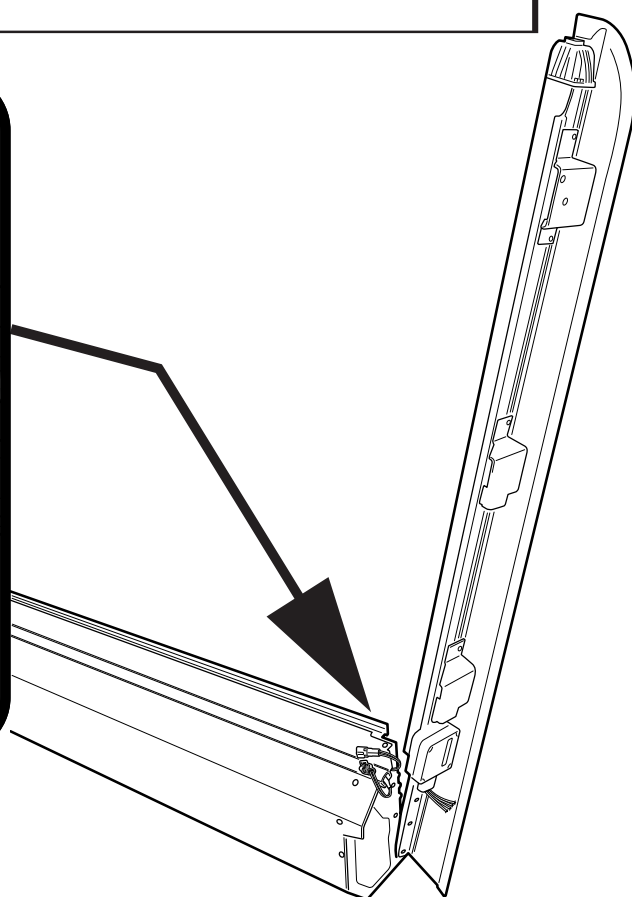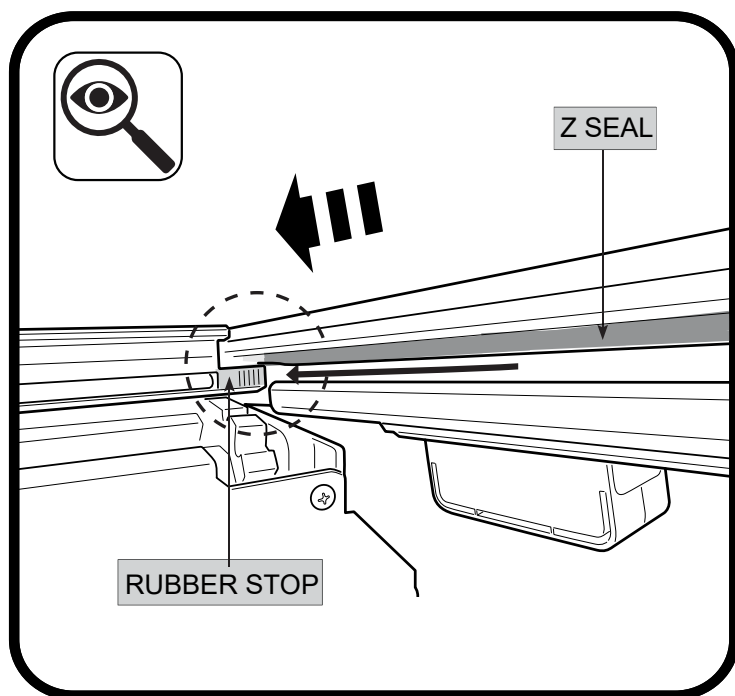


1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
2. Side rail edge must compress and meet with the canister profile as indicated below.
3. Fasten all screws tight.

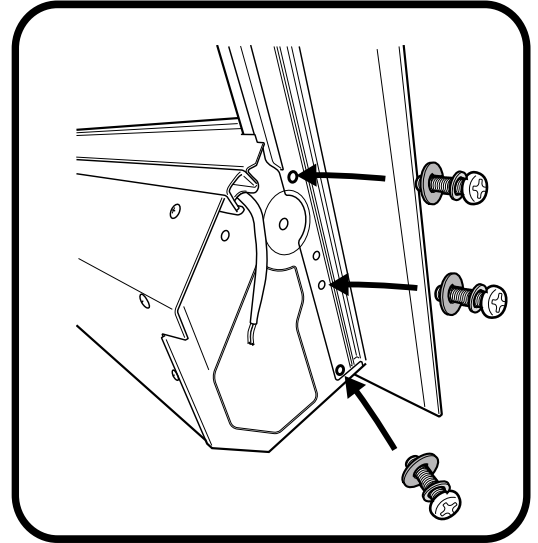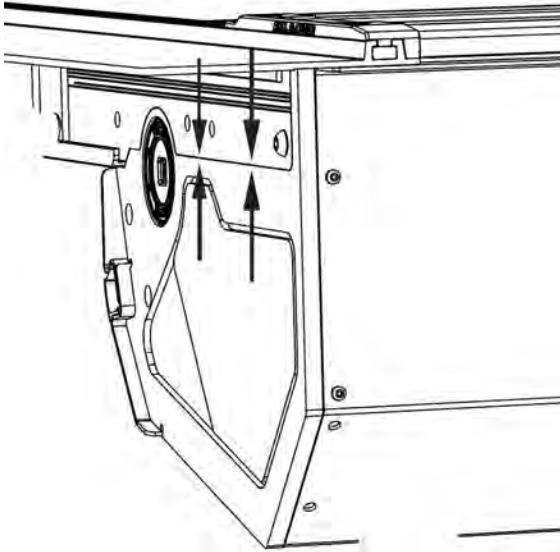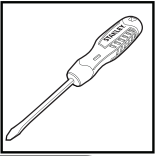



Feed M6 bolt through spring washer, motor and rubber bush.

NOTE: Rubber bush orientation has to be as per image. (side with text on rubber, to face the motor).

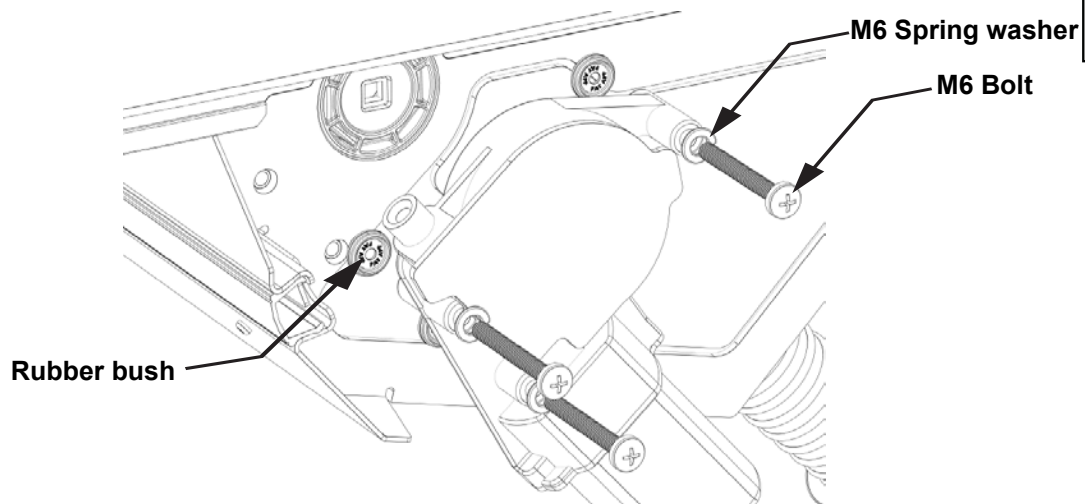



Align & insert motor shaft to axle.

NOTE: Pull / push curtain for axle to rotate.

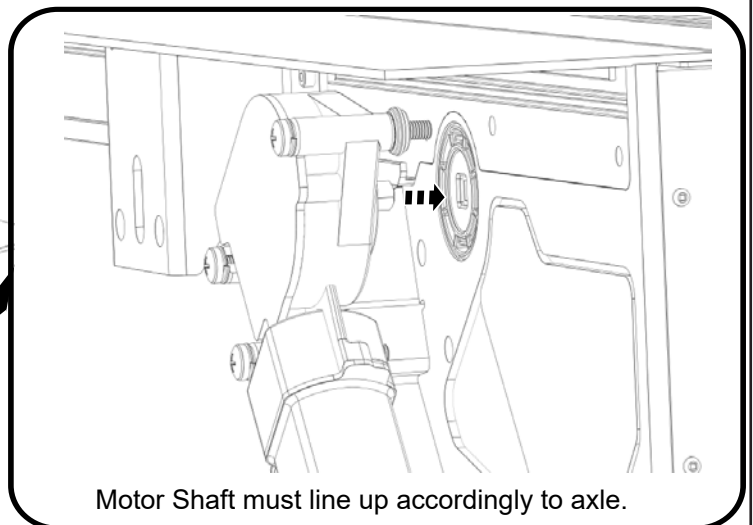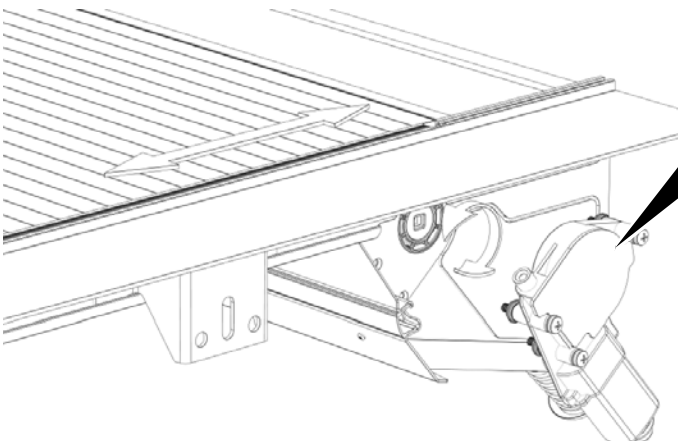

Motor Shaft must line up accordingly to axle.





Fasten all 3 screws to 2nm torque. Over tensioning will cause operating issue's.

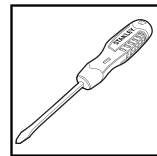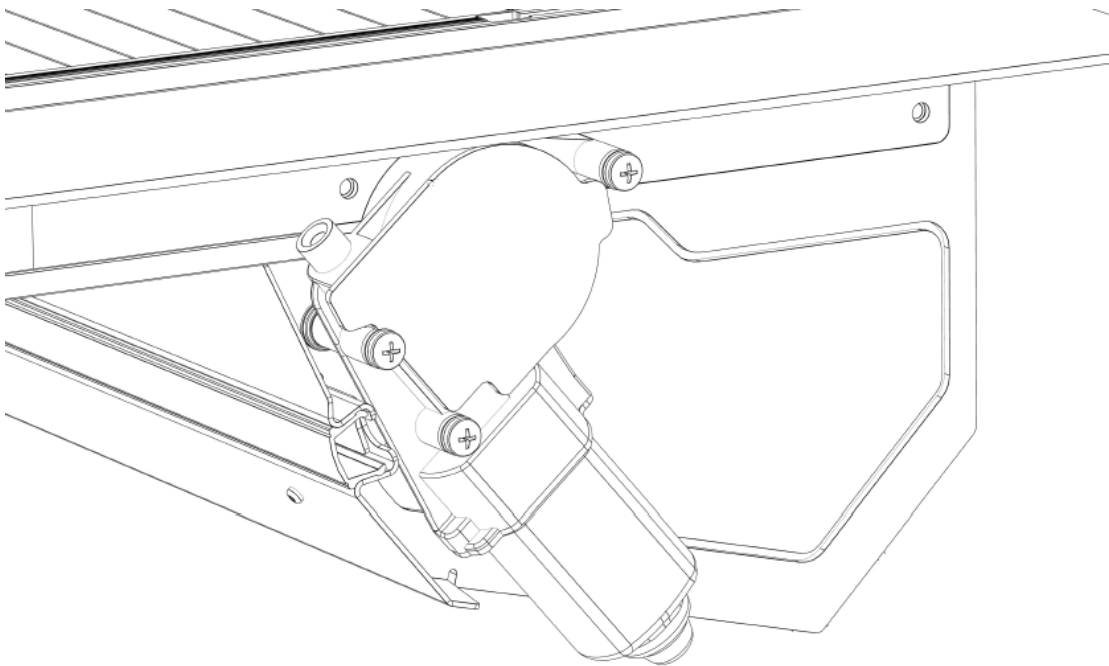


Motor is to sit level.

Any obstructions between motor and canister may cause operating issues.


Apply 15mm foam tape to side rail as indicated. NOTE: Join foam firmly to the per-fitted foam of the canister. Carefully trim excess off & discard as indicated. Repeat on the other side.

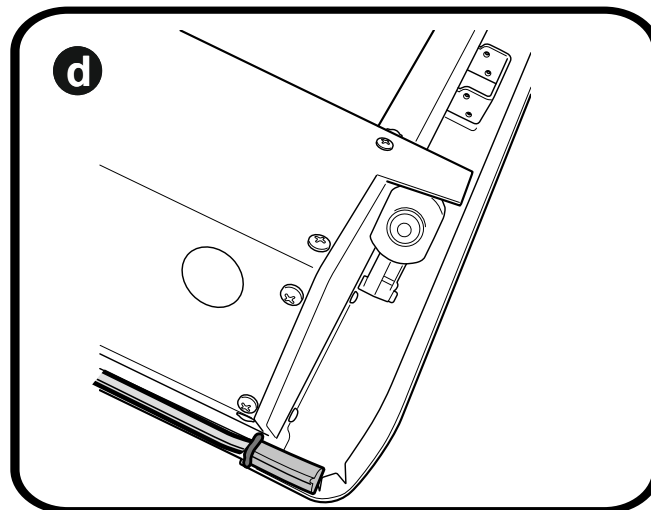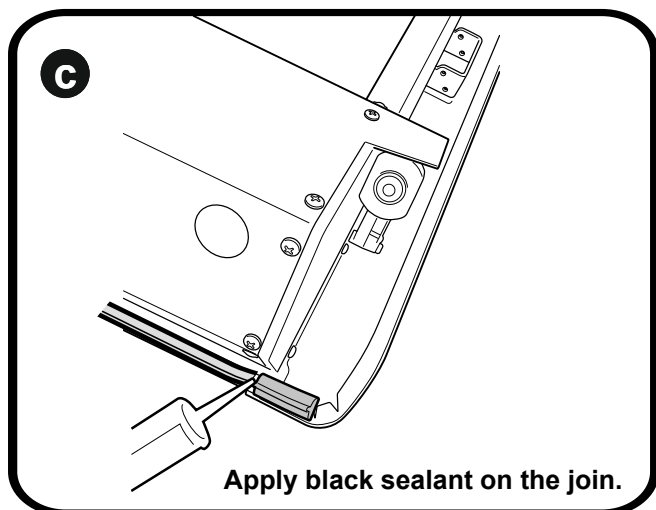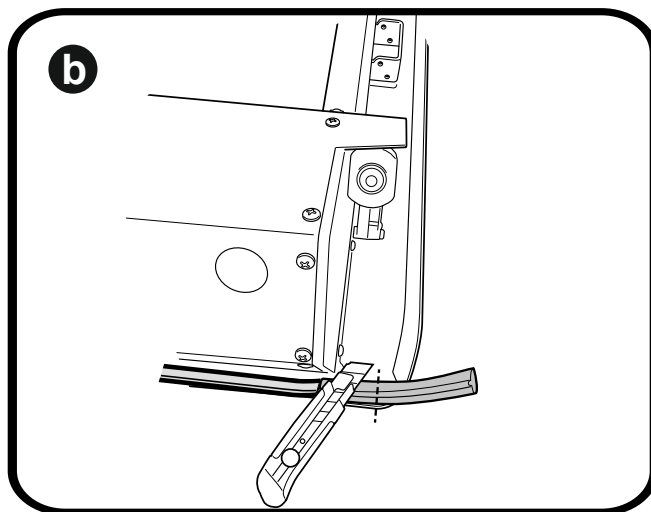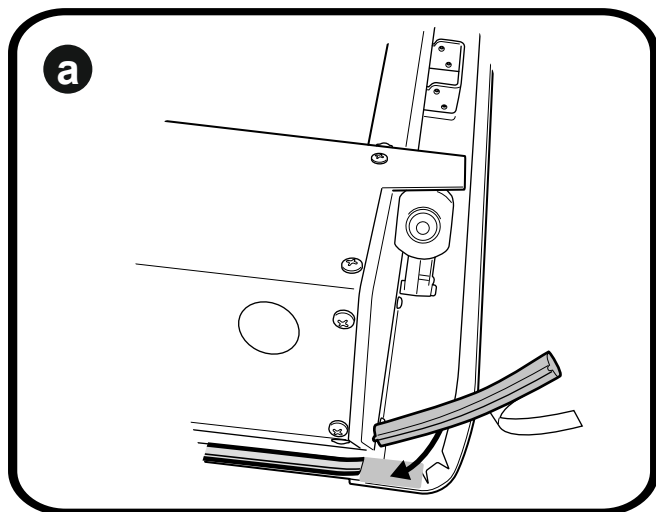


Carefully bring down the assembled unit.

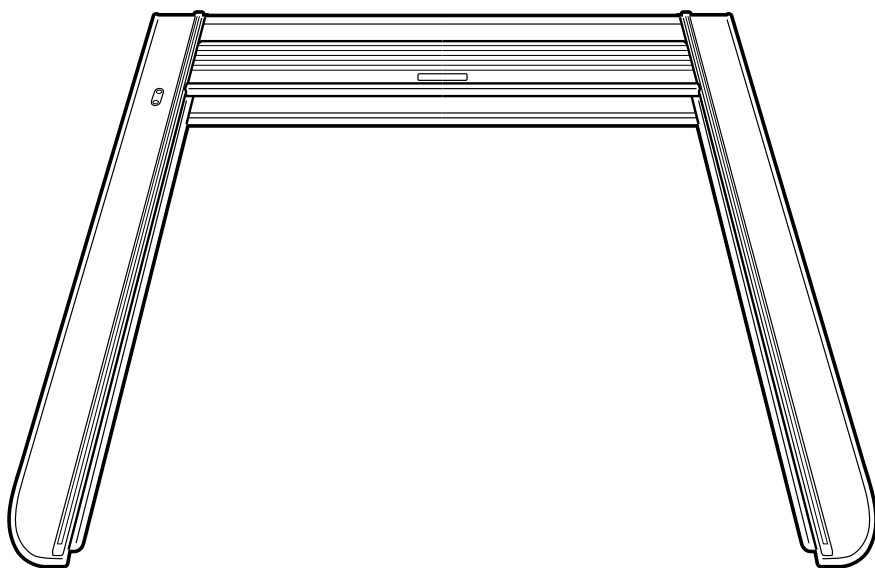


Insert side end caps to the top cover.

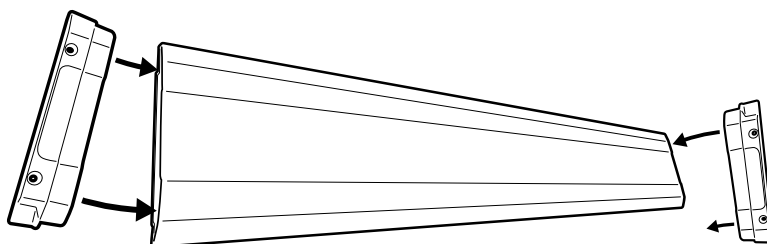



Place & Align top cover over the canister and side rails.

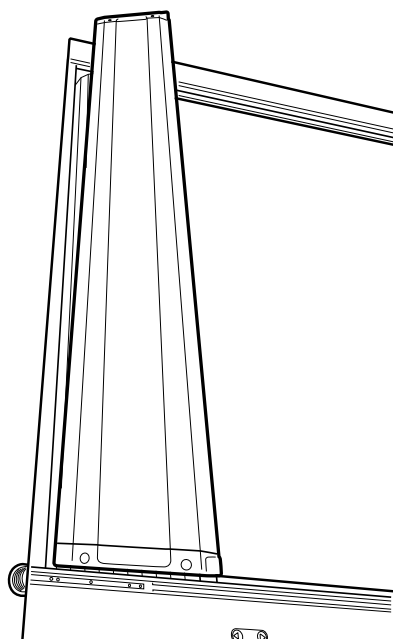

Using countersunk screws provided, line up end cap holes to the threads on the side rail. Fasten to 3nm torque. Repeat to the other side.

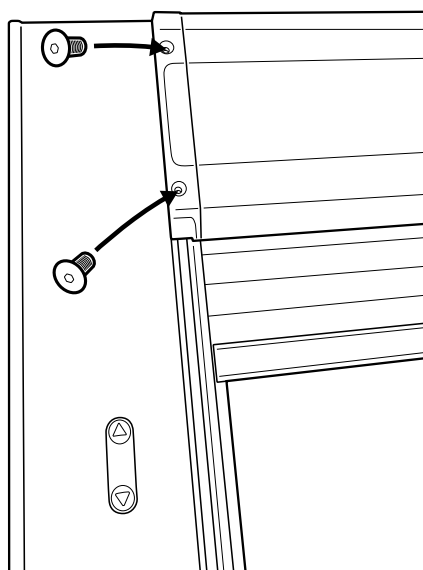


Place the Roll-R-Cover unit on to Ute bed.

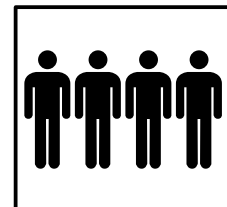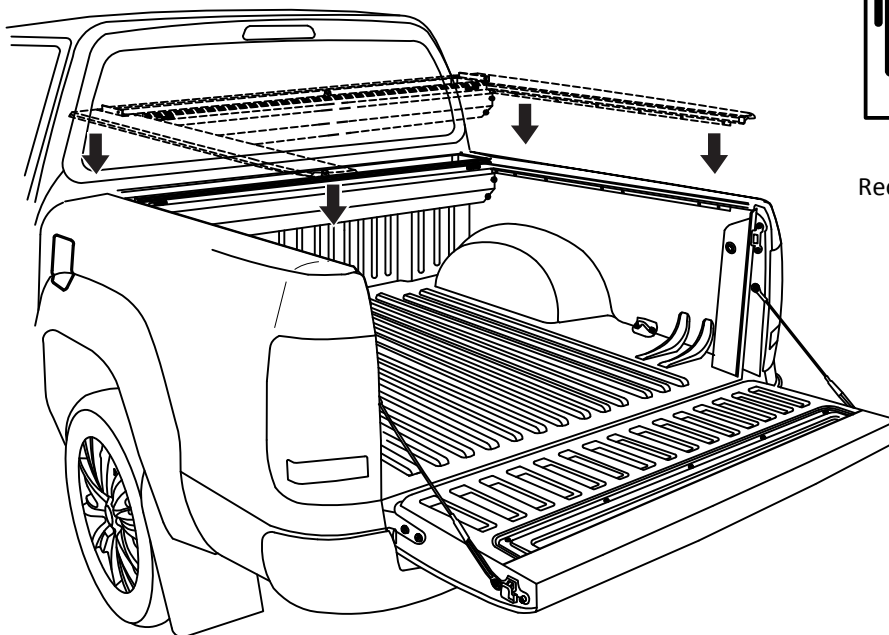


4 People
Recommended for lift

With care, pull out any side rubber
that has folded under the side rail.

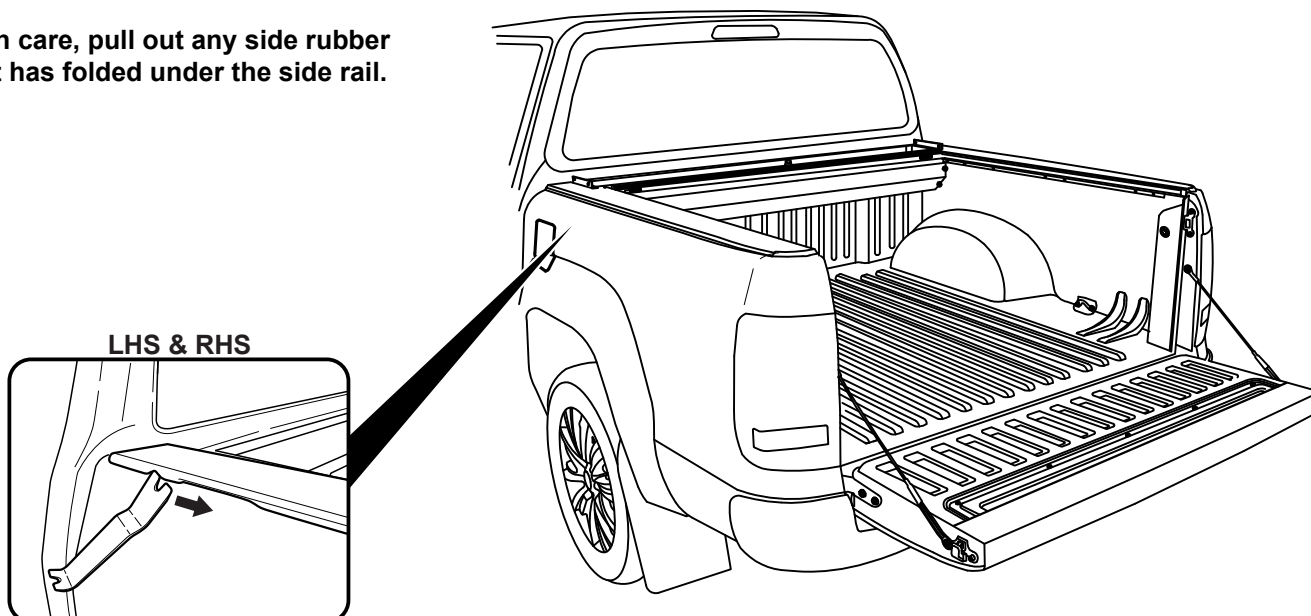


With the tailgate up (Closed position),
Pull left & right hand side rails
towards the tailgate, stopping short by
5mm between tailgate and side-rail
end-cap.

5mm

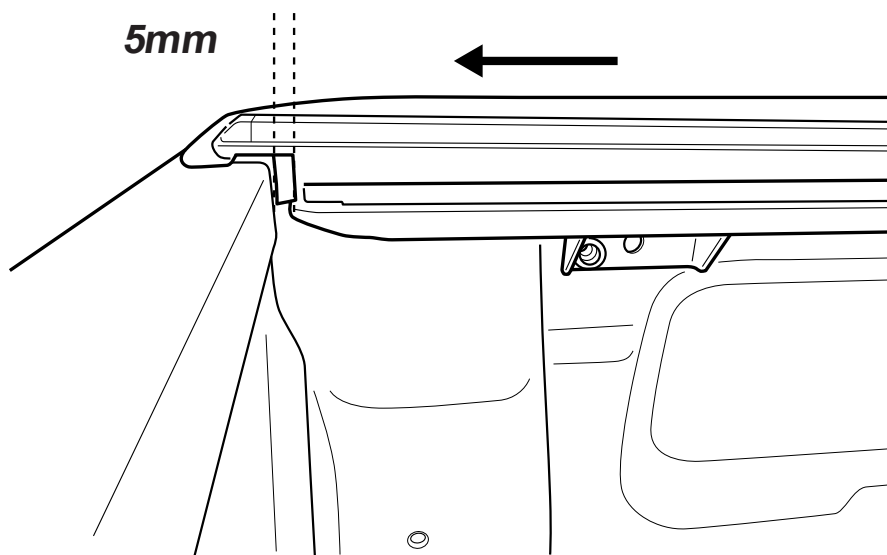


Foam compressed to
5mm when tailgate is
closed.


Gap between tailgate and side-rail end cap to be 5mm.

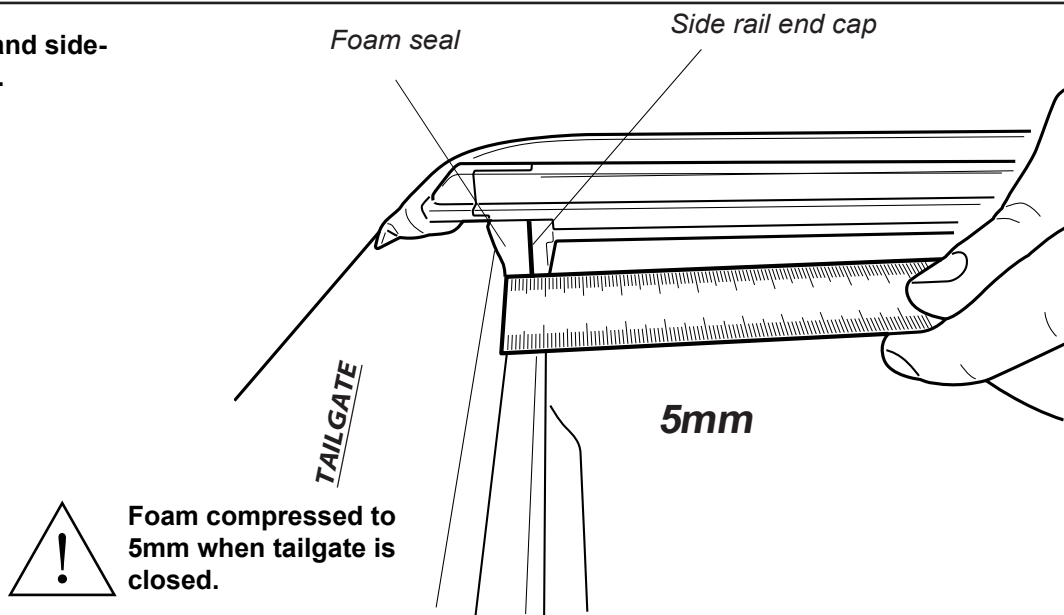


Position clamp behind the inner top lip of the bed rail and the **center elongated** hole of the side rail mounting brackets. Repeat to all 6 positions.

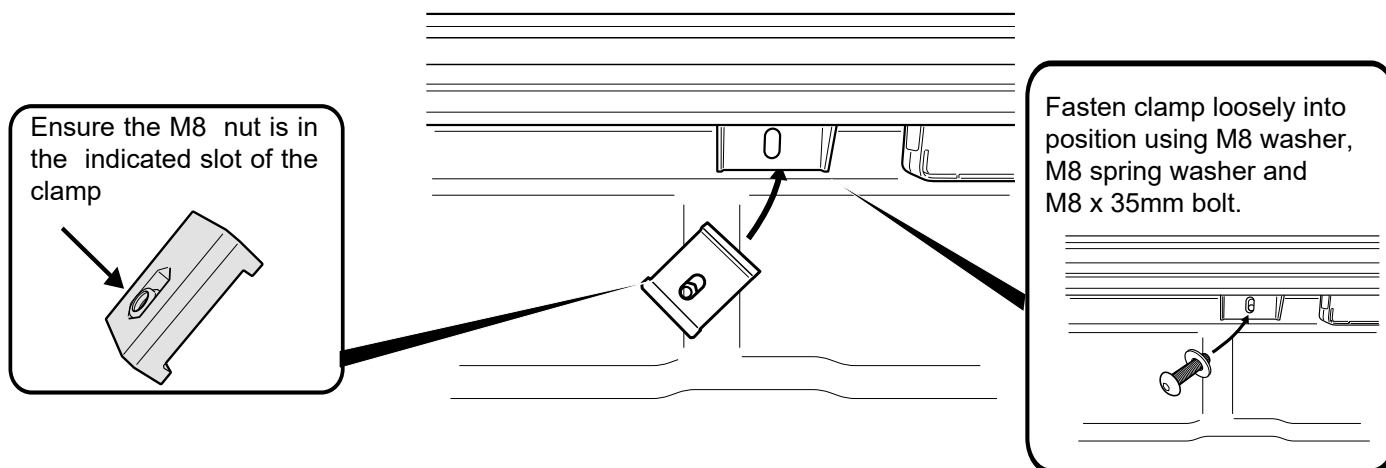

1. Apply downward pressure on side rails.
2. Lift **clamp** all the way up or as far up as possible then fasten clamp to 14Nm torque in the order indicated below.

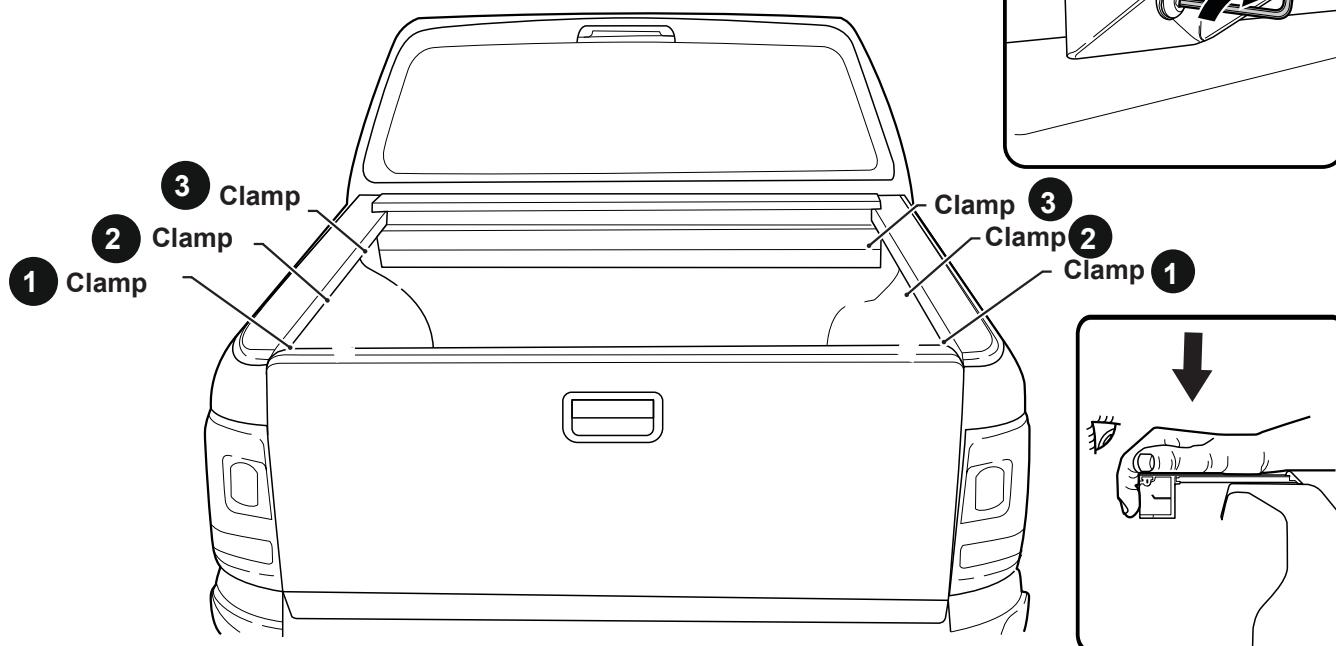

Apply flat plate behind adjusting bolt hole to the ute bed panel or to the liner if the Ute is equipped with a tub liner.

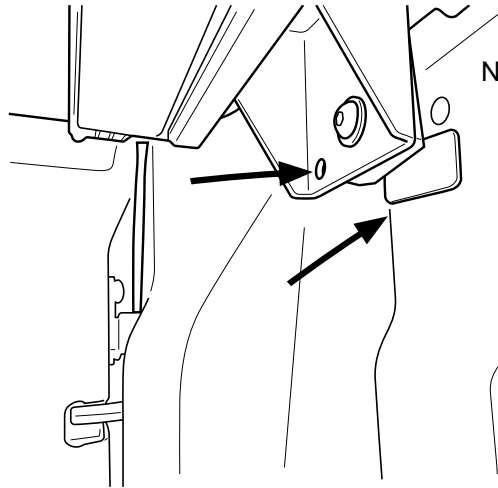


Note: Rear Clamp bracket.







Note: Clean surface before applying flat plate.


Feed M8 nut into M8x70mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

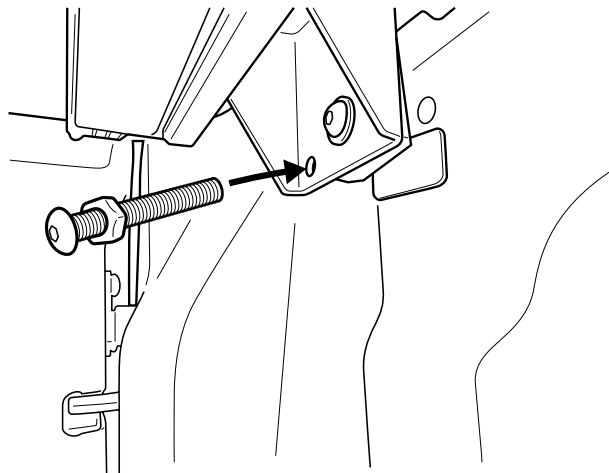



Side rail rubber to sit 1mm below from the top of the tailgate in the closed position.

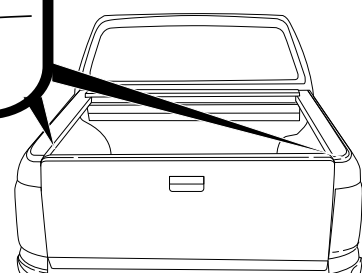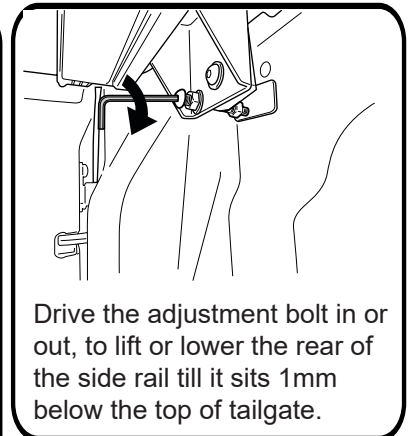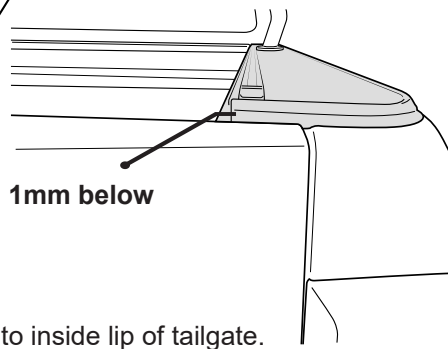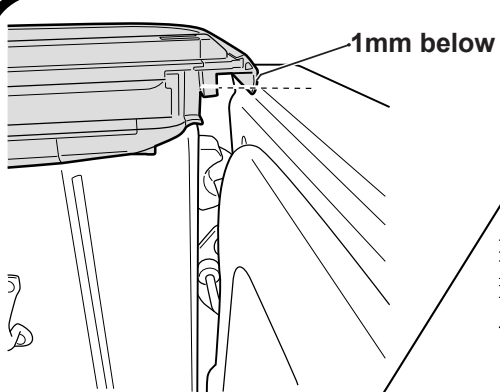

Fasten the M8 nut against clamp bracket.

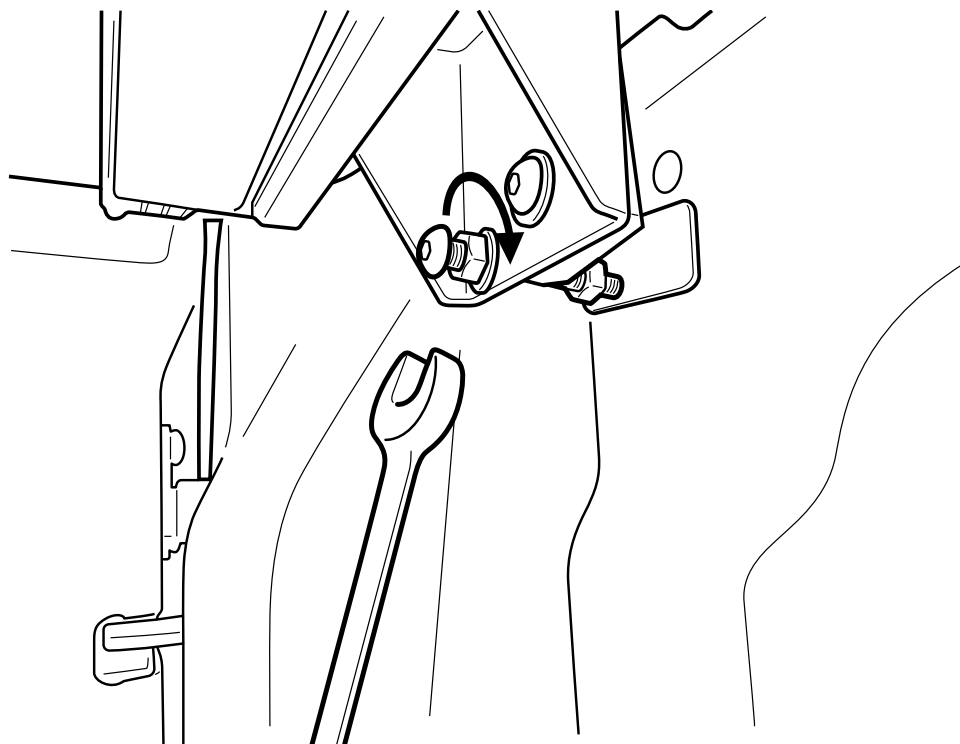

1. Clean area with non oil based cleaner, ie alcohol wipe.
2. Apply clear protective tape to left and right top corners of the tailgate as indicated.

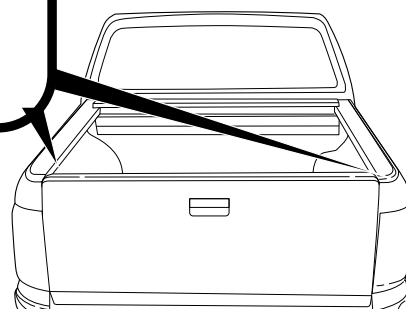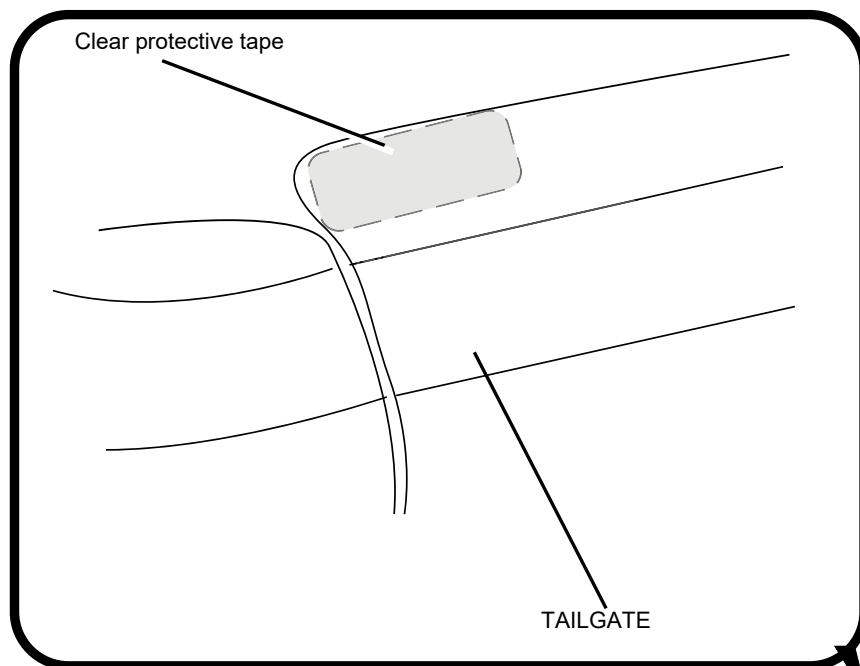




Install front drain pipes through pre-drilled holes of the canister. (RHS/LHS)







Note: With care push tube in. Gently pull the tube back so it seals correctly against the front panel of the tub.



VISUAL TIP

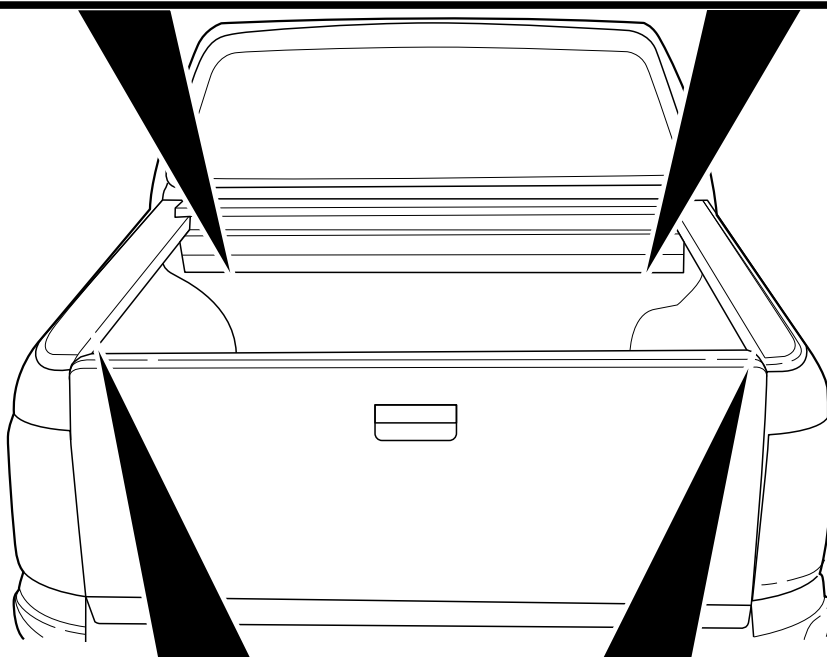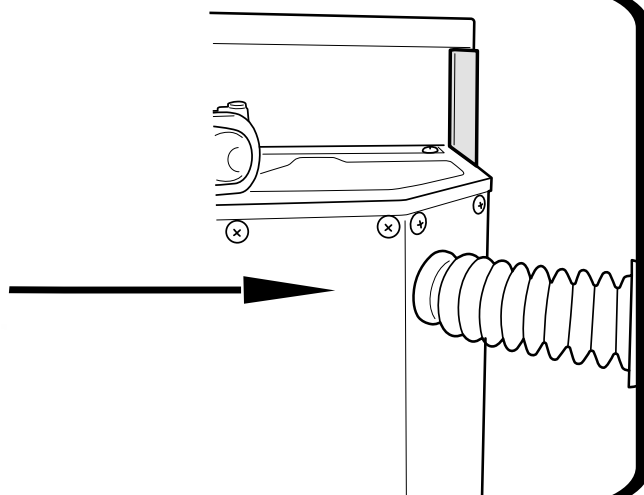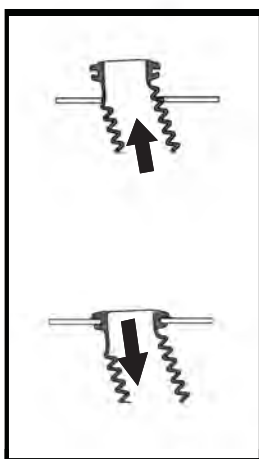

Note: With care push rear pipe in. Gently pull the pipe back so it seals correctly within the side rail channel.

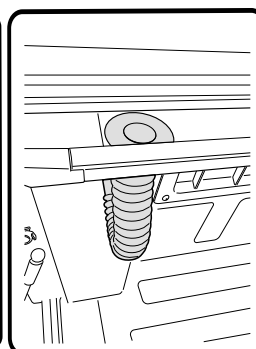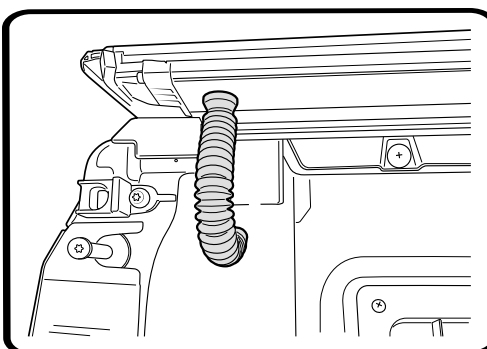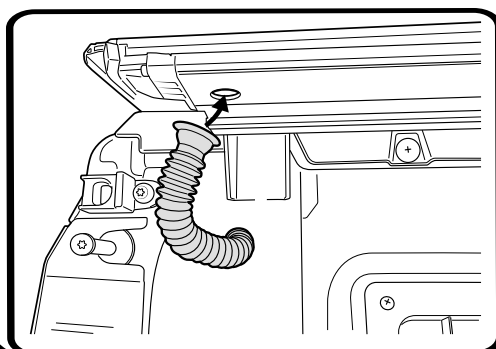
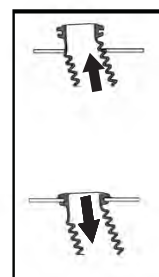


Install rear drain pipes through pre-drilled holes of the siderails. (RHS/LHS)

- a. Connect Battery loom S2.75 to Receiver loom.
- b. **Carefully** connect CI-Loom-short to Receiver loom.



Align connectors carefully to avoid pushing pins out.

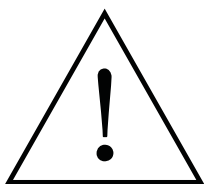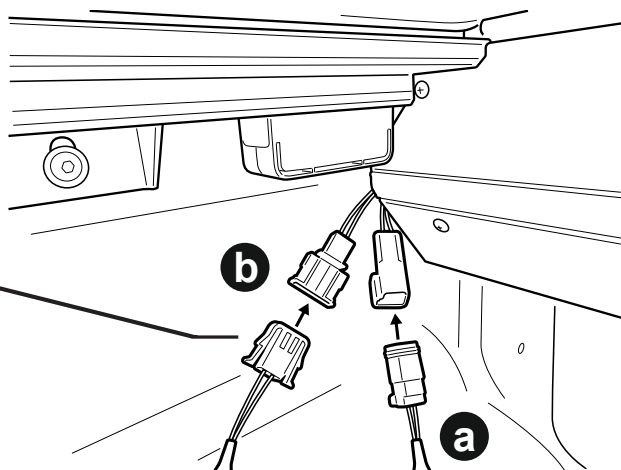

NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.



Amarok variation which is based on the base model:

Rolling open: Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open.

Rolling open: Pressing lock followed by unlock followed by lock, on the factory key fob within 4 seconds, will activate the roll r cover to close.

Touch & let go to open, touch & let go again to pause.

Touch & let go to close, touch & let go again to pause.

