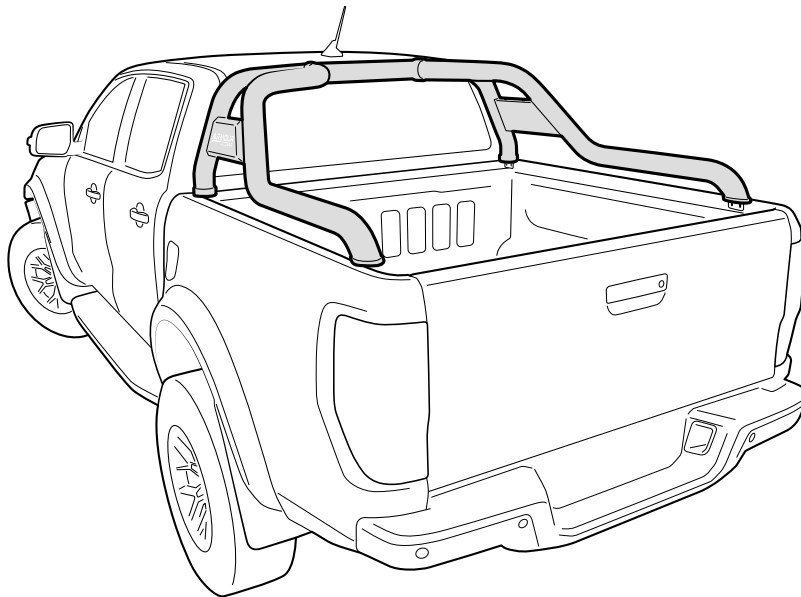


ARMOUR BAR FITTING INSTRUCTIONS TO SUIT BYD SHARK 6 WILL FIT ROLL R COVER ONLY.


Check contents of kit before commencing fitment and report any discrepancies




*Image example shown only

IMPORTANT	• Do not stand/sit or rest heavy objects on Armour bar. • Do not strap objects to the Armour bar.		
Care Instructions	• Read Instructions fully before commencing installation. • Clean Armour bar with a mild detergent and water solution • Do not use abrasive cleaners or solvents • Refer to manufactures instructions applicable to power drill. • Protect Tub & tub floor against scratches during installation process.		
Maintenance	Check all fasteners regularly to make sure they are torqued up.		
Tools Required	• Pen / Marker • Centre Punch • Drill & Drill bits	• Masking Tape • Spanner & Socket • Tape measure	• Soapy water solution • Allen Key set (Metric) • Test light


PARTS CHECK SHEET




PARTS IN MAIN CARTON



Armour Bar




Fitting Kit
Qty - 1



PARTS IN FITTING KIT

20048811301



FRONT TUBE
ASSEMBLY

Qty - 1


20040938201



SIDE TUBE(L)

Qty - 1


20040943201



SIDE TUBE(R)

Qty - 1


20040942601



SIDE PLATE
ASSEMBLY(L)

Qty - 1


20042173401



BACK COVER FOR
SIDE PLATE(L)

Qty - 1


20040944101



SIDE PLATE
ASSEMBLY(R)

Qty - 1

20042173501



BACK COVER
FOR SIDE
PLATE(R)

Qty - 1

20008912301



JOINT
RUBBERCOVER(L)

Qty - 1

20009589301



JOINT
RUBBERCOVER(R)

Qty - 1

20008160801



HOLE PLUG

Qty - 2


20007045301



FRONT RUBBER
FOOTING


Qty - 2

20042379701



REAR RUBBER
FOOTING

Qty - 2



LID NUTS AND BOLTS

3005581



M10 x 60 ALLEN
Head Bolt

Qty - 2

E3008107



M10
SPRING
WASHER

Qty - 2

E3000325



M10 FLAT
WASHER

Qty - 2

E3000233



M6 LARGE
WASHER

Qty - 14

E3008196



M6
SPRING
WASHER

Qty - 6


E3008066



M6 FLANGE
NUT

Qty - 8

E3008109



M6 HEX
BOLT

Qty - 8

E3005469



M6 x 20 ALLEN
Head Bolt


Qty - 6

E3008270



M8 x 40mm
COUNTERSUNK
ALLEN Head Bolt

Qty - 4



OTHER

3000062



S4 ALLEN KEY

Qty - 1

3000078




S6 ALLEN KEY

Qty - 1




Fitting
Instructions
Qty - 1


Thoroughly clean installation areas.

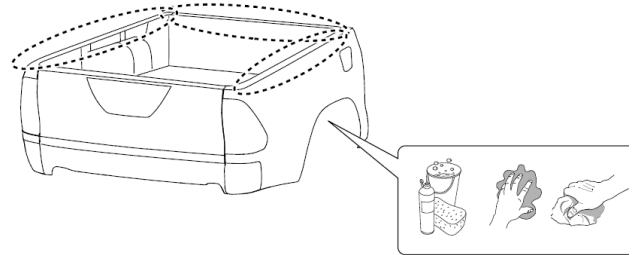


Place part number 20009589301 (JOINT RUBBERCOVER(R))
to 20048811301 (FRONT TUBE ASSEMBLY),
Repeat to the other side using part number 20008912301

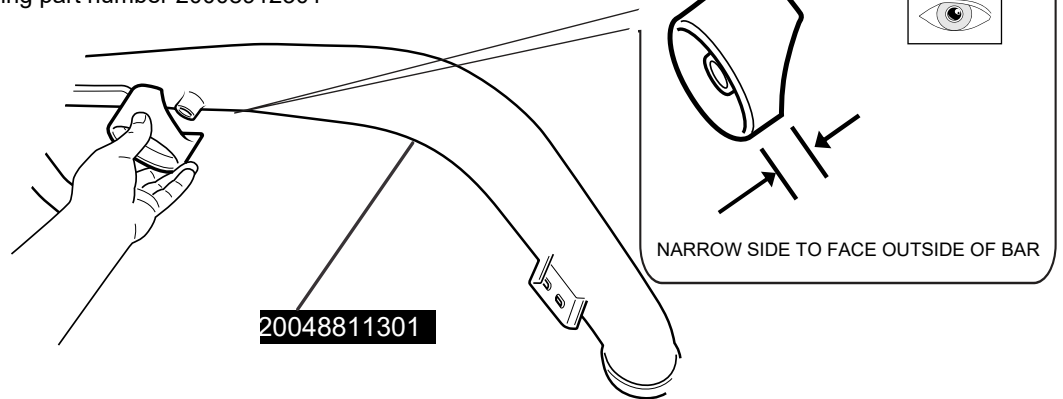


Feed into place part number 20040943201 (SIDE TUBE(R)) through
20009589301 and 20048811301.
Repeat to the other side using part number 20040938201 (SIDE TUBE(L))

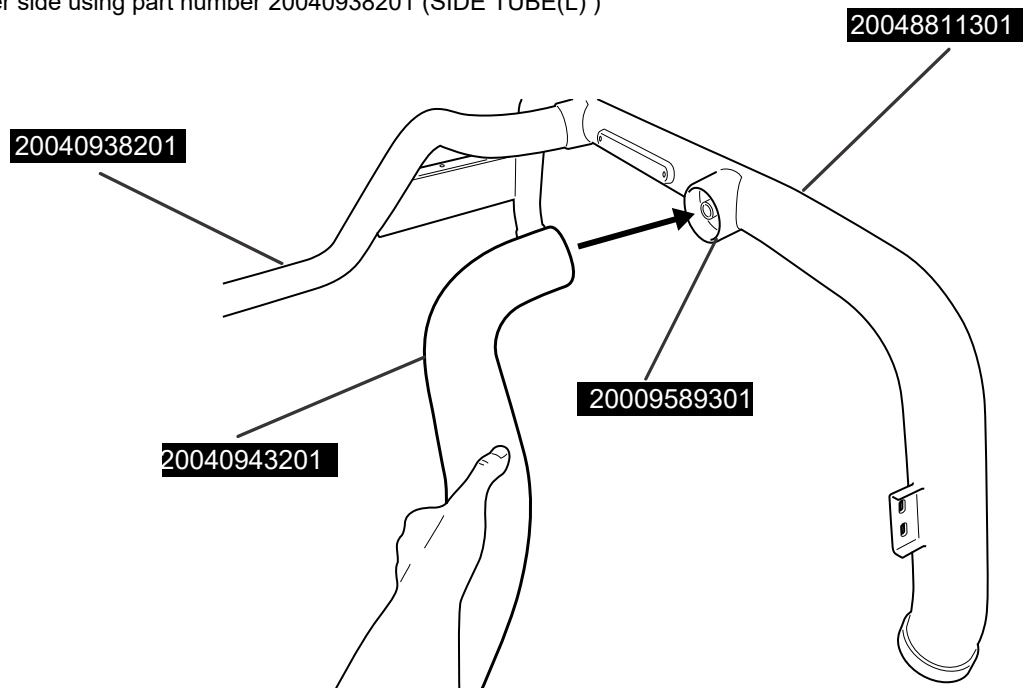


Feed part number 3005581 (M10 Allen head bolt) through E3008107 (M10 spring washer) , E3000325 (M10 washer), 20048811301 (Front tube assembly) and fasten to 20040943201 (SIDE TUBE(R)). Repeat to the other side.

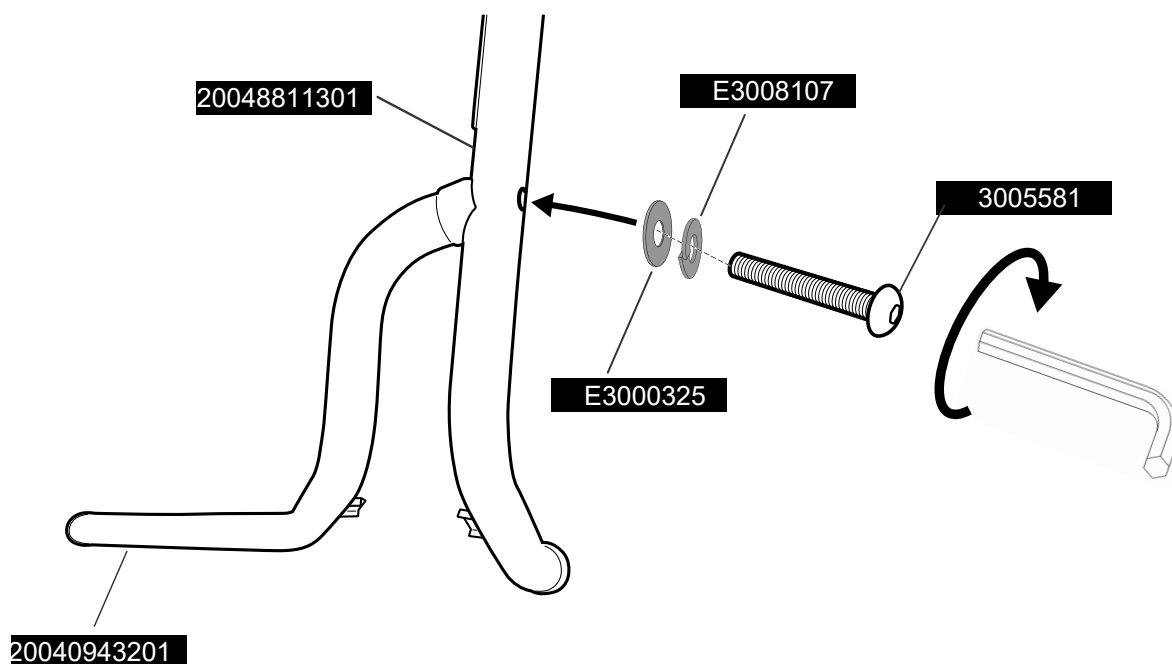

Align part number 20040944101 (side plate assembly (R)) as indicated.

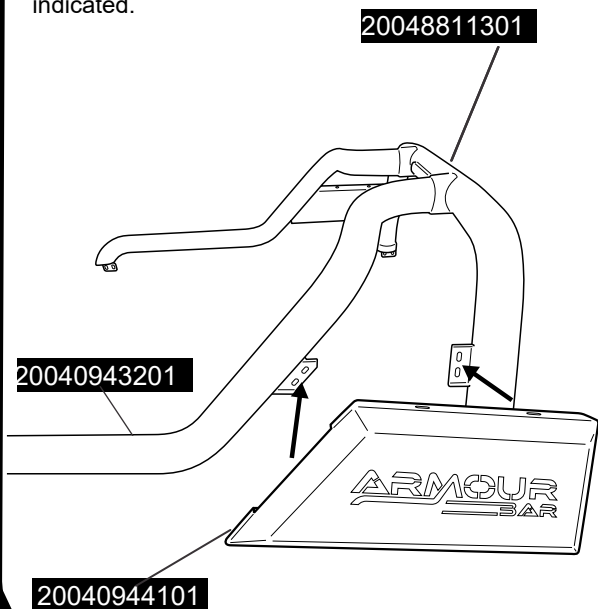


Fasten into position using, M6 Hex Flange bolt trough M6 large washer, the tube tabs, side plate tabs, & M6 Flange nut. Repeat to all 4 points.


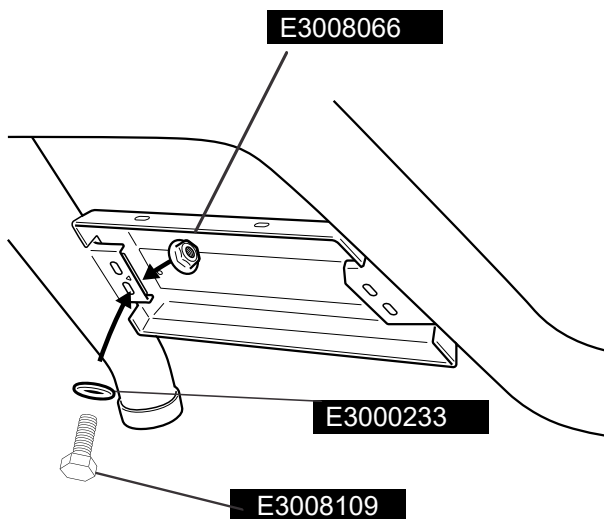


Repeat above steps to the other side using part number 20040942601 (side plate assembly (L))

Align part number 20042173501 (back cover for side plate (R)) as indicated.

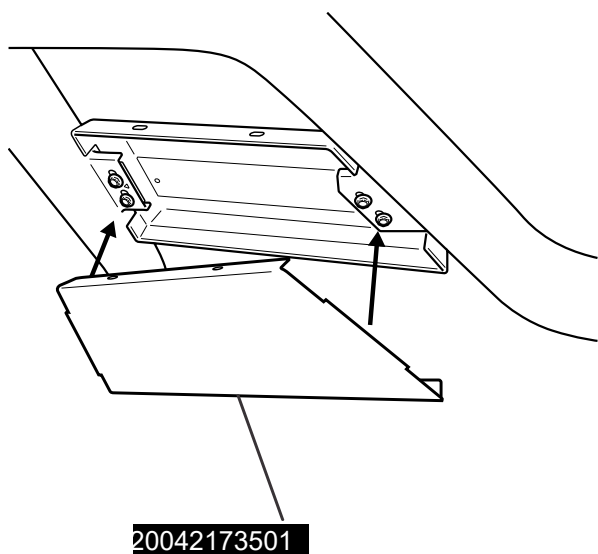


Fasten into position using M6x20 Allen head bolt through M6 spring washer and M6 large washer.

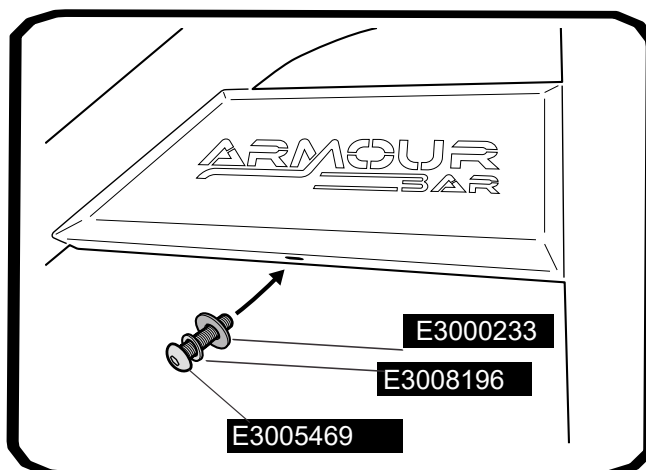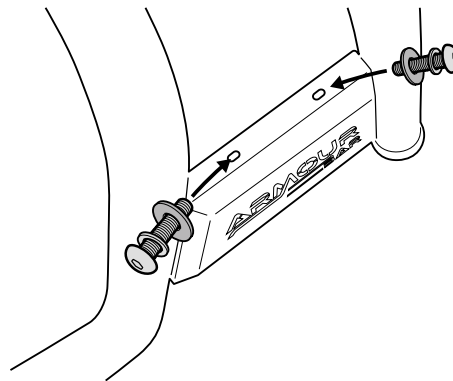


Repeat above steps to the other side using part number 20042173401 (back cover for side plate L))


Push in to position part number 20008160801 (hole plug) as indicated.
Repeat to the other side.

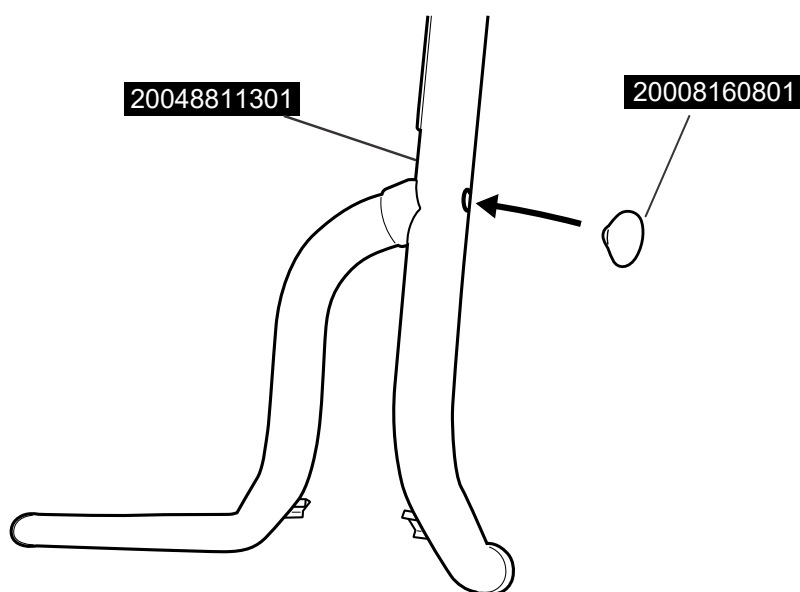

Using part number 20007045301 slide over front tube of Armour bar.

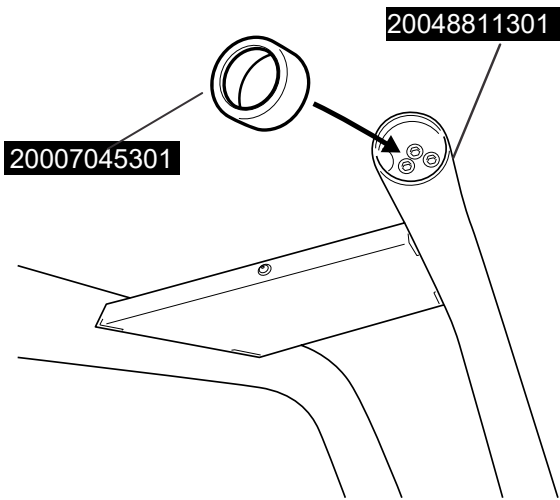

Using part number 20042379701 slide over rear tube of Armour bar.

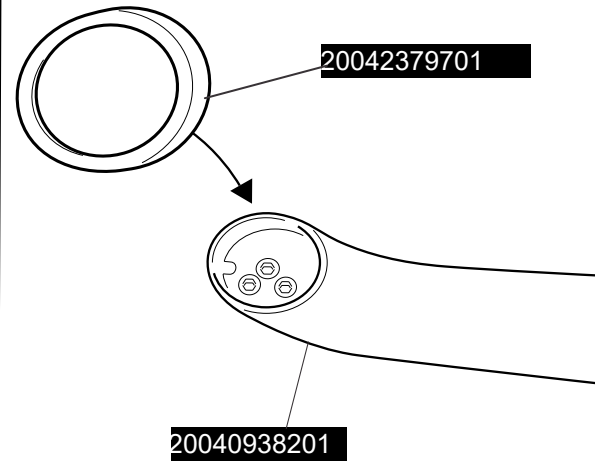

Repeat above steps to the other side using part number 20007045301 & 20042379701