



Mitsubishi Triton MR

HSP TAIL ASSIST

FITTING INSTRUCTIONS

—GENERAL NOTES

- Read through the fitting instructions prior to installation of accessory.
- Ensure all recyclable components and packaging are discarded and recycled following local recycling regulations.
- Safely store and protect any removed vehicle components.

—SAFETY NOTES

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.

—FITTING TIME




30 mins

—PARTS SUPPLIED

PART NUMBER	PART DESCRIPTION	QUANTITY
KSD-SPEC-1	Dampener strut	1
TRS-SPEC-1	Traction Strut	1
TA-09RH	Tub mount R/H	1
TA-09LH	Tub mount L/H	1
TA-08RH	Tailgate mount R/H	1
TA-08LH	Tailgate mount L/H	1
	<u>NUTS AND BOLTS</u>	
47	M8 x 25mm Bolt	4
24	M8 thick washer	4
40	M8 Nyloc nut	4
	<u>OTHER</u>	


— STEP 1 —

Open tailgate, and remove the drivers side tail light assembly.

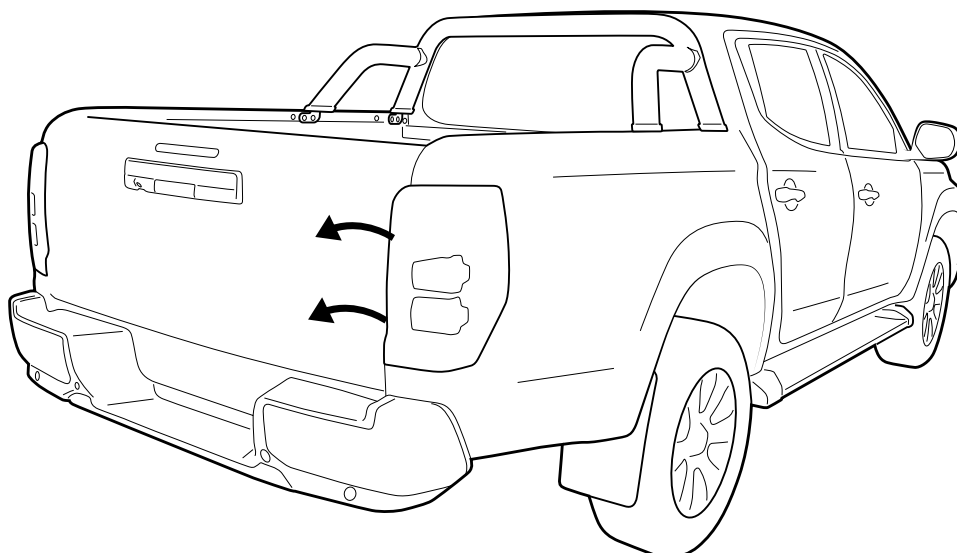


— STEP 2 —

Remove the indicated bolt and retain.

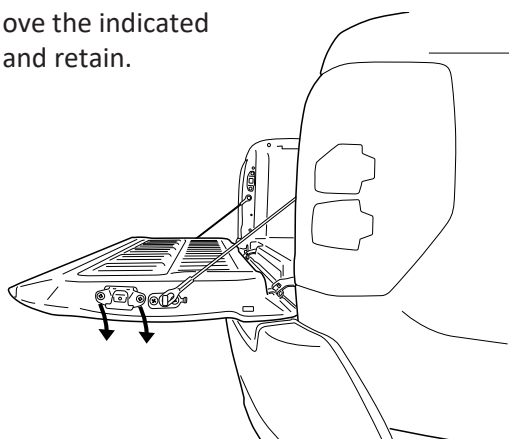


Place TA-08 tailgate r/h over the factory bracket

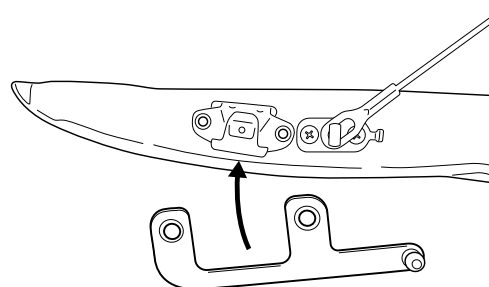


— STEP 3 —

Fasten into place using the factory bolts.

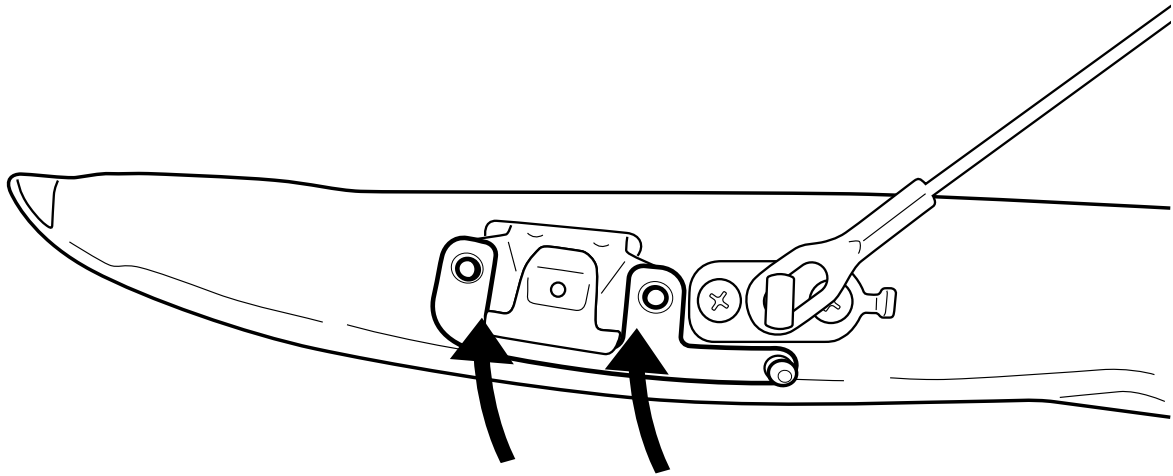


— STEP 4 —

Align bracket TA-09RH tub mounts top hole with the indicated hole on the tub.

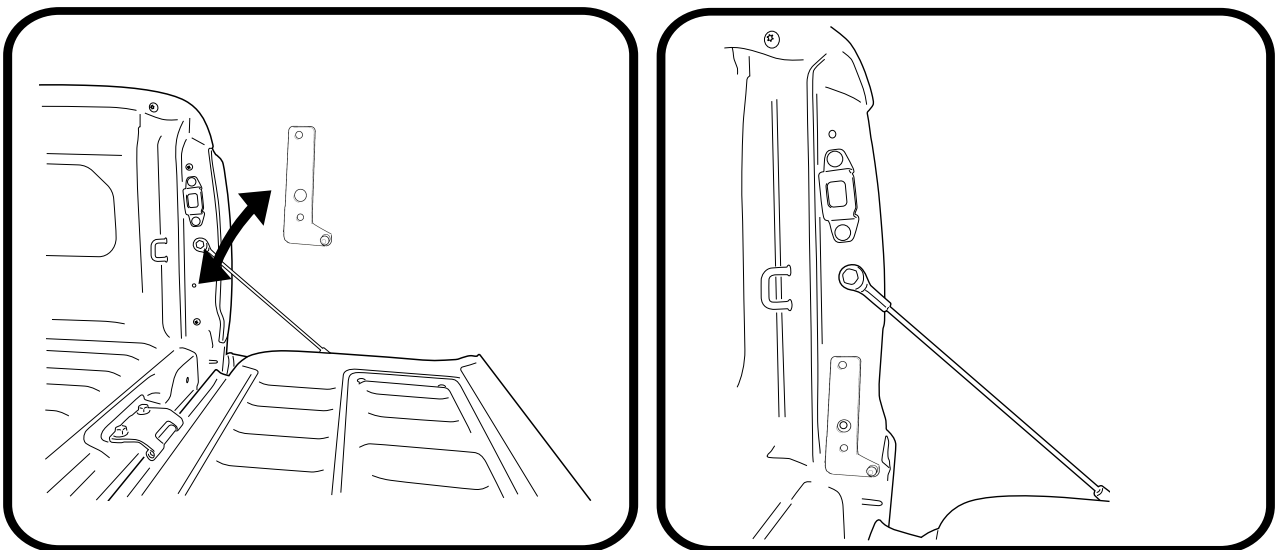


— STEP 5 —

Feed M8 x 20mm button bolt supplied through the bracket and ute body, fasten using the 3mm thick washer and M8 nyloc nut provided.

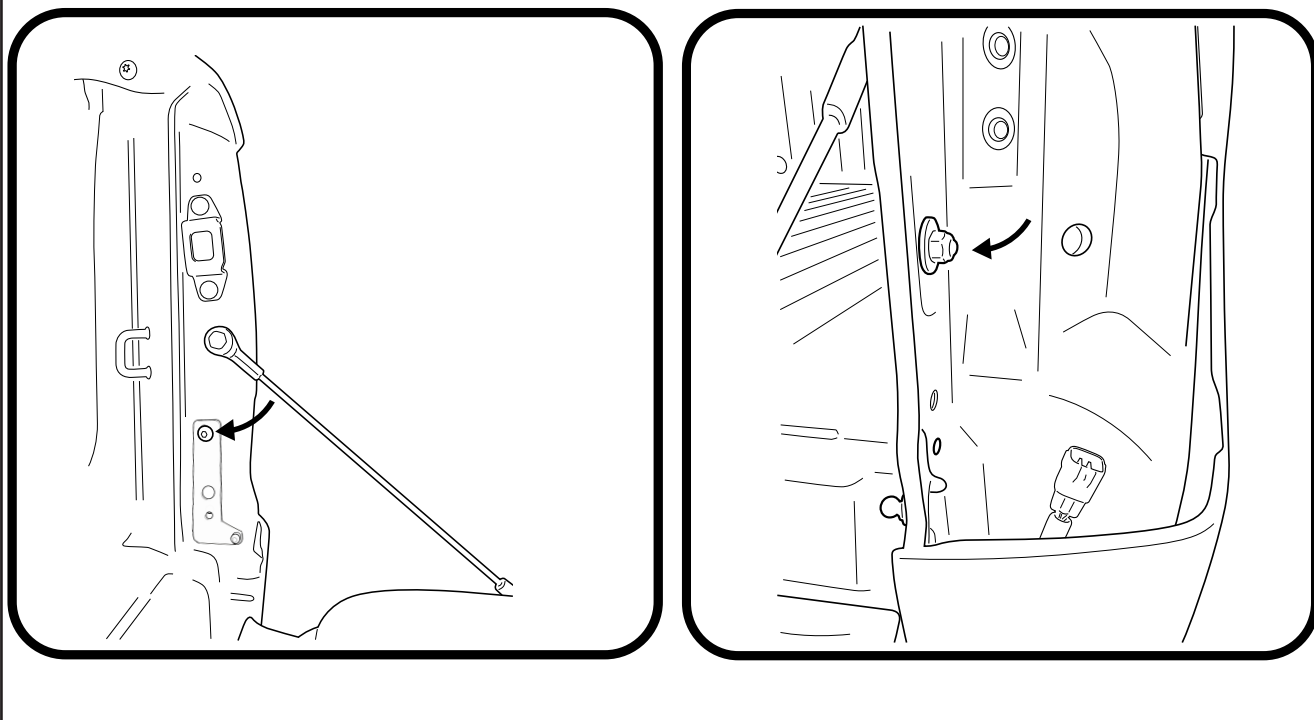



— STEP 6 —

1. center the bracket with the tread on the body as indicated.
2. Drill through the bottom pre drilled hole of TA-09RH it in to the tub body (using a 8mm drill bit),
Clean surface & apply rust inhibitor.

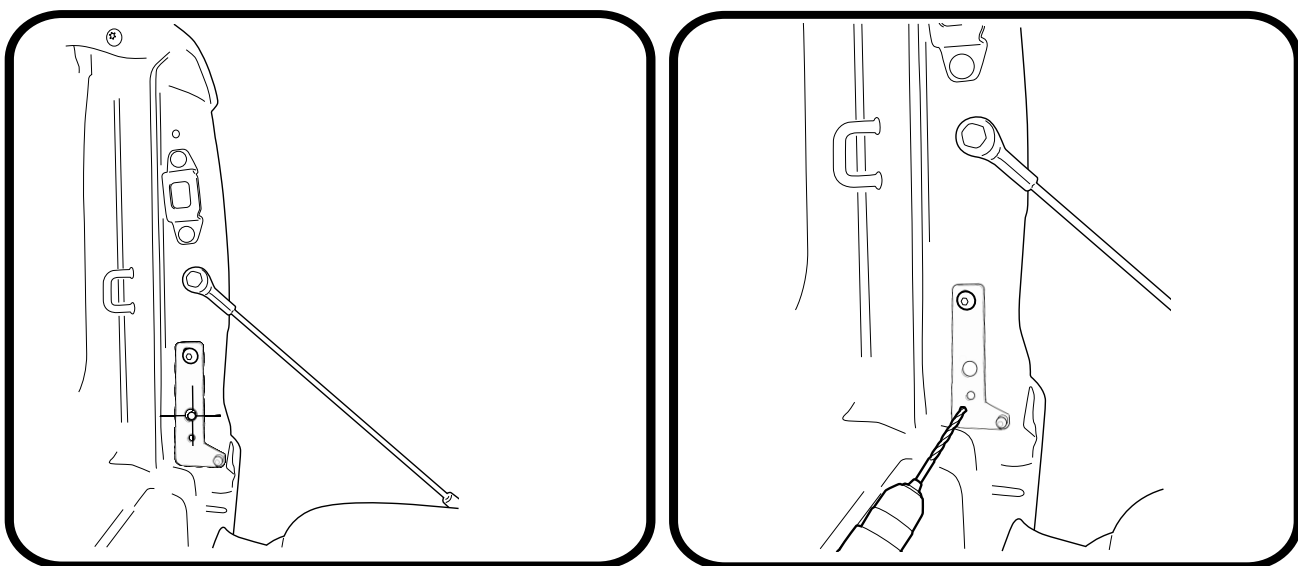



— STEP 7 —

Feed M8 x 20mm button bolt supplied through the bracket and ute body, fasten using the 3mm washer and M8 nyloc nut provided

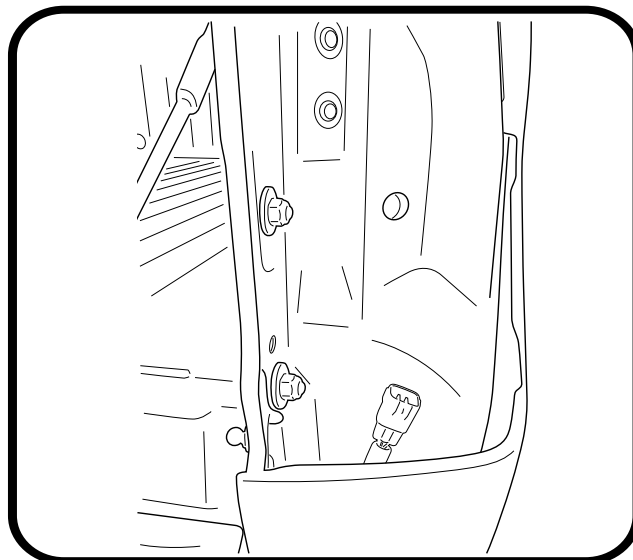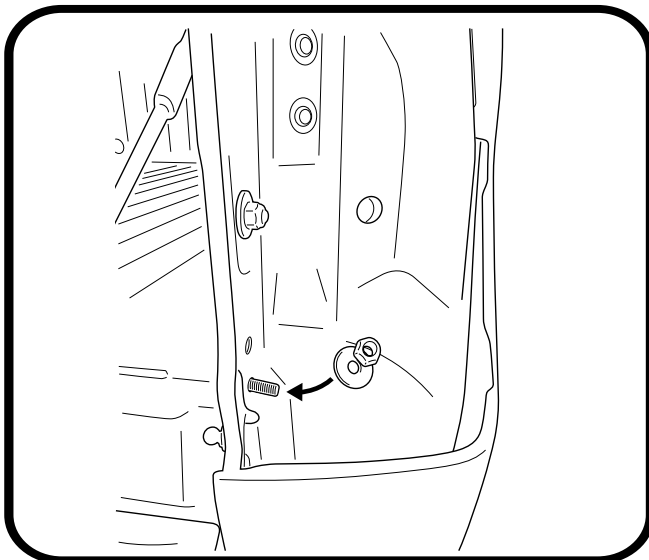



— STEP 8 —

1. Connect part number KSD-Spec-1 (Dampener strut) as indicated. You will need to pull on the shaft to extend and click in to position.
2. Re-fit the tail light on the drivers side.

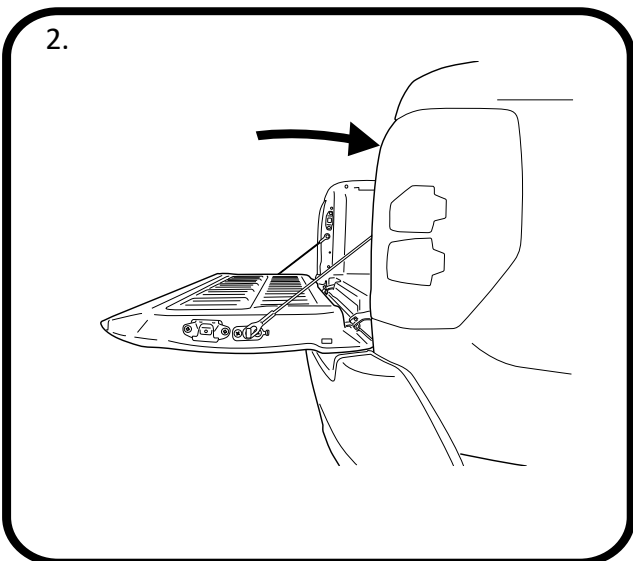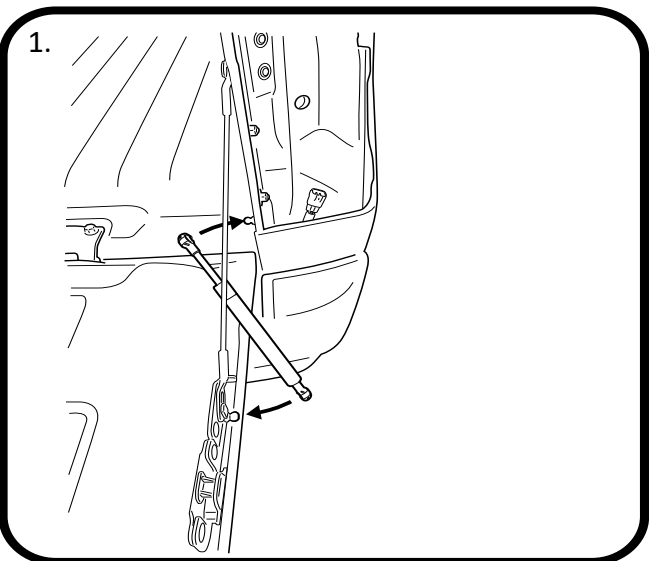

— STEP 8 —

Now repeat all the above steps on the passenger side
NOTE: The passenger side Strut has a spacer which will need removing once installed.

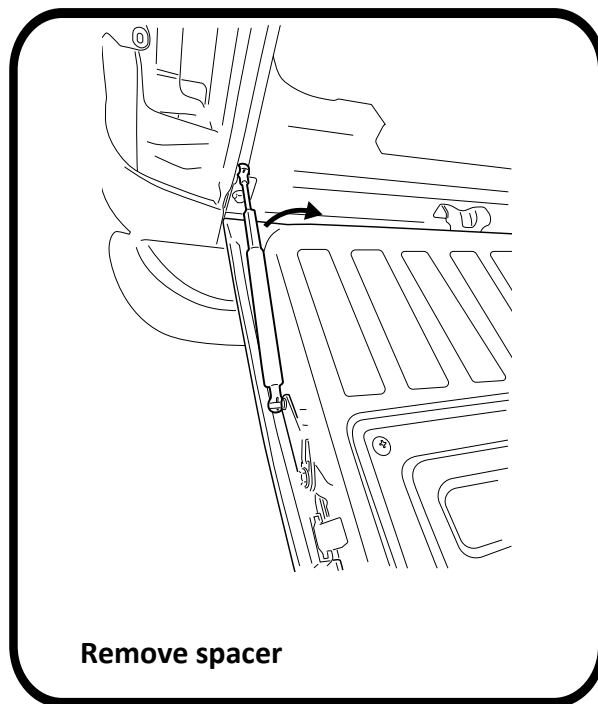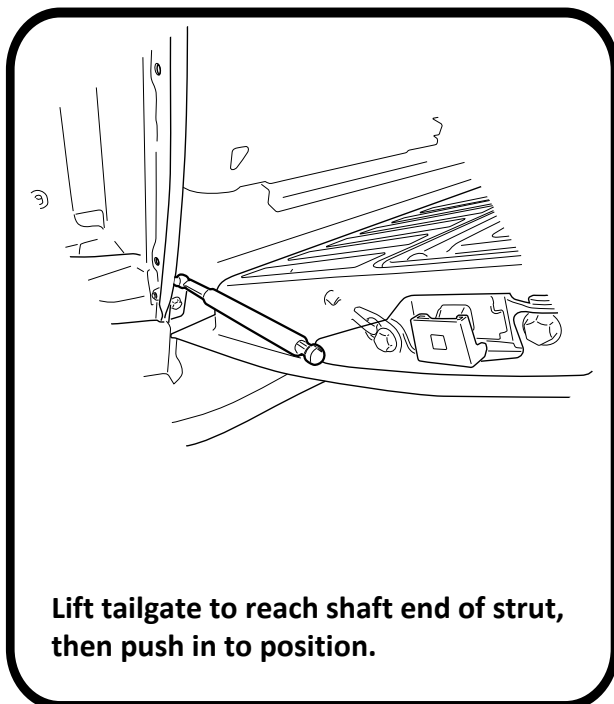

— FITTING COMPLETE —