






NEW GENERATION FORD RANGER, WILDTRAK & RAPTOR MY22.75+

HSP TAIL ASSIST

FITTING INSTRUCTIONS

PARTS LIST

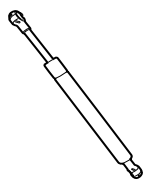		
A DAMPER STRUT x1	B STUD BALL M10 x1	C STUD BALL M6 x1
KSD-SPEC-4	TA-25	TA-26

—GENERAL NOTES —

- Read through the fitting instructions prior to installation of accessory.
- Ensure all recyclable components and packaging are discarded and recycled following local recycling regulations.
- Safely store and protect any removed vehicle components.

—SAFETY NOTES —

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.


—FITTING TIME —



15 mins

— STEP 1 —


Open tailgate.

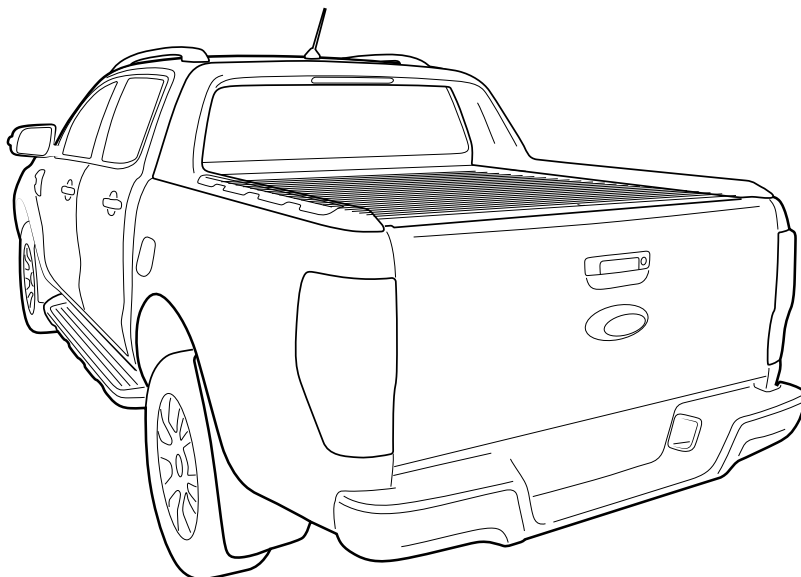

— STEP 2 —


Using stud Ball M6, part number TA-26, fasten to indicated location.

NOTE: TA-26 Should be tighten to 2nm torque, Do not use power tools for this step. Small amount of Loctite is recommended.

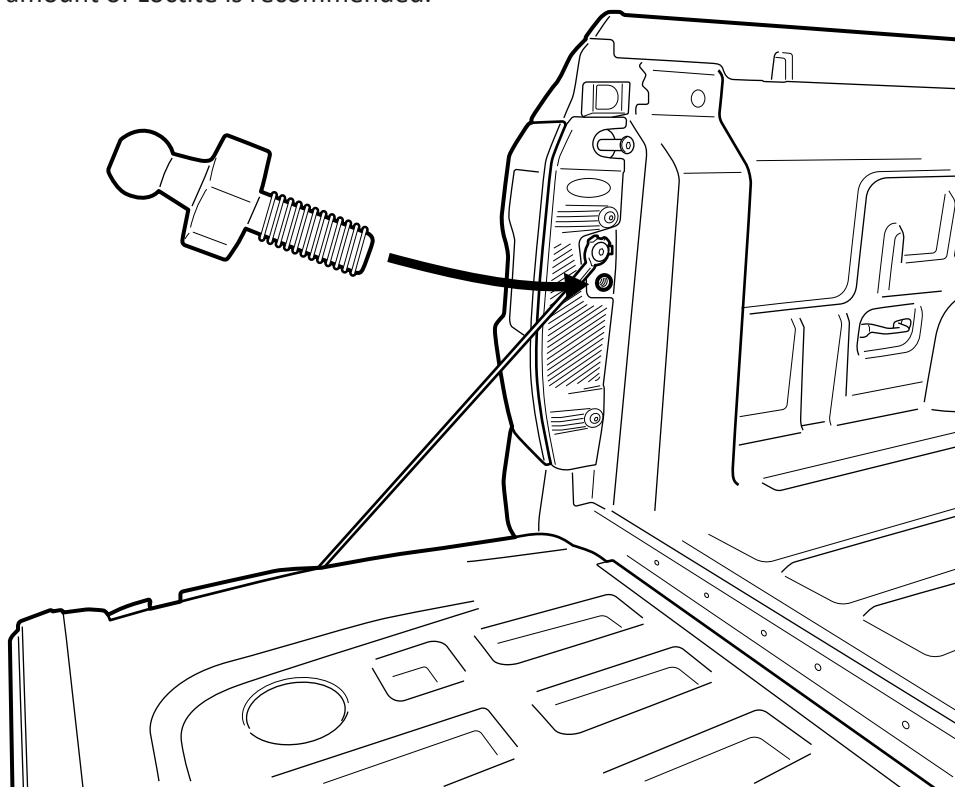


— STEP 3 —

Remove indicated bolts, and discard. **NOTE: Take care not to lose factory alignment.**

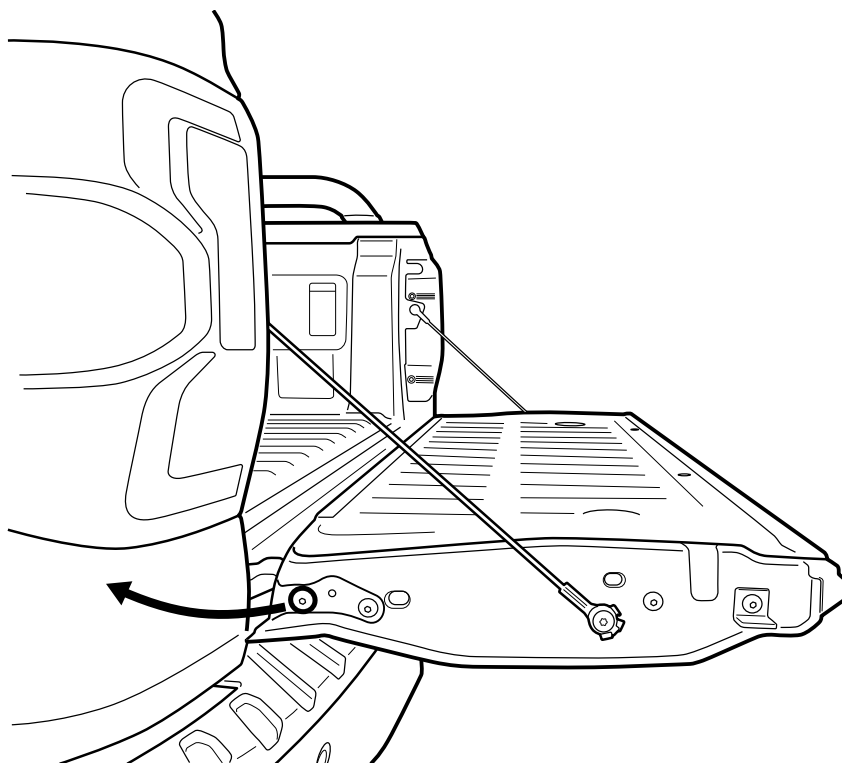



— STEP 4 —

Using stud Ball M10, part number TA-25, fasten to indicated location.

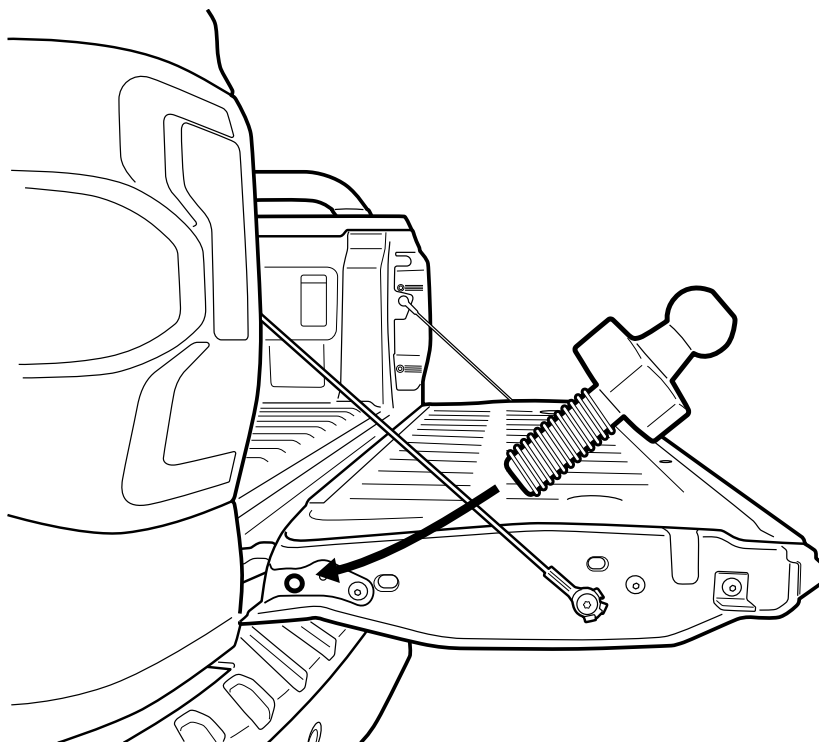

— STEP 5 —

Align part number KSD-Spec-4 (cylinder end) to ball stud M6, push to click into position

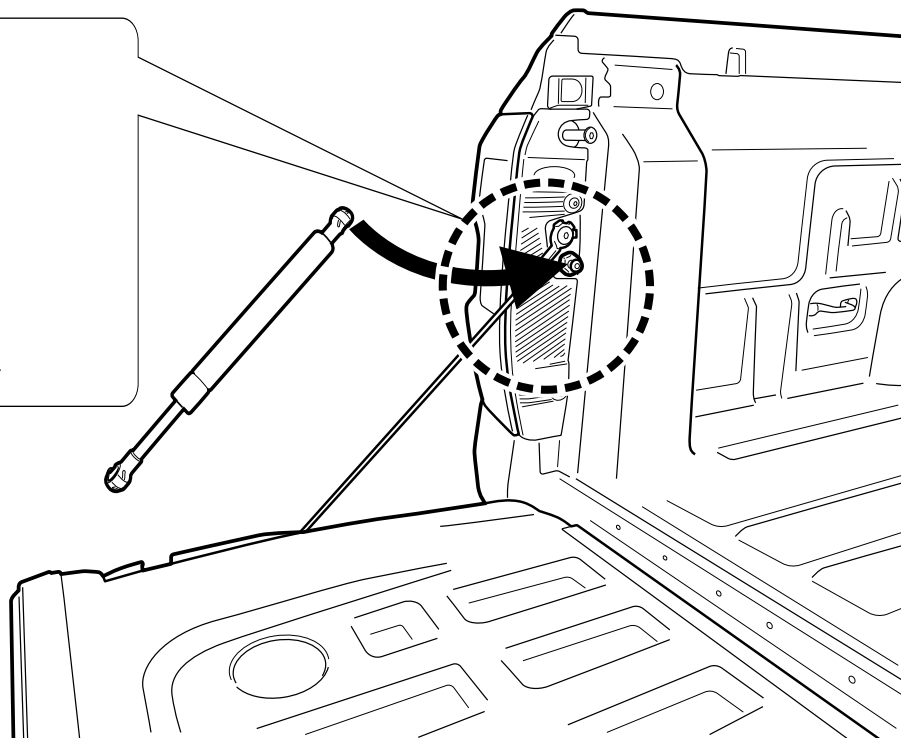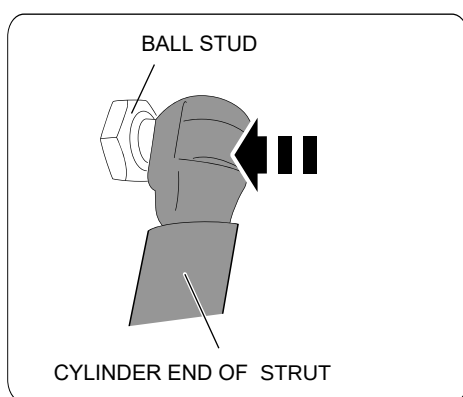

— STEP 6 —

shaft to extend and click in to position.

