



**WWW.HSPUTELIDS.COM**

**1300 441 498**

Internal Part No: Q18

Part number: AU600015

Fitting Time: 45mins



**MITSUBISHI TRITON MQ**

**HSP TAIL LOCK**

**FITTING INSTRUCTIONS**

## —General Notes—

- Read through the fitting instructions prior to installation of accessory.
- Ensure all Recyclable components, packaging are discarded & recycled following local recycling regulations.
- Safely store and protect and removed vehicle components.

## —Safety Notes—

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.
- WARNING Failure to install product not in accordance with manufacturers instructions may result in fire.
- WARNING Failure to install product not in accordance with manufacturers instructions may void warranty.
- WARNING We recommend disconnecting the battery terminals before commencing install of tail lock. Please ensure you have your vehicle book with radio/infotainment codes on the unlikely chance these need to be re-entered in.

## —Fitting Time—




45mins

## —PARTS SUPPLIED—

| Part Description          | Part Number  | Quality/<br>Length | CHECK LIST |
|---------------------------|--------------|--------------------|------------|
| <b>TAIL LOCK ASSEMBLY</b> |              |                    |            |
| Main Bracket              | Q18-A        | 1                  |            |
| Tube                      | Q18-B        | 1                  |            |
| Actuator                  | ACT-01       | 1                  |            |
| Wiring                    | CL-LOOM-LONG | 1                  |            |
| Patch Harness             | Q-PATCH      | 1                  |            |
| <b>FASTENERS</b>          |              |                    |            |
| Actuator screws           | 36           | 2                  |            |
| Spring Washer             | 13           | 2                  |            |
| <b>OTHER</b>              |              |                    |            |
| Cable Ties                |              | 5                  |            |
| Fitting Instruction       |              | 1                  |            |


## — STEP 1 —

Fasten actuator to bracket as shown.

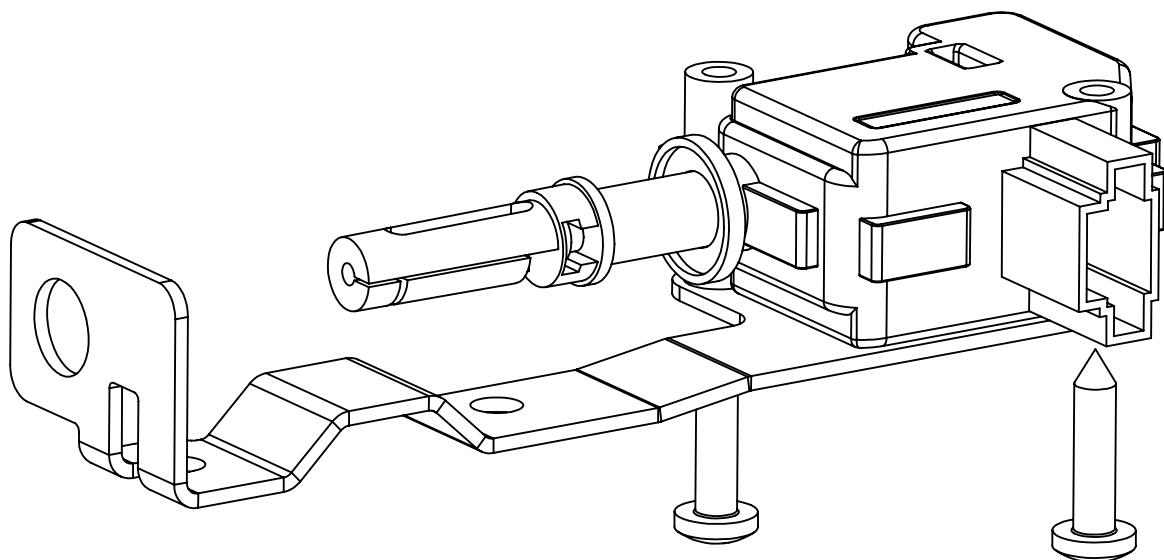


## — STEP 2 —

Fit tube to actuator as shown making sure to have the end of the tube level with the main bracket.

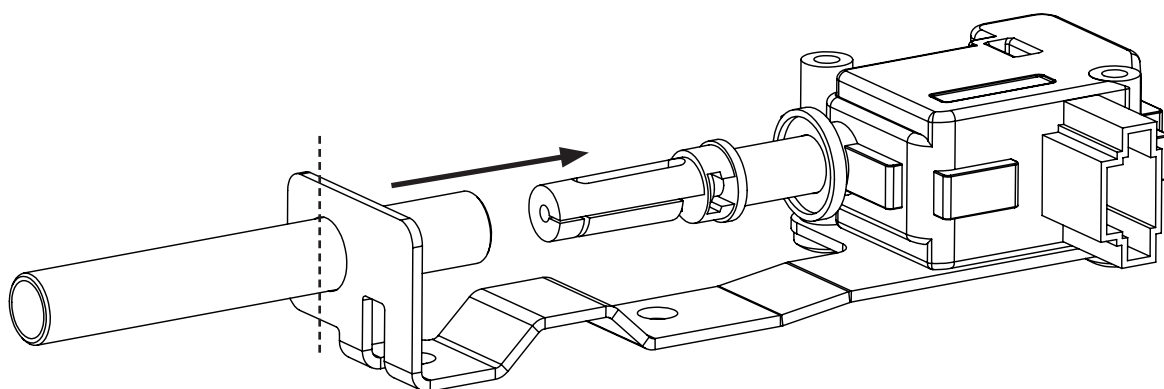


### — STEP 3 —

Remove tail gate cover.

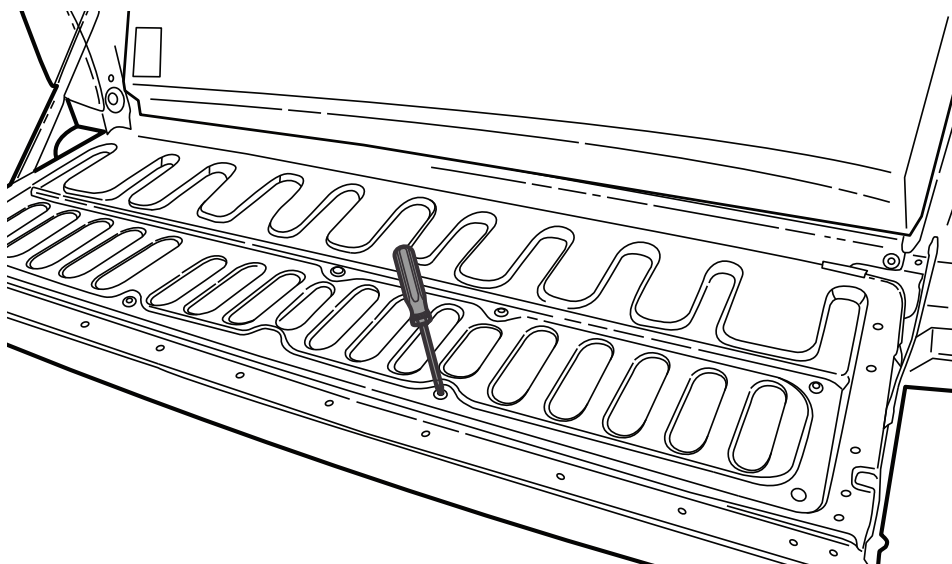


### — STEP 4 —

Remove two bolts shown.

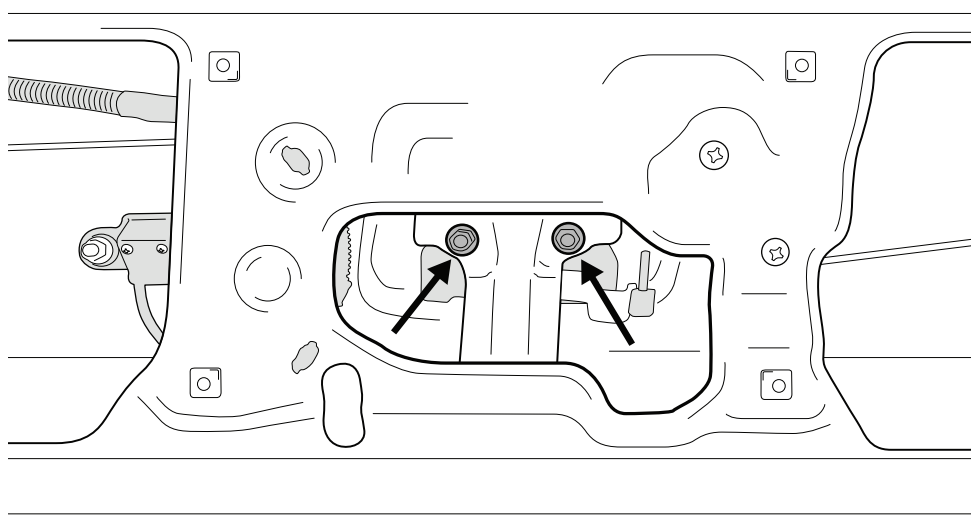


## — STEP 5 —

Place spring washers in indicated position

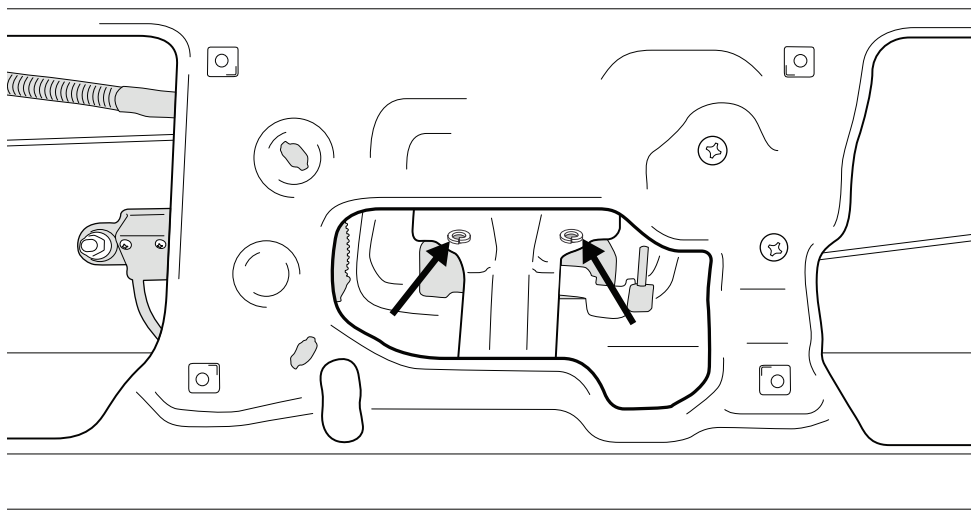


## — STEP 6 —

Insert TailLock assembly as shown. Re-fasten the two bolts removed earlier.

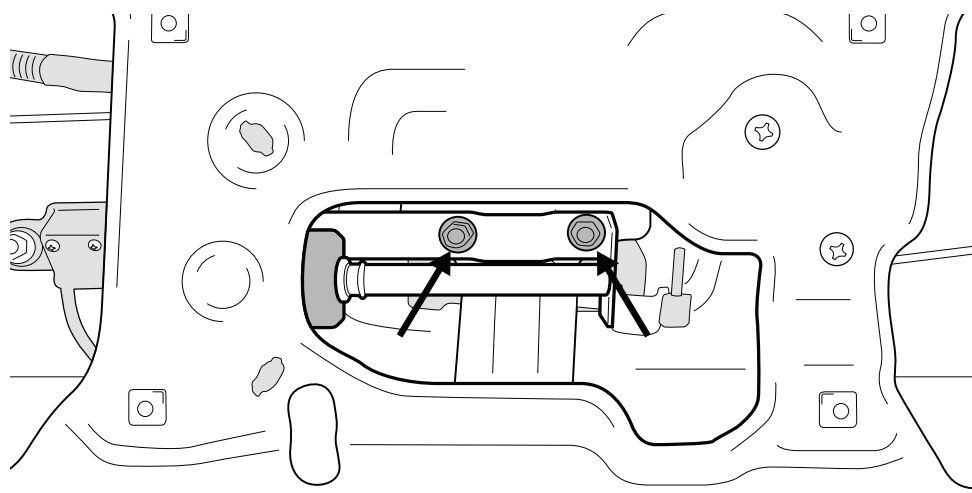

## — STEP 7 —


Remove the wiring plastic cover on the side of the tailgate.

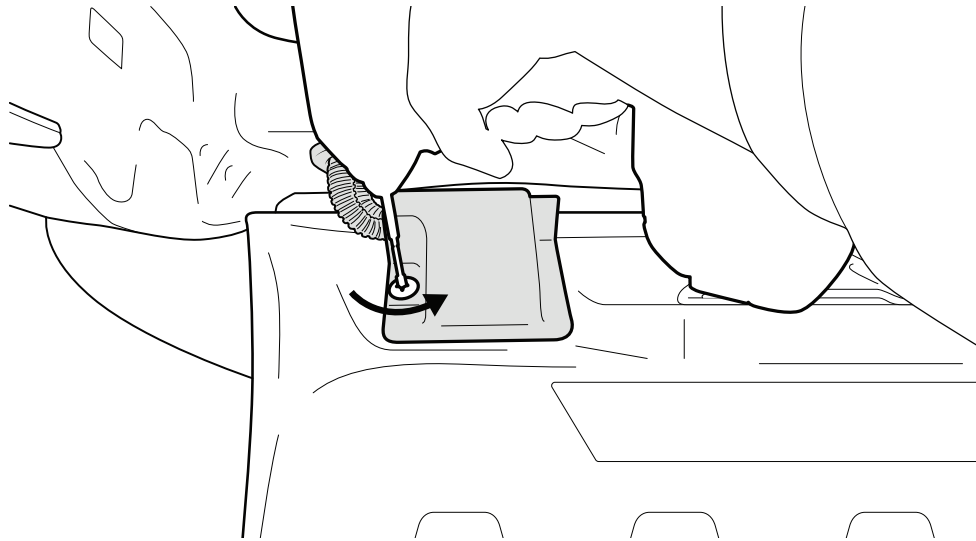

\*On base models there may not be a plastic cover or wiring running to the tailgate.


## — STEP 8 —

Run the wiring actuator end in through rubber gromit as shown. You may need to make an incision.

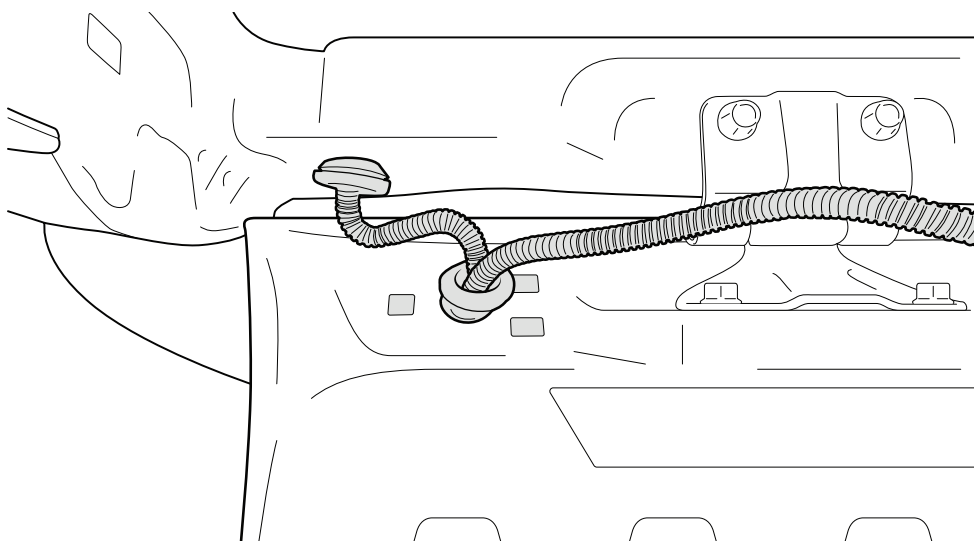


## — STEP 9 —

Plug in the actuator.

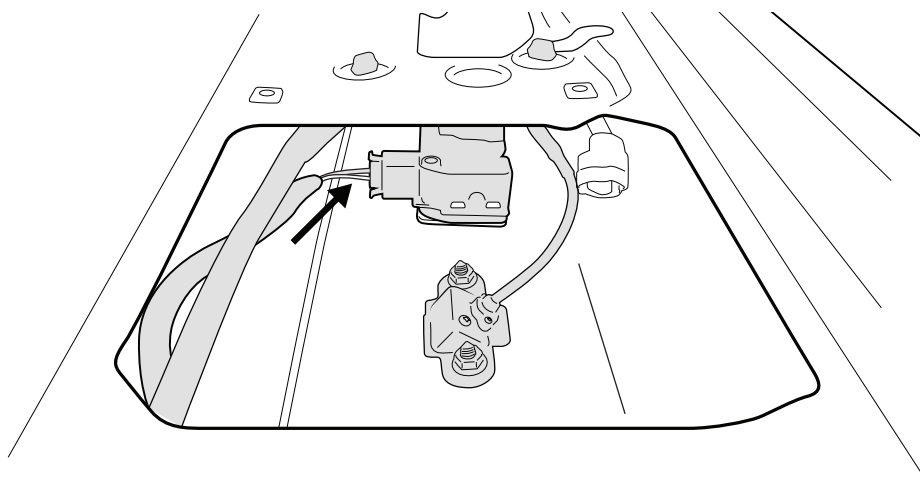


## — STEP 10 —

Run the other end under the tub as shown.

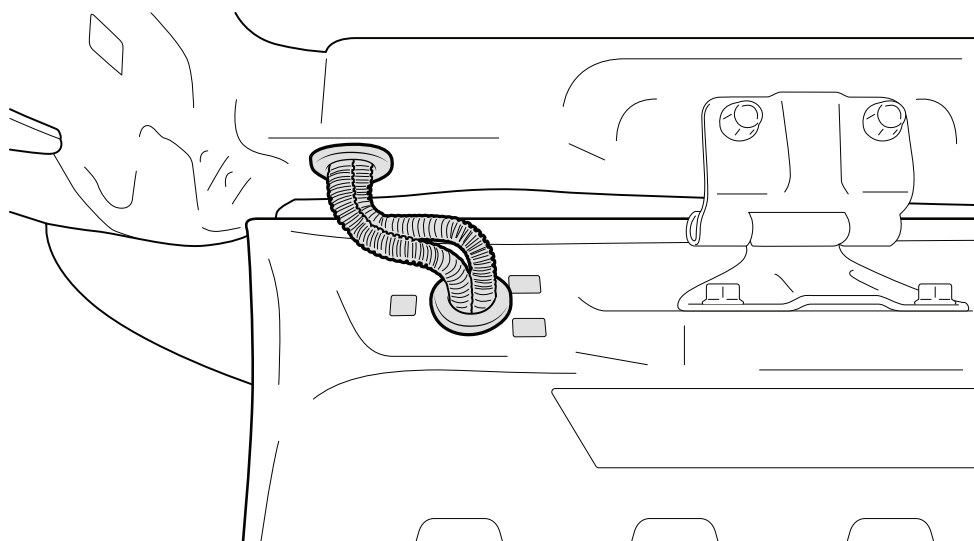


## —STEP 11—

Refit the plastic cover.

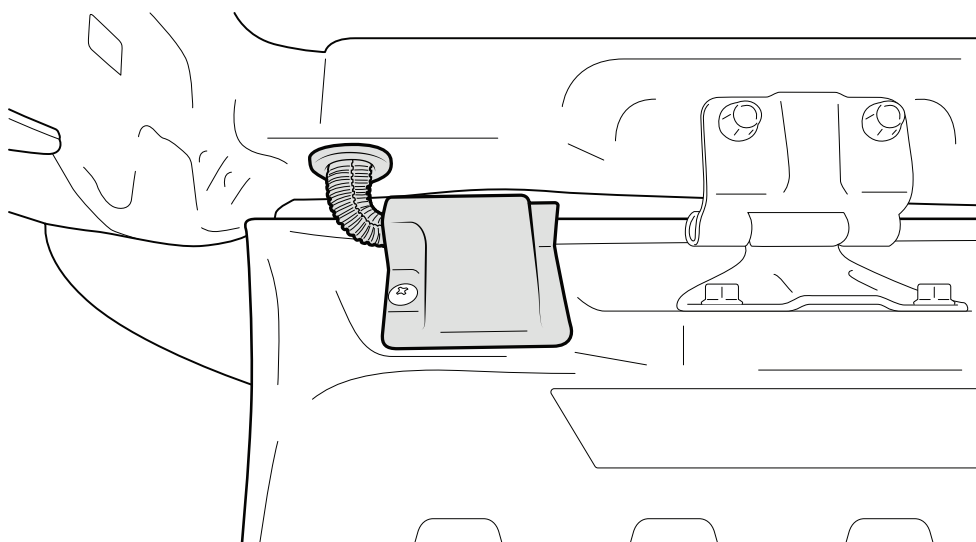

## —STEP 12—


Run wiring over the passenger side rail. Cut an incision on the rubber gromit under the front passenger side seat. Run wiring through incision and silicon after. Cabel tie wiring every 500mm.

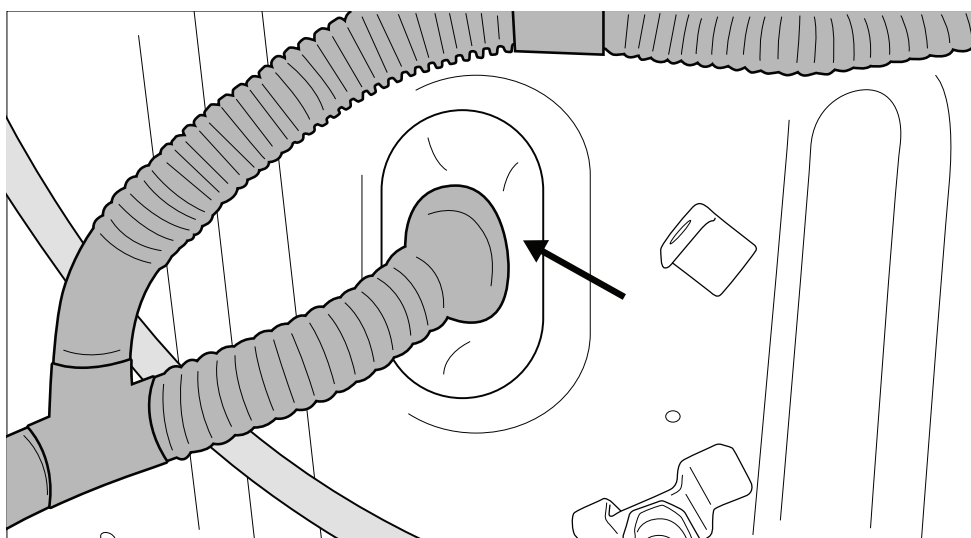




## — STEP 13 —

Carefully remove the passenger side scuff plate.

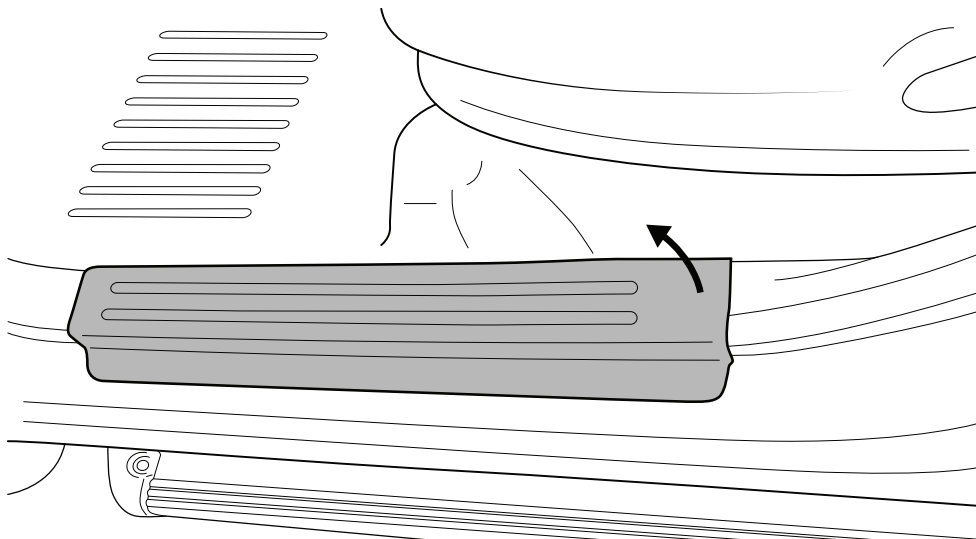


## — STEP 14 —

Remove kicker panel.

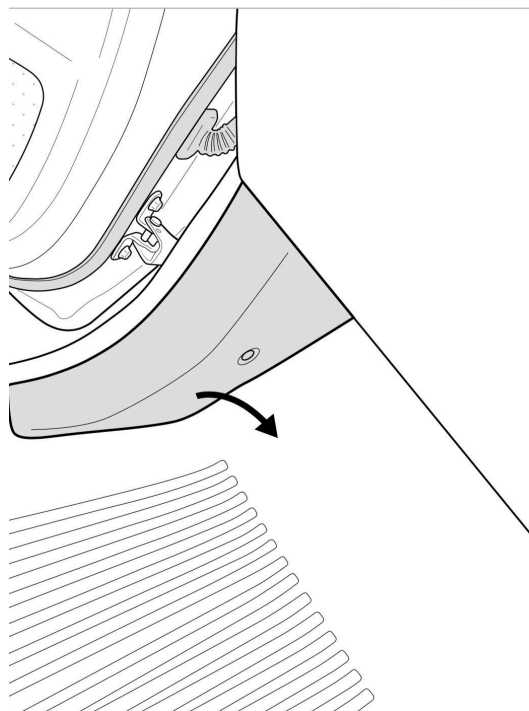

## — STEP 15 —


Unplug indicated plug and plug Q-PATCH wiring.

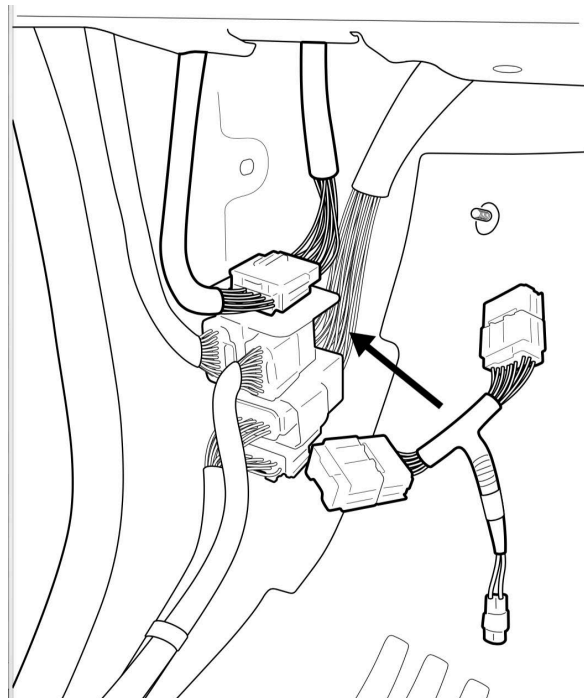

## — STEP 16 —


Plug CL-LOOM-LONG to Q-PATCH wiring.

Cable tie overhang of wires and assemble all panels removed earlier.

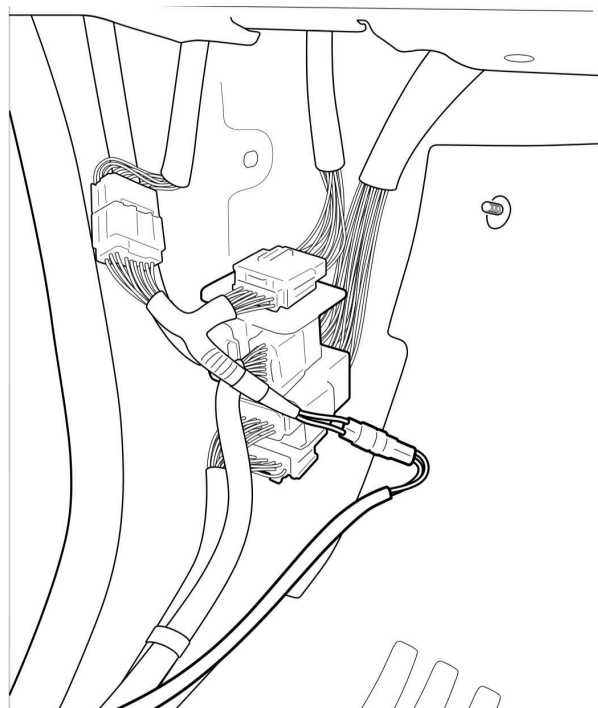

## — STEP 17 —

Place and fasten tail gate cover.

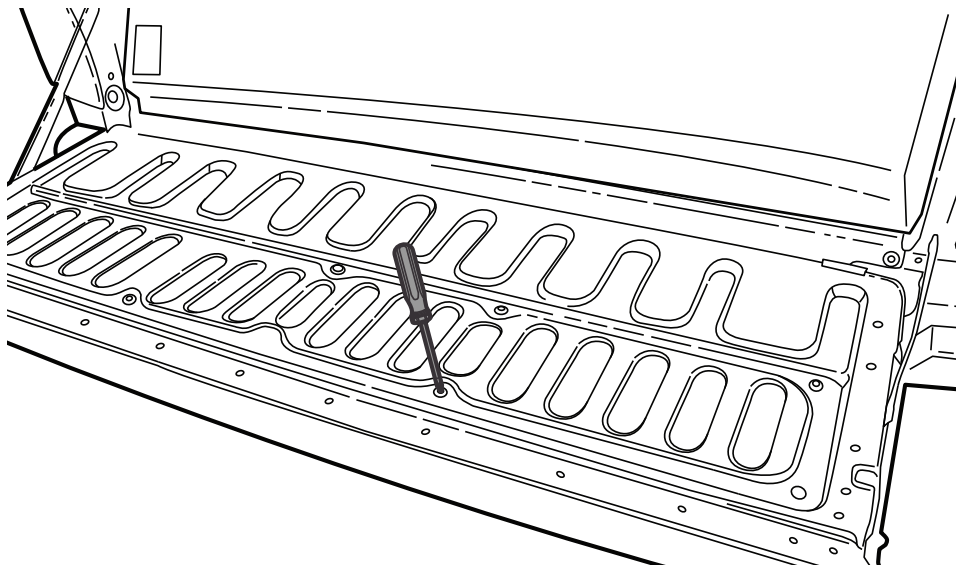

## — FITTING COMPLETED —