



Important Information!

Please note that with the box of the Roll R Cover, there is a service kit that includes:

- A User Guide**
- Specific Lubrication**
- A Servicing Guide**
- A Warranty Guide**

This must be handed over to the end user in order for them to register their warranty and understand the servicing requirements.

ROLL.  COVER[®]
 SERIES 3



INSTALLATION INSTRUCTIONS

**Vehicle Model: FORD RANGER - NEW
GENERATION 07-2022 +**



INSTALLATION TIME: 1 hours and 50 minutes (Approximately)


IMPORTANT

- Do not stand/sit or rest heavy objects on Roll R Cover
- Humans or animals are not to be under the closed cover at any given time
- Tonneau Cover is not dust or water tight
- If contact with volatile chemicals occur, clean Cover with mild detergent and water solution
- Next Gen Ford Ranger Warranty Additional Information.



If you are self installing: Please scan QR code to access important information.

If you are fitting on behalf of someone: Advise them that they must scan QR code to access important information at hand over.



Care Instructions

- Read Instructions fully before commencing installation.
- Clean Cover with a mild detergent and water solution
- Do not use abrasive cleaners or solvents
- Refer to manufactures instructions applicable to power drill.
- Protect Tub floor against scratches during installation process.

Maintenance

Refer to Maintenance instructions.

Tools Required

- | | | |
|--|--|--|
| <ul style="list-style-type: none"> • Pen / Marker • Centre Punch • Drill & Drill bits • Caulking Gun • Silicon - Non Acetic | <ul style="list-style-type: none"> • Scissors & Knife • Spanner & Socket • Tape measure • Holesaw • Filing tool | <ul style="list-style-type: none"> • Soapy water solution • Allen Key set • Screw driver • Rust Inhibitor • Trim Removal Tool |
|--|--|--|

PERSONAL PROTECTIVE EQUIPMENT:



Rubber Gloves



Goggles



Hearing Protection


BOX CONTENTS

LEFT & RIGHT SIDE RAIL

S2.5-DC-AE-002ps-NGR42



S2.5-DC-AE-003ds-NGR42



CANISTER ASSEMBLY



S3-DC-AF-NGR-001/002

CANISTER TOP COVER



S2.5-DC-AE-005 -NGR

NGR4R SPECIFIC KIT

COVER END CAPS




S2.5-DC-PI-004ps



S2.5-DC-PI-004ds



COUNTERSUNK
SCREW Qty - 4




Drainage pipe
Qty - 2




BATTERY
LOOM S2.75




CABLE TIE
Qty x 16

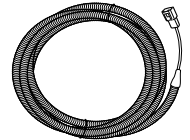

CL-LOOM-SHORT




NGR-PATCH

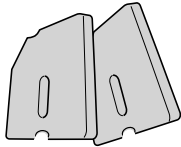

1 NOTCH SPACER
Qty - 4



M8 NUT
Qty - 4



SIDERAIL
CLAMP Qty - 4




M8x45mm H5
Allen head, with
spring washer &
flat Washer
Qty-4




M6x20mm pan
head, with spring
washer & flat
Washer
Qty-2




Rear Drainage pipe
Qty - 2



BLACK M8 x 30mm
Qty - 6

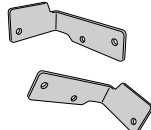

LEFT & RIGHT
BRACE
BRACKET




BLACK M8 x 25mm
Qty - 4



BLACK M8
WASHER
Qty - 4



M8
RUBBER
WASHER
Qty - 4

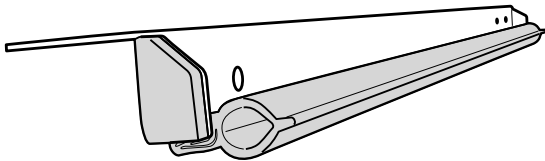

NGR-FBA
QTY - 1

TRUCK BED PREPARATION

INSTALL WIRING

INSTALL TO TRUCK BED

ROLL R COVER ASSEMBLY

TEST OPERATION


FINISH

TUB PREPARATION

NOTE: Instructions may refer to one side of vehicle, repeat steps to the other side.



If the Vehicle is fitted with a headboard bar, remove from Ute Tub (truck bed).

Note: Retain hardware.

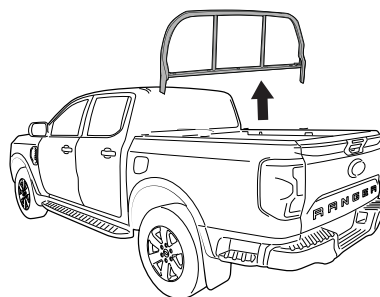


NOTE: Following steps are for vehicles fitted with a factory tailgate liner. If no tailgate liner skip to page 5.


Remove and retain indicated screws.

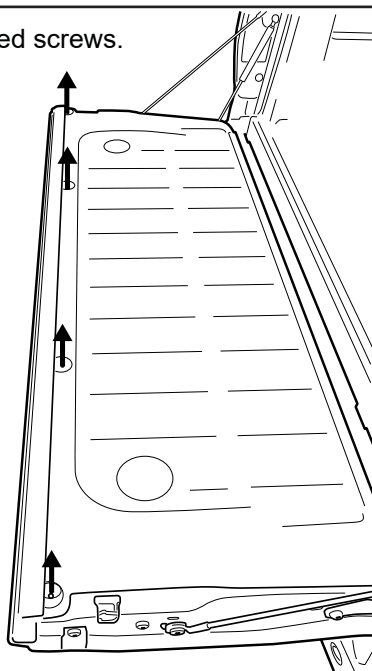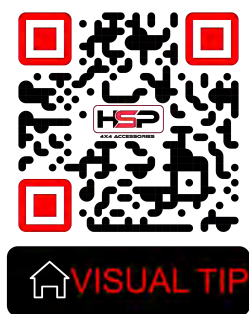


Push the tailgate's top plastic trim to expose the inner measuring guide of the trim.

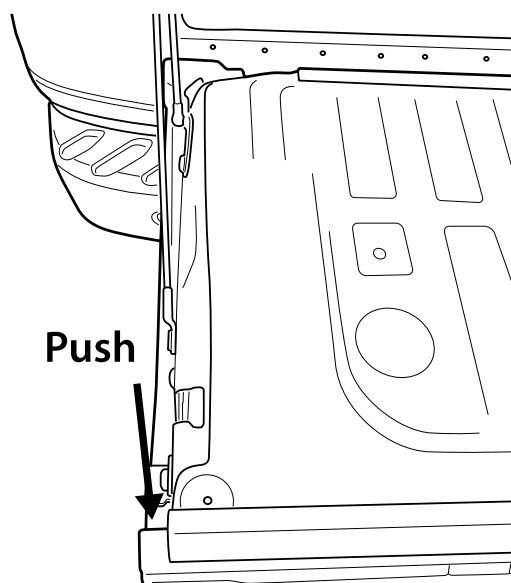


Using a plastic trim removal tool, carefully tuck the rubber molding in to the cavity behind the measuring guide.

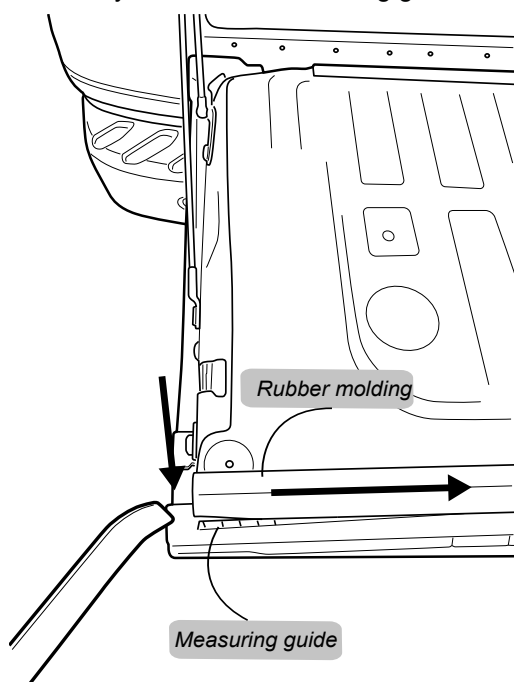



Slide plastic trim tool between cavity and rubber molding towards the other side.

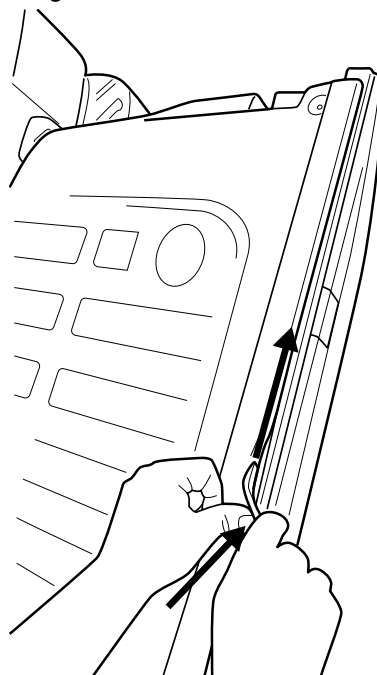







Using retained screws, fasten the tailgate liner in to position.

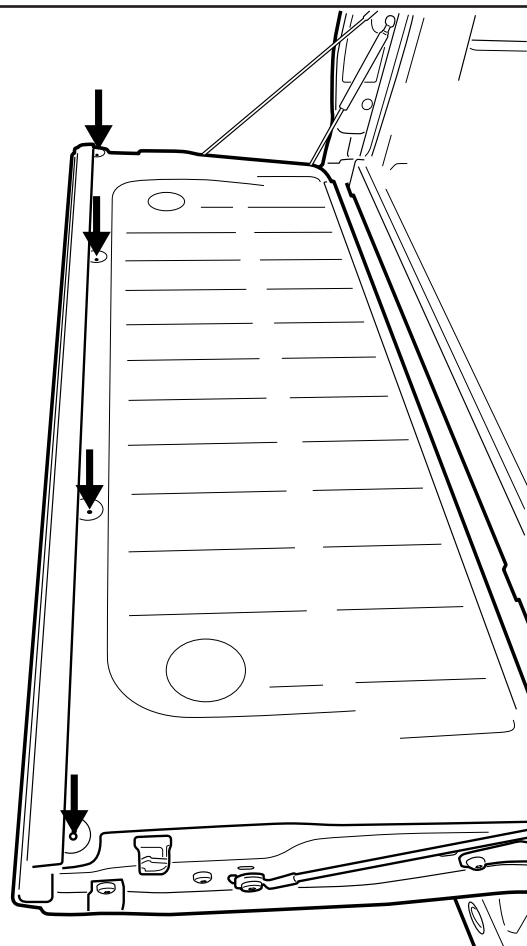






Completed view showing tailgate liners rubber moulding behind the measuring guide.

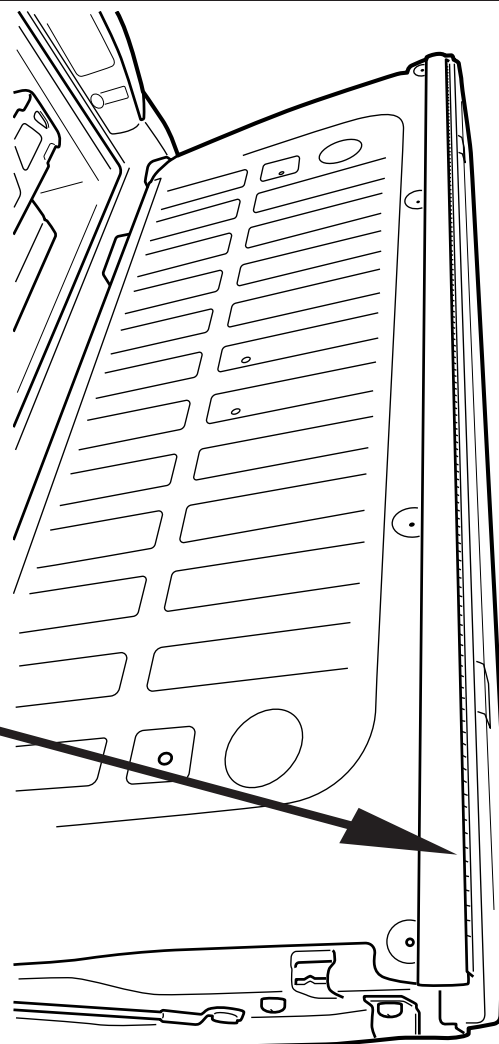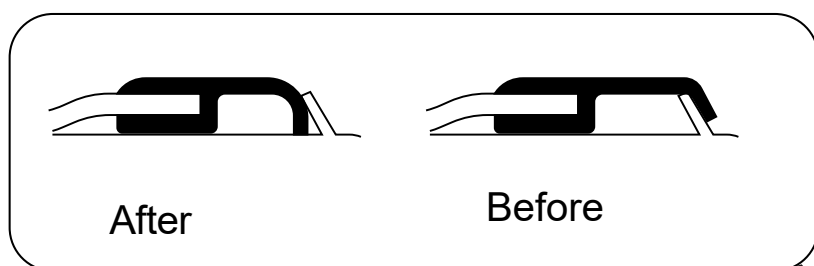

Measure down from top of headboard 180mm & 70mm measuring from the side of the top rail. Repeat to the other side.
Using a 50mm hole-saw drill the liner only as indicated.
NOTE: Only drill the tub liner at this step.

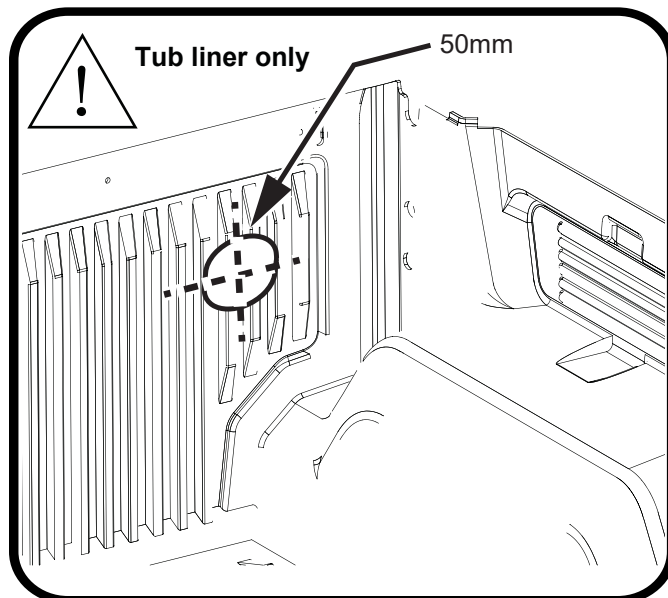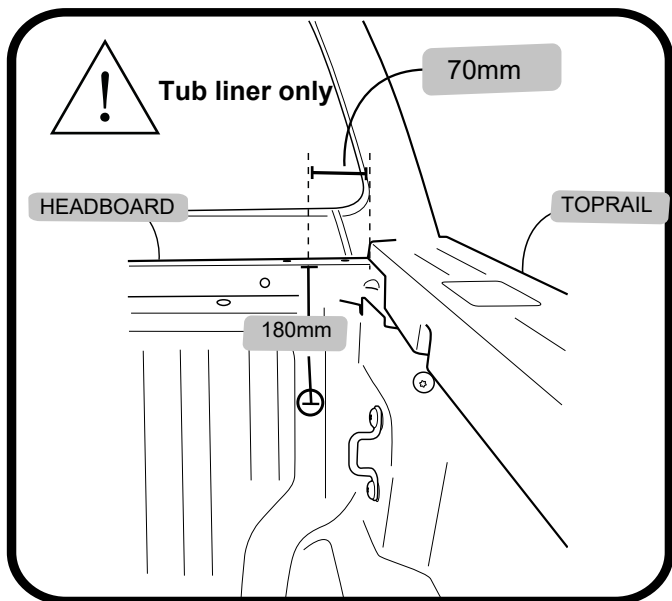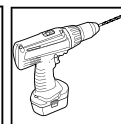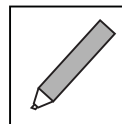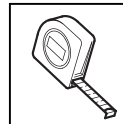

Now measure down from top of headboard 180mm & 70mm measuring from the side of the top rail. Repeat to the other side.
Now using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.

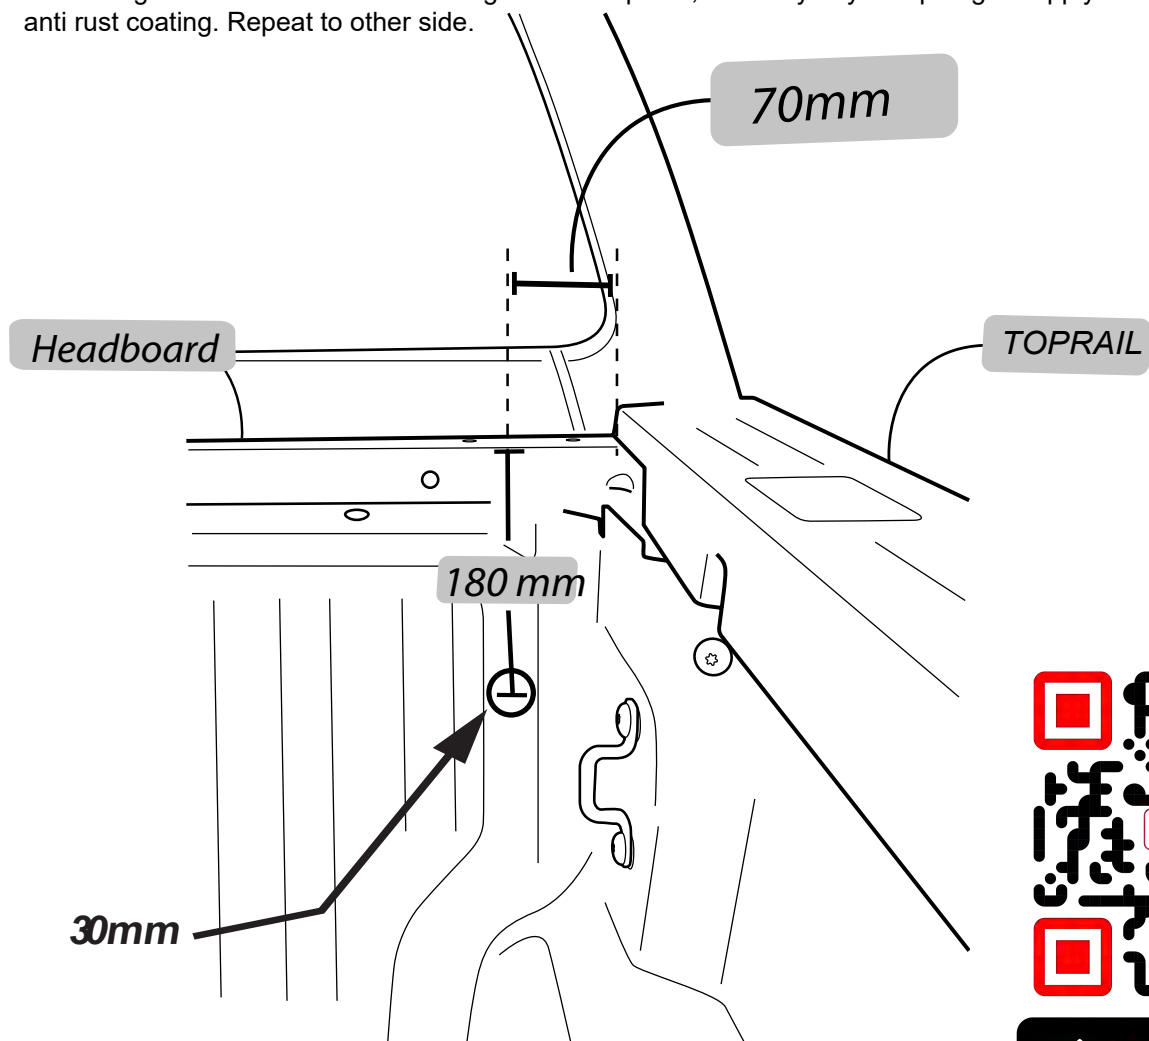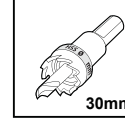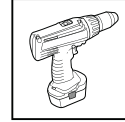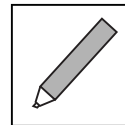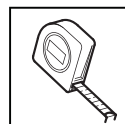


ATTENTION: Do not exceed 30mm hole.



VISUAL TIP



Carefully unpack the box.

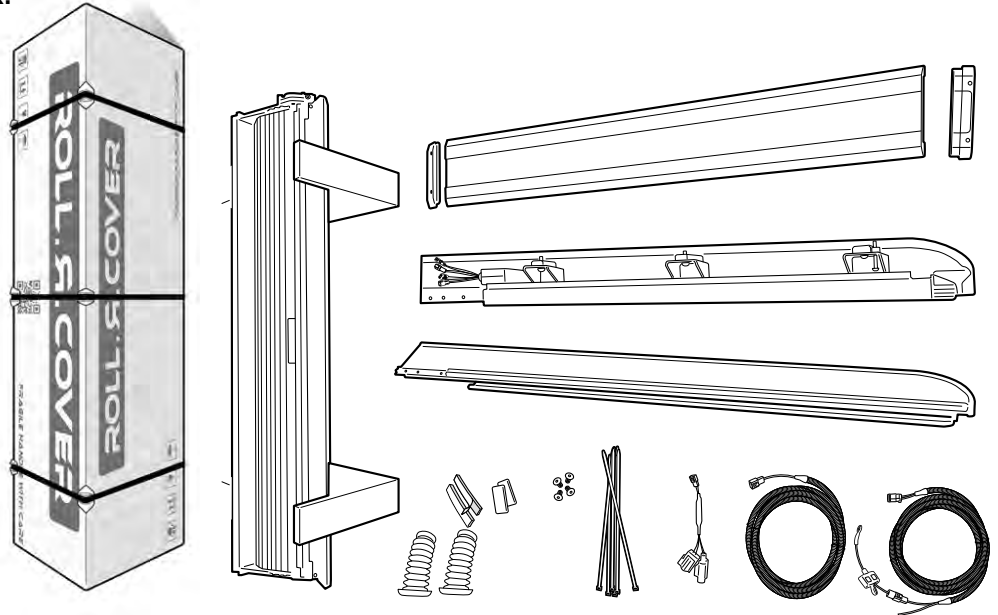


Install front drain pipes (55mm diameter end of hose) through drilled holes on the front tub panel.



Note: With care push tube in. Taking care pull the tube back so it seals correctly against the front panel of the tub.

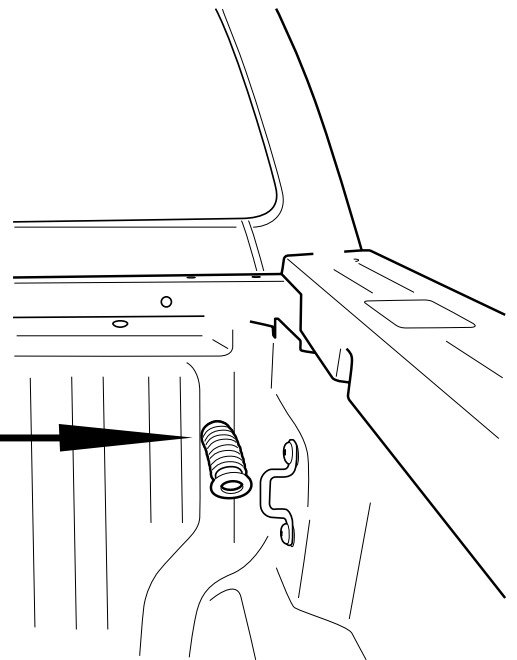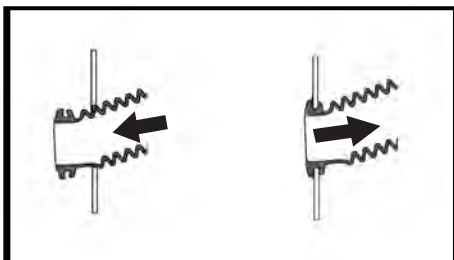

1. Remove and retain indicated bolt.
2. Measure down from top edge of the tub liner 55mm down, Now measure 70mm in towards the tailgate as indicated. Mark line as a guide, now trim that section of the tub liner and discard. Repeat to the other side.




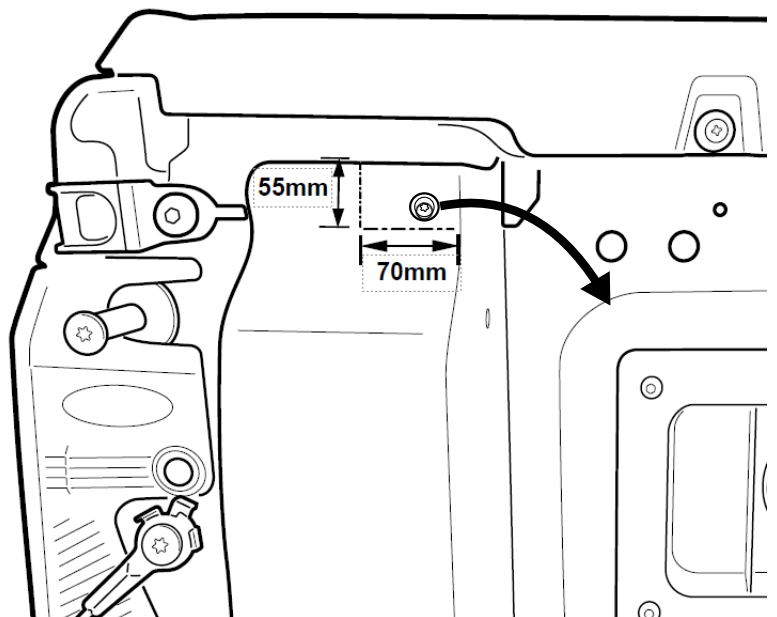


This step applies to vehicles equipped with a factory tub liner.


NOTE: Steps on this page are for vehicles fitted with a factory one piece tub liner only. If no tub liner is fitted skip to next page.

Measure 25mm towards the tailgate from the center of the indicated bolt. Measure down 110mm from the edge of the plastic trim as directed and make a mark.




Use a 15mm hole-saw to drill through the tub liner only, clean edges. Repeat the same steps on the other side.

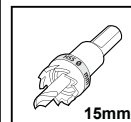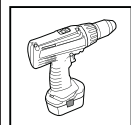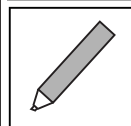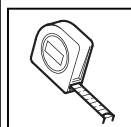


ATTENTION: Do not exceed 15mm hole.

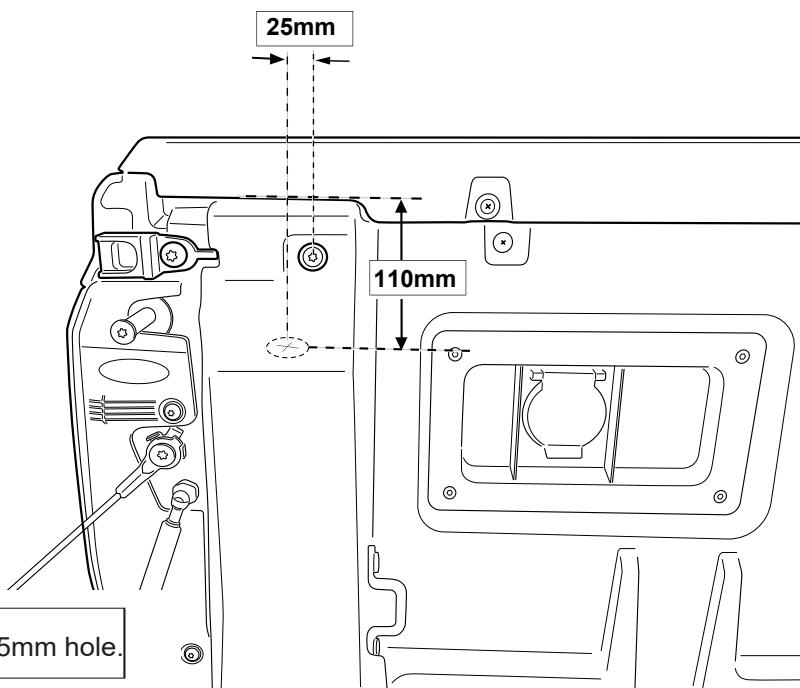

- a** In the specified orientation insert the rear drainage pipe into the previously drilled hole.
- b** Leaving 150mm of the pipe hanging out.
- c** Check the tub liner cavity to ensure there are no obstructions to the drainage pipe. Repeat to the other side.
Re-fit the tail lights.


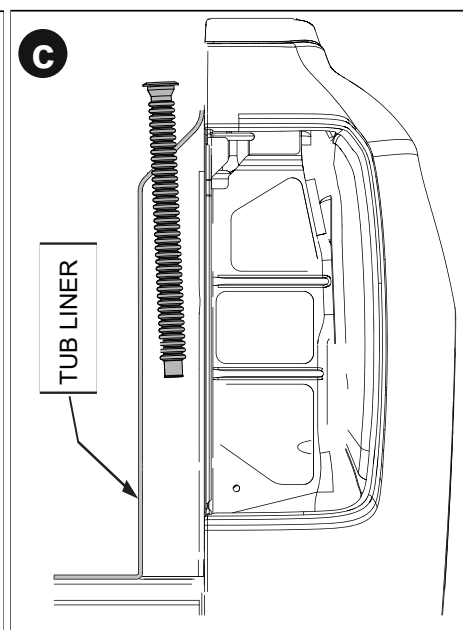
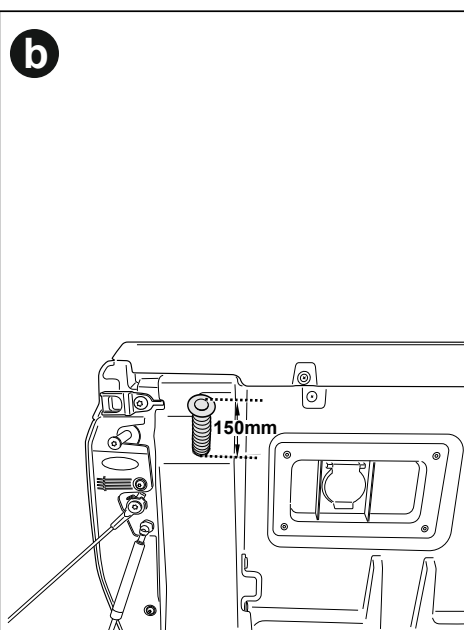
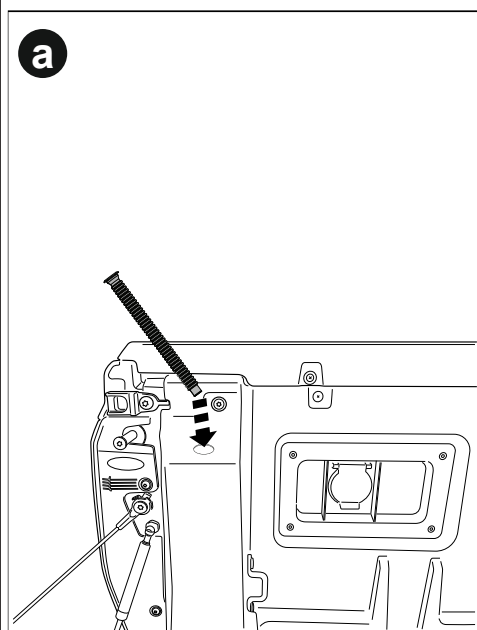


Remove and retain tail lights.

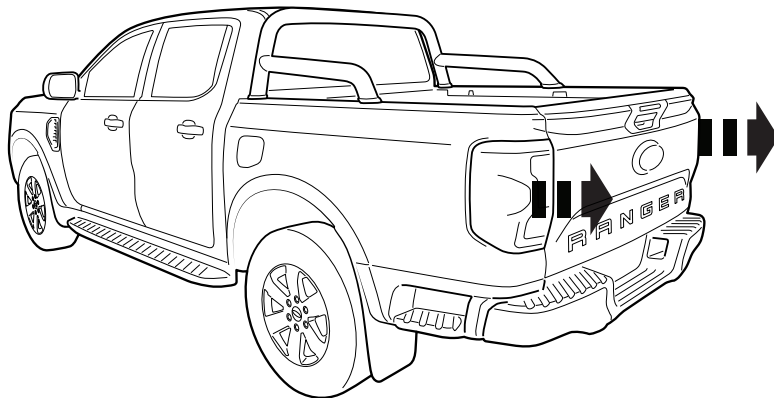


Measure 35mm towards the tailgate from the center of the indicated factory M6 thread. Measure down 75mm from the edge of the plastic trim as directed and make a mark.




Use a 15mm hole-saw to drill through the tub pillar, and file away any sharp edges. Apply an anti-rust coating. Repeat the same steps on the other side.

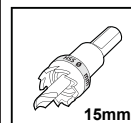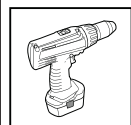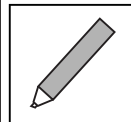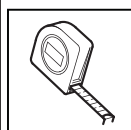

ATTENTION: Do not exceed 15mm hole.

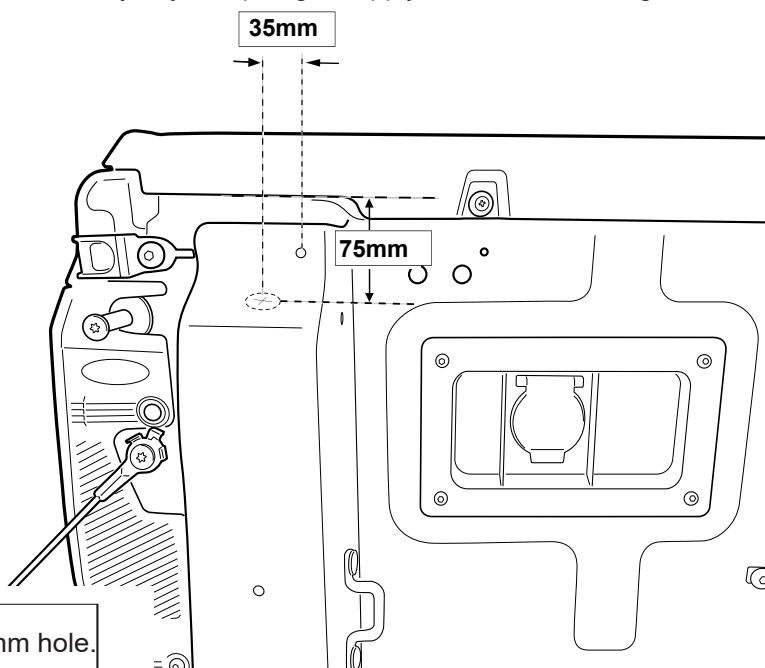


- a** In the specified orientation insert the rear drainage pipe into the previously drilled hole.
- b** Leaving 150mm of the pipe hanging out.
- c** Check the tail light cavity to ensure there are no obstructions to the drainage pipe. Repeat to the other side. Re-fit the tail lights.

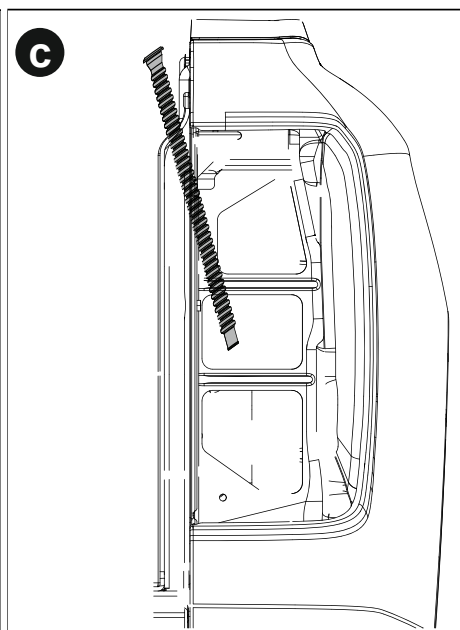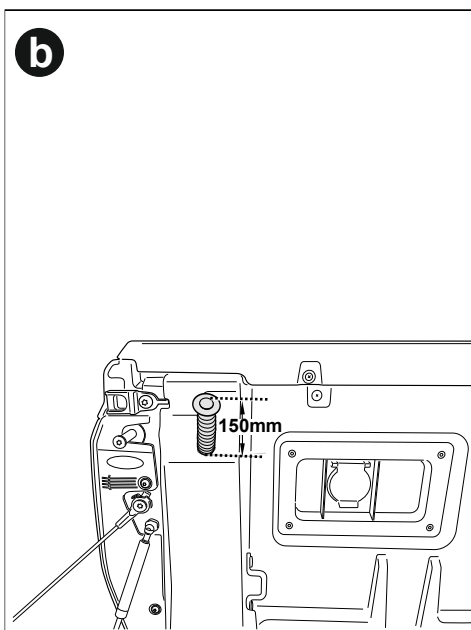
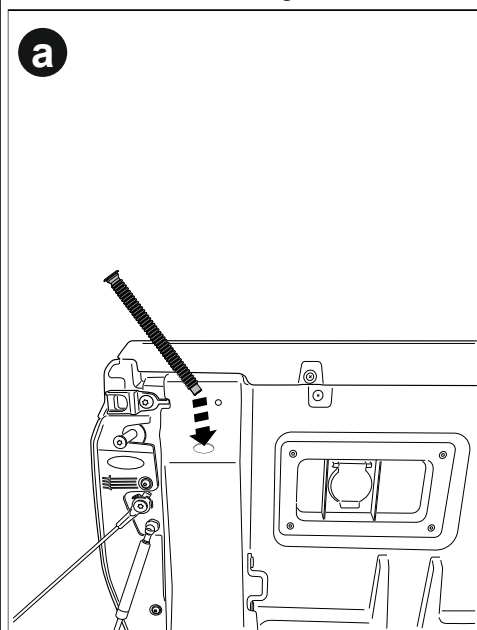


Sealing factory gaps on the bed. It is recommended to use black sealant.


Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.
Clean any excess sealant. Repeat to the other side.

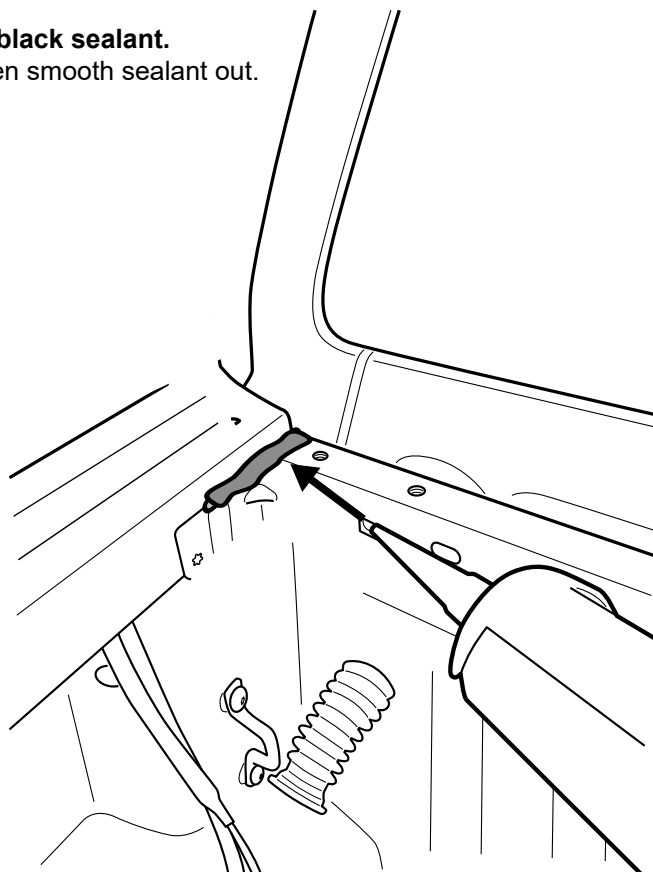


Place front bar assembly (NGR-FBA) over the head board as indicated.

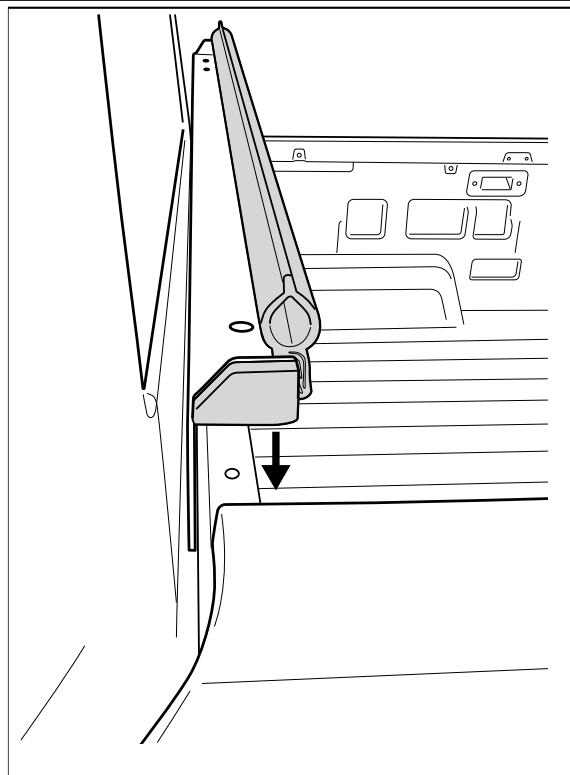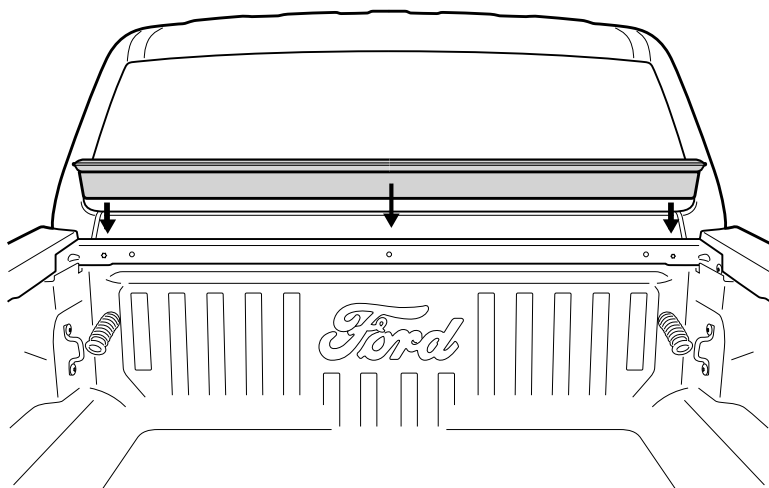


Firmly push down on the FBA bar so it sits centered and flush to the headboard.

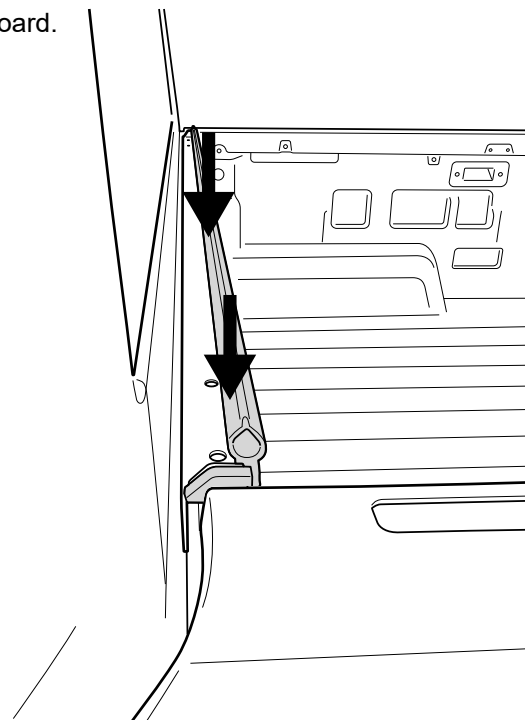

Using black M8 x 25mm bolt, followed by black M8 washer and black M8 rubber washer feed through the indicated holes of the FBA bar and fasten to the tubs headboard.

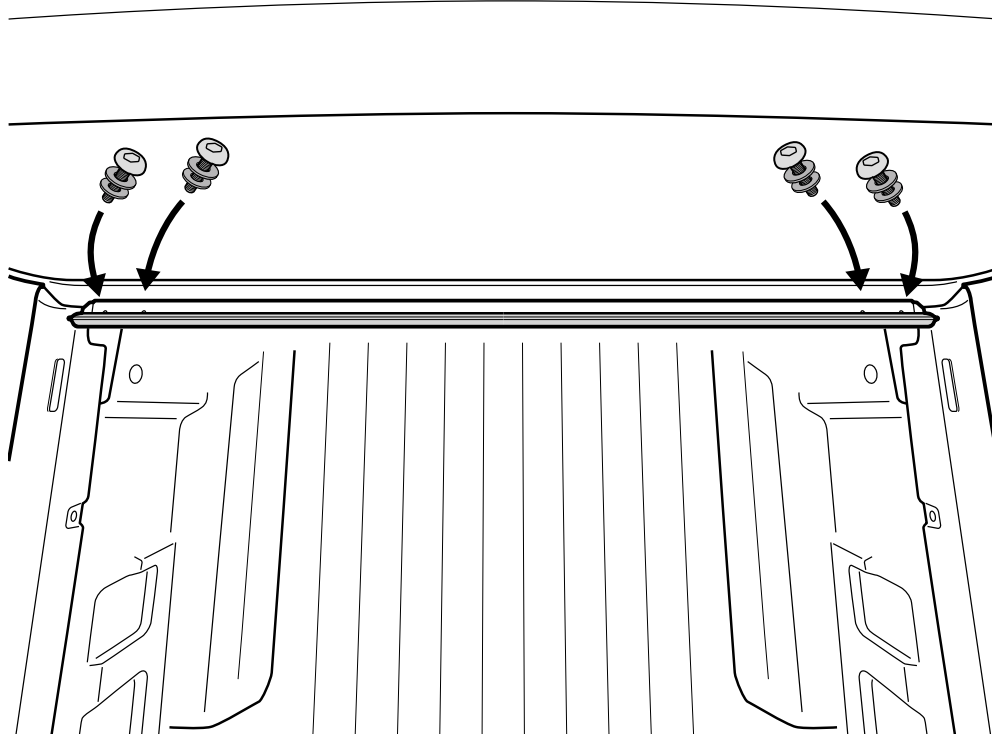


Fasten the bolts to 6NM torque.

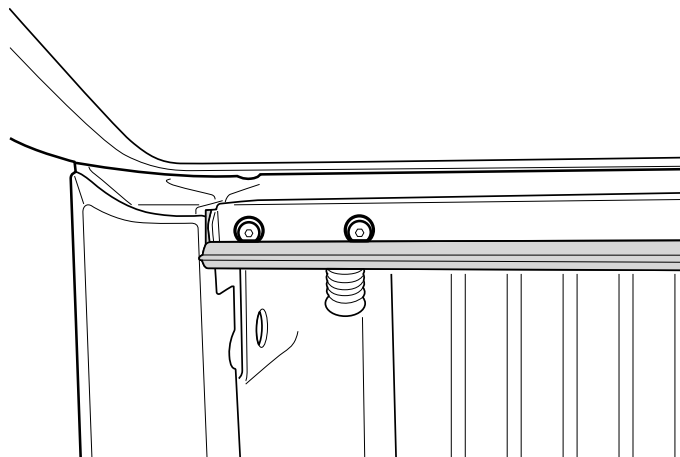



Sealing all gaps between FBA bar and the tub and its fittings.

It is recommended to use black sealant. Apply an adequate amount of sealant to the areas indicated, then smooth sealant out. Clean any excess sealant. Repeat to the other side.

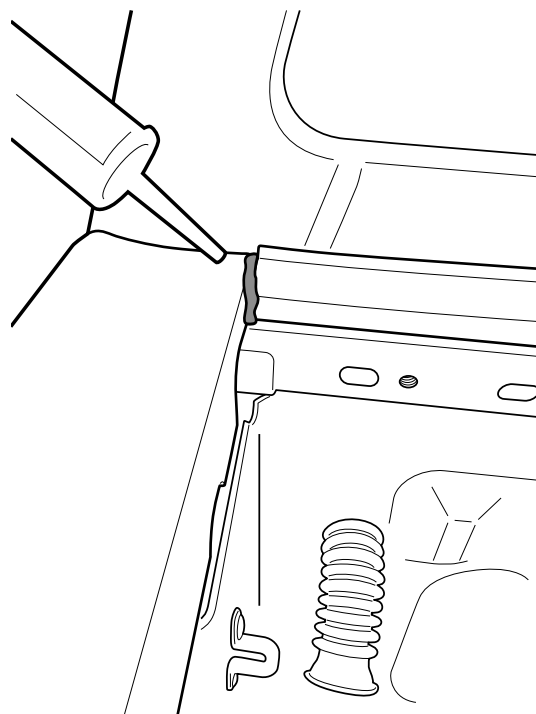


Ensure all openings in the rubber pinch weld fitted to the FBA bar, as well as the tub and its connections, are completely sealed


It is recommended to use black sealant. Apply an adequate amount of sealant to the areas indicated, then smooth sealant out. Clean any excess sealant. Repeat to the other side.

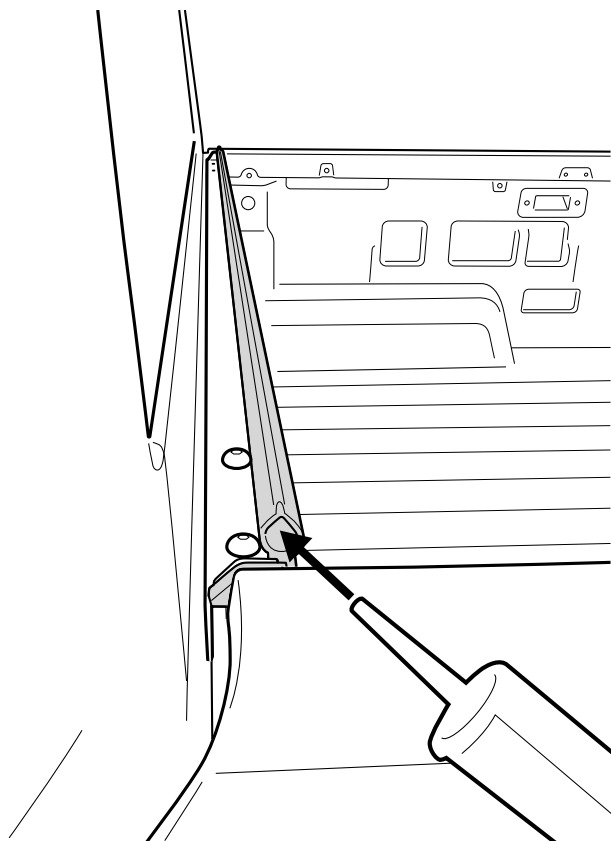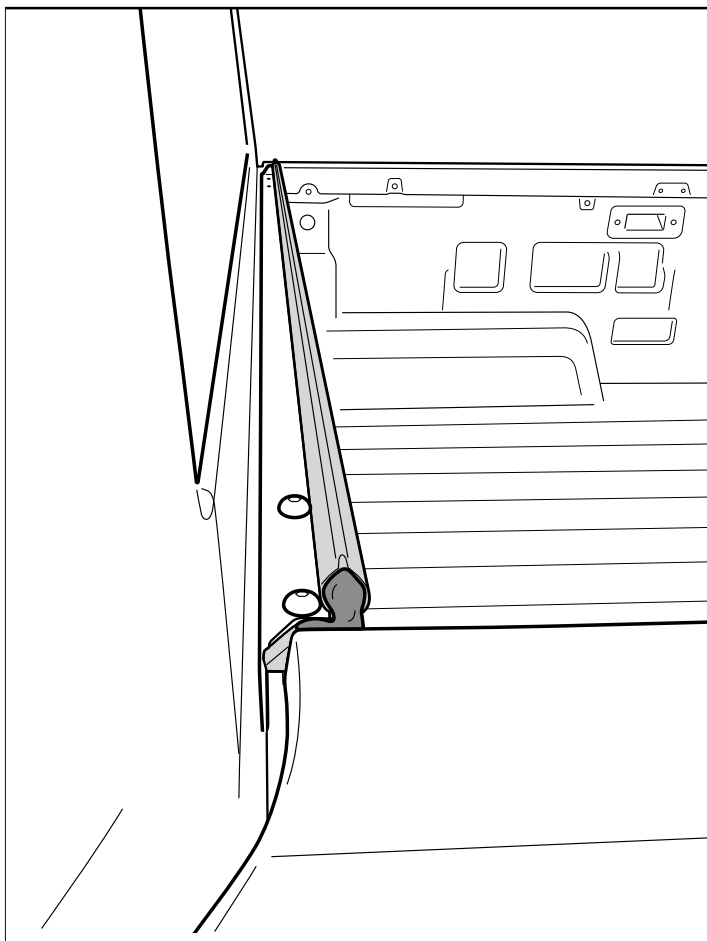


Align RHS brace bracket to the indicated threads of the tub.

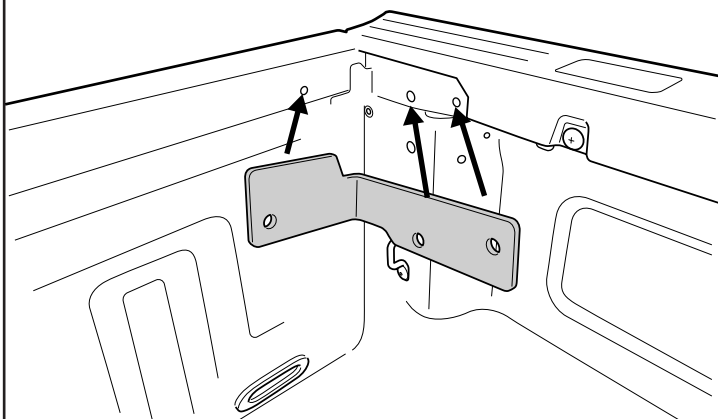

Fasten loosely into position using retained factory bolts.
If factory bolts were not provided use supplied black M8 x 30mm in the kit.

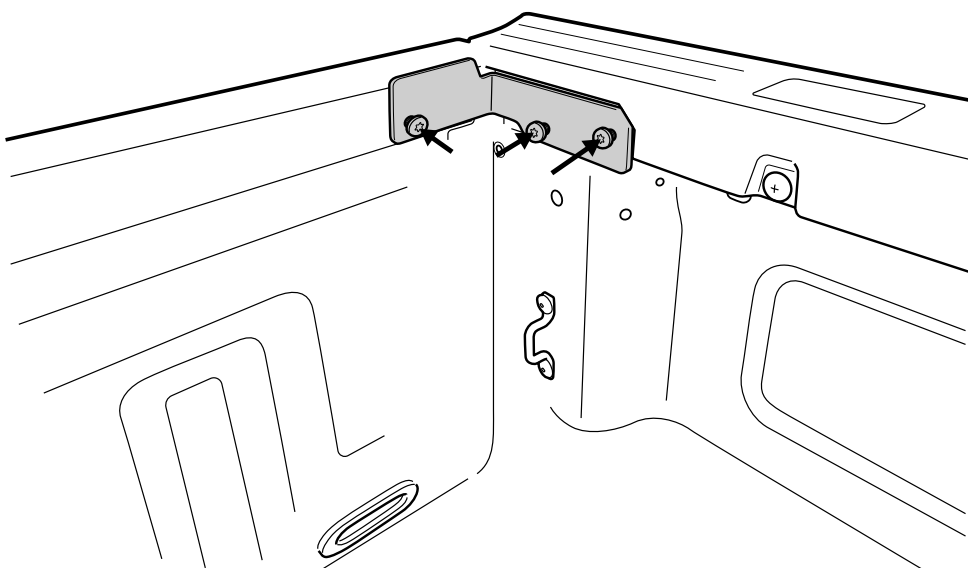


1. Fasten location **a** to 20Nm torque.
2. Fasten location **b** to 20Nm torque.

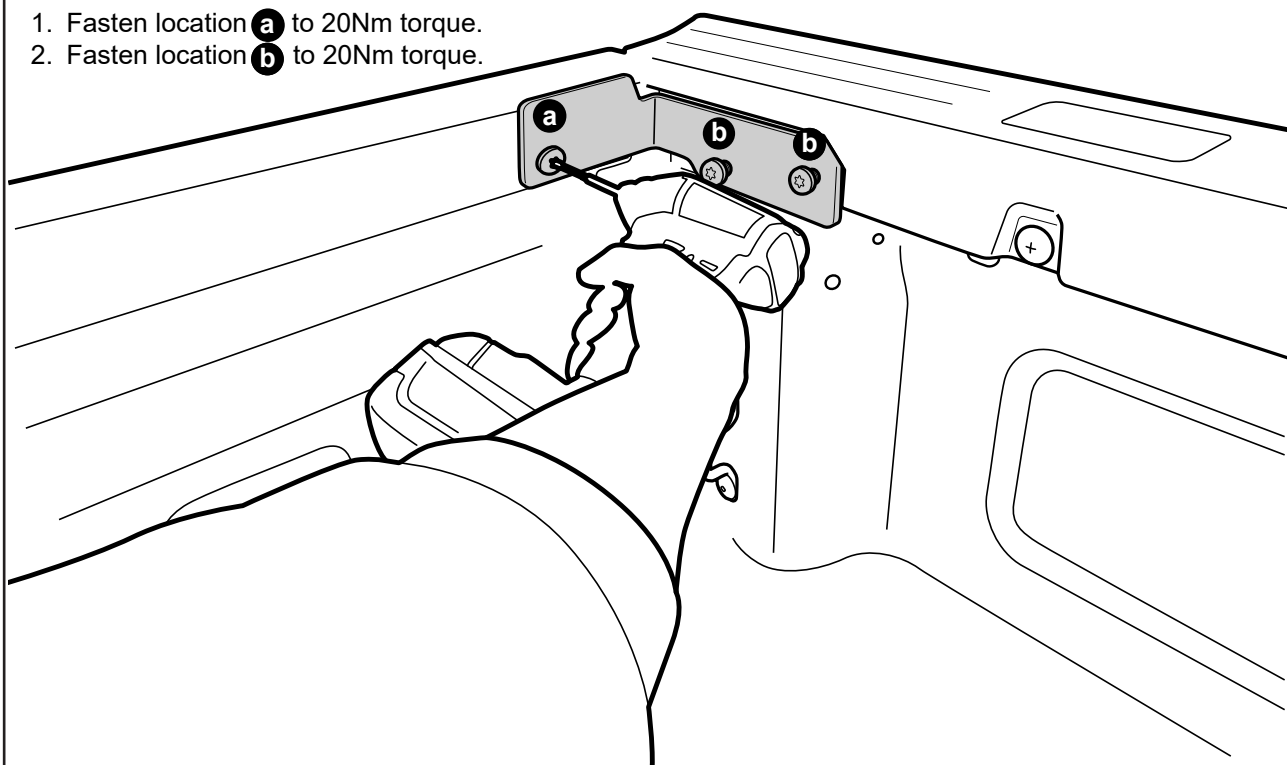

Sealing any gaps on the bed, FBA bar and the brace bracket . It is recommended to use black sealant.

Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.


Clean any excess sealant. Repeat to the other side.

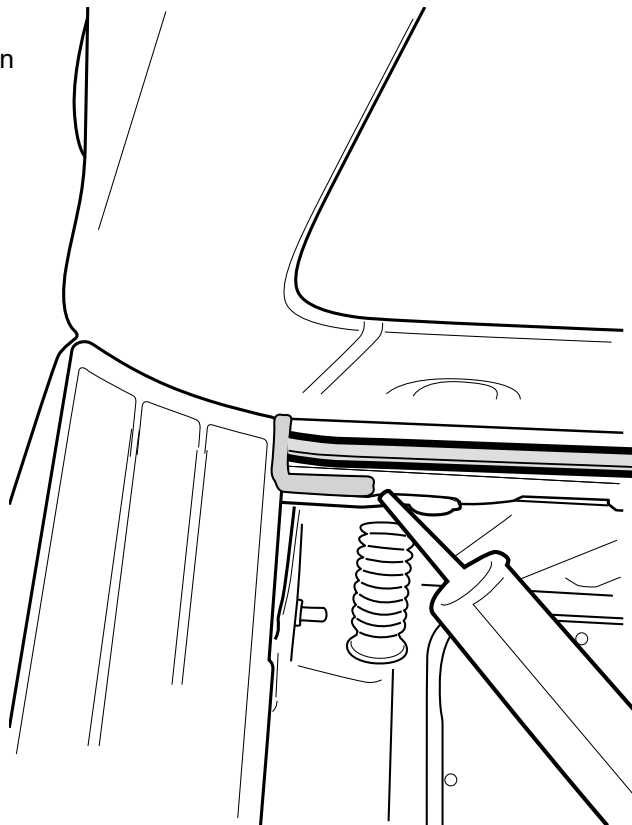


Sealing any gaps on the bed, FBA bar and tub trims. It is recommended to use black sealant.

Apply an adequate amount of sealant to the areas indicated, then smooth sealant out.

Clean any excess sealant. Repeat to the other side.

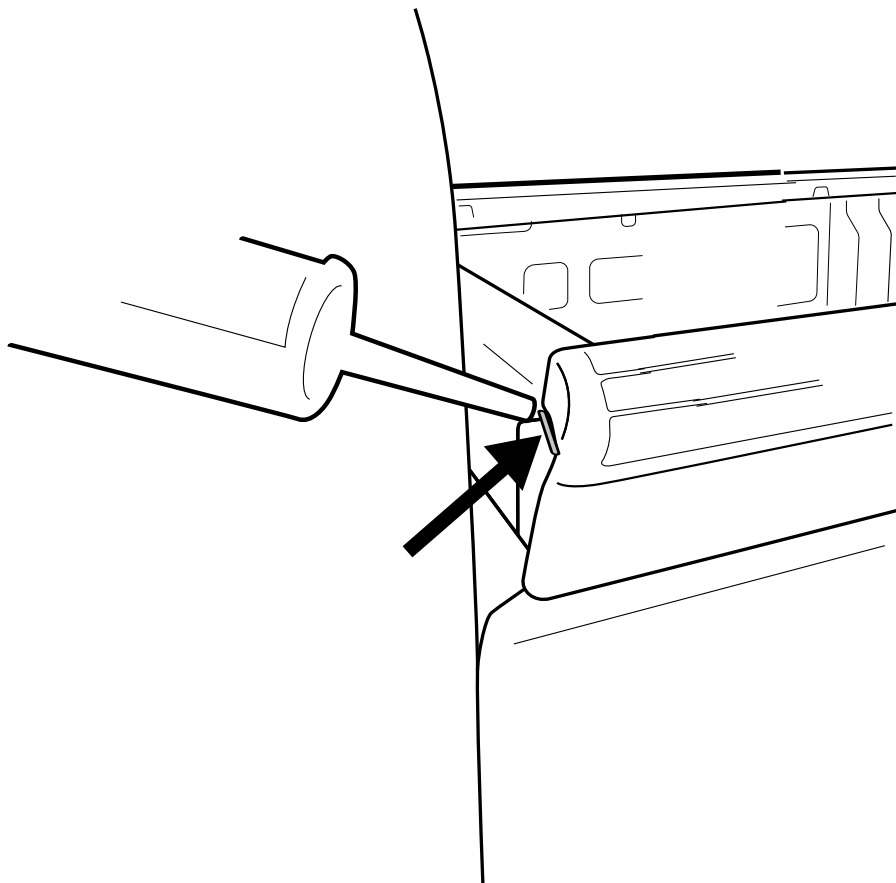


Disconnect fuse patch from battery loom S2.75.

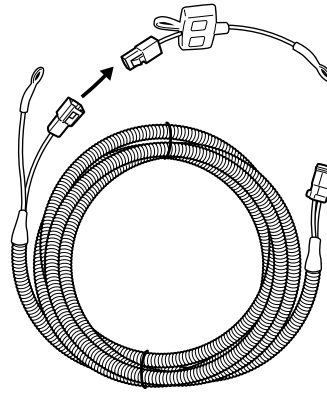


Wiring Harness steps


1 Feed Battery Loom S2.75 through the cavity

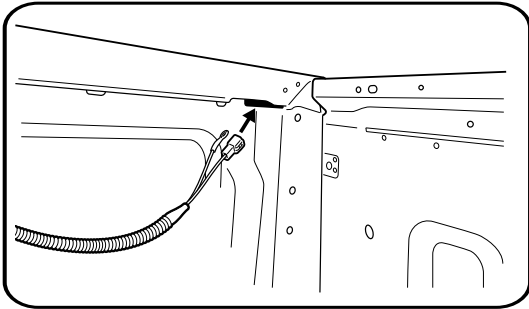

3

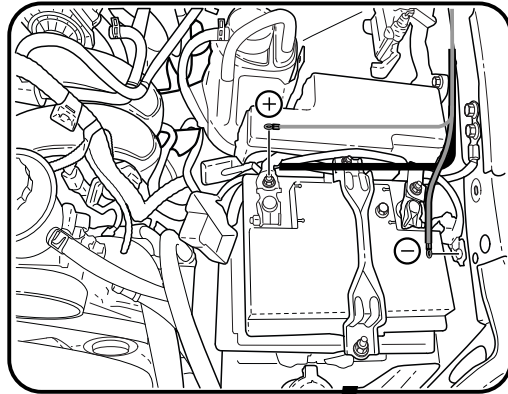


2

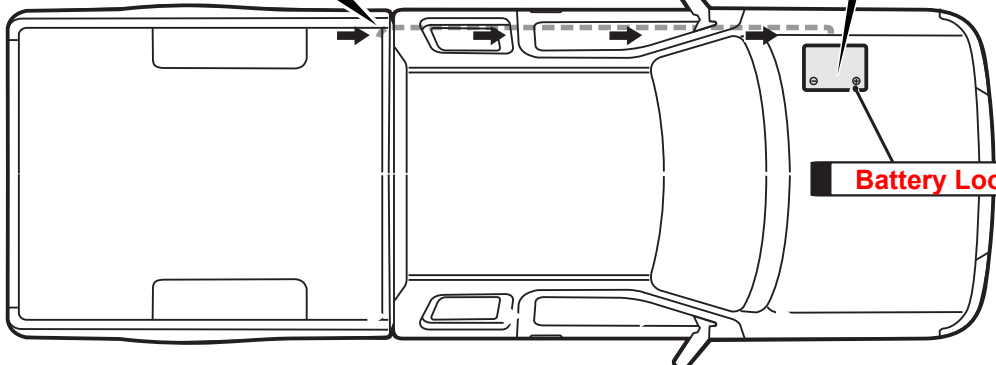


Run the wiring from the front corner cavity (leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.



Feed CL-Short-Loom through the cavity.

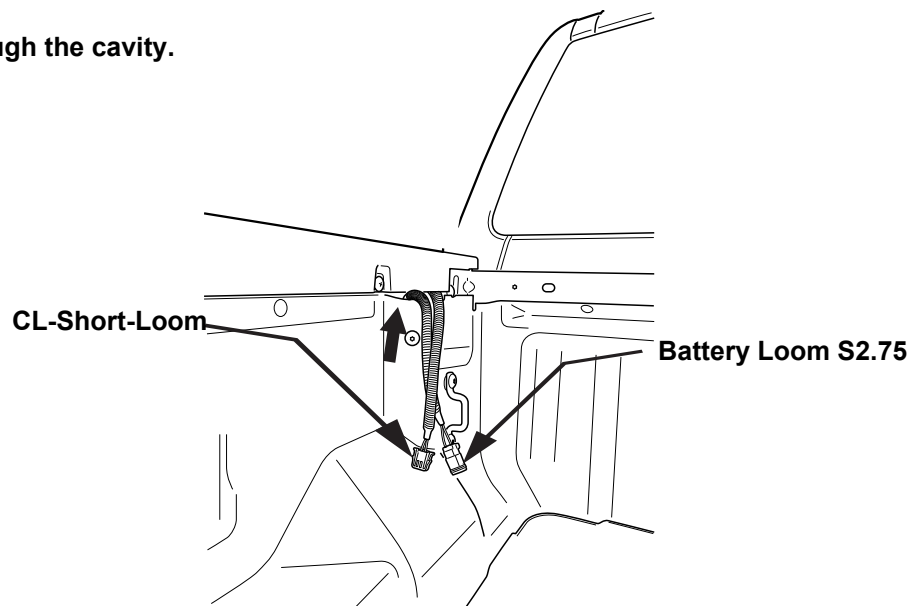

Remove required clips to gain access to passenger side rear wheel arch inner.

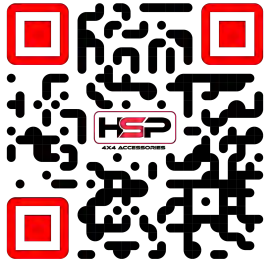



 **VISUAL TIP**

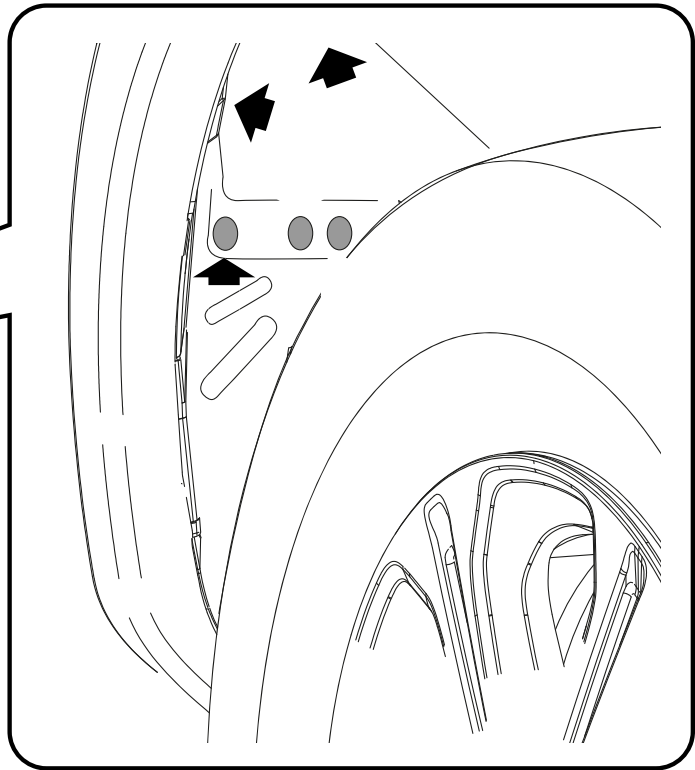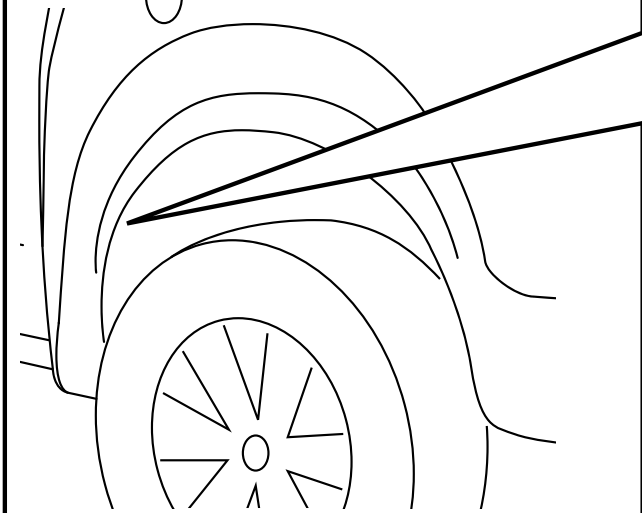

NOTE: image used is for illustration purpose only.



1. Disconnect the fuel flap actuator connector (1).
2. Patch the NGR-Patch to fuel cap actuator connector and actuator connector.
3. Use one zip tie to secure the harness to the existing harness.
4. Connect CL-Short-Loom to NGR-Patch. Zip tie any loose loom within wheel arch.

FUEL CAP ACTUATOR
CONNECTOR

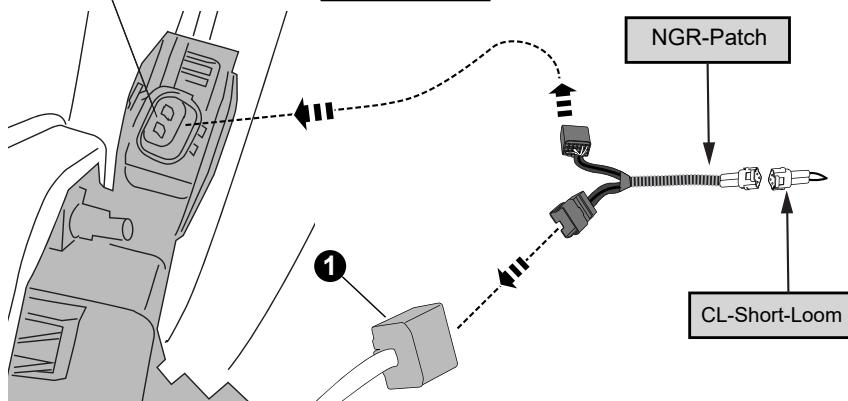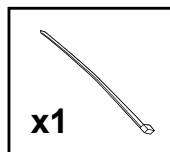


NOTE: image used is for illustration purpose only.

keep the cannister in the foam blocks from the packaging for assembly.


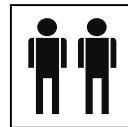
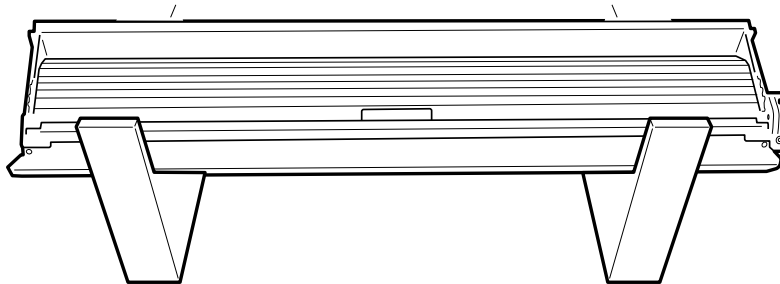


With assistance turn the canister on its back on the foam blocks.


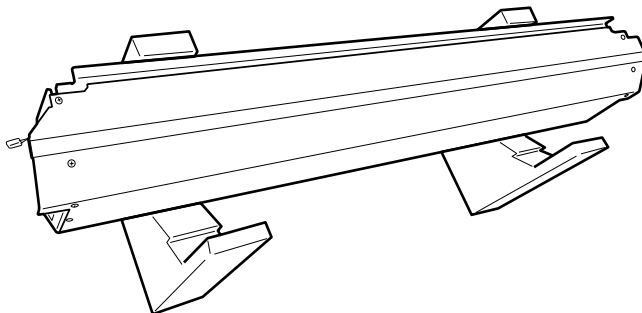


Disengage motor from the axle by unfastening the 3 Screws as indicated. Retain all parts.

Remove and retain the 3 screw from the canister as indicated.

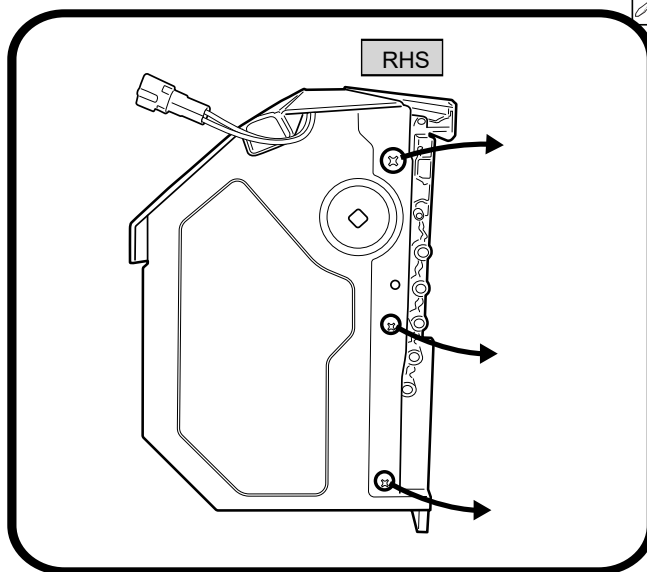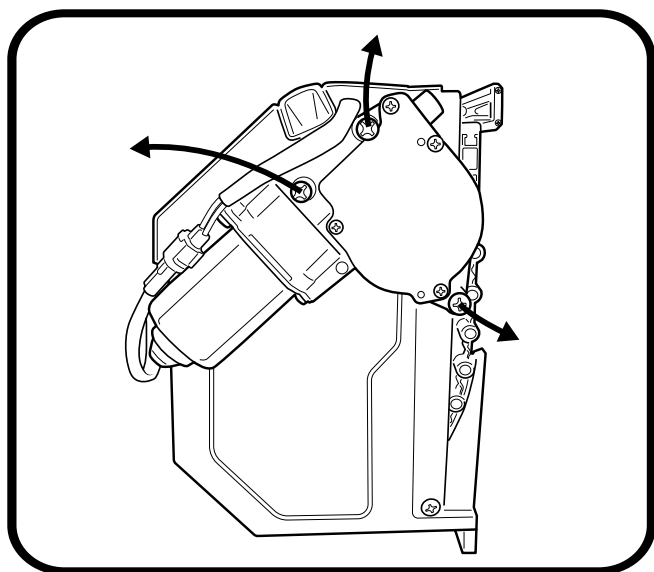

Now on the other side, remove and retain the 4 screws from the canister as indicated.

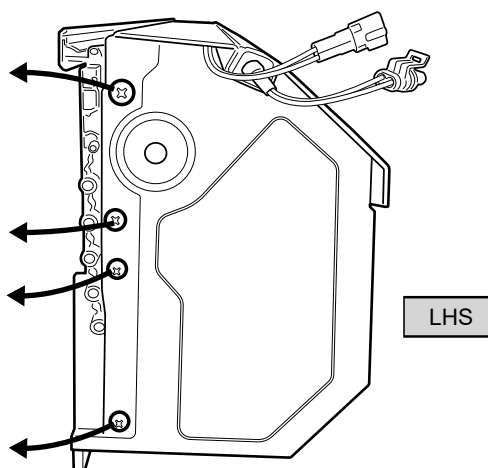
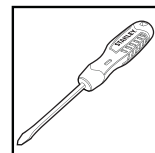




Important Note: Ensure that the Z seal within the track is positioned over the curtain and not folded inward. **WARRANTY** voided if assembled incorrectly.





 **VISUAL TIP**


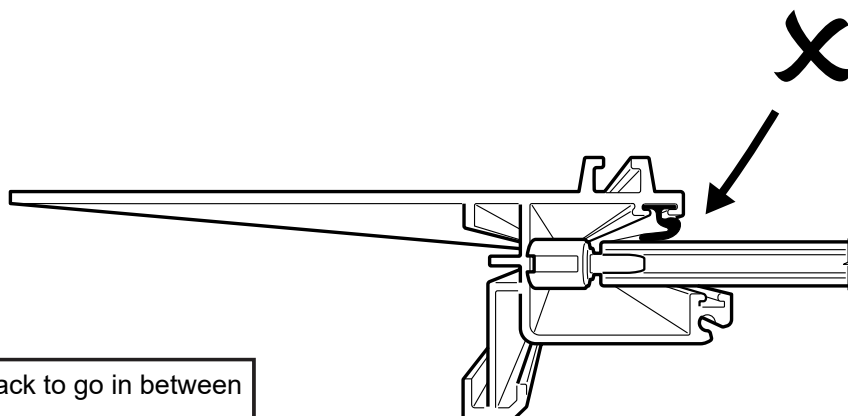
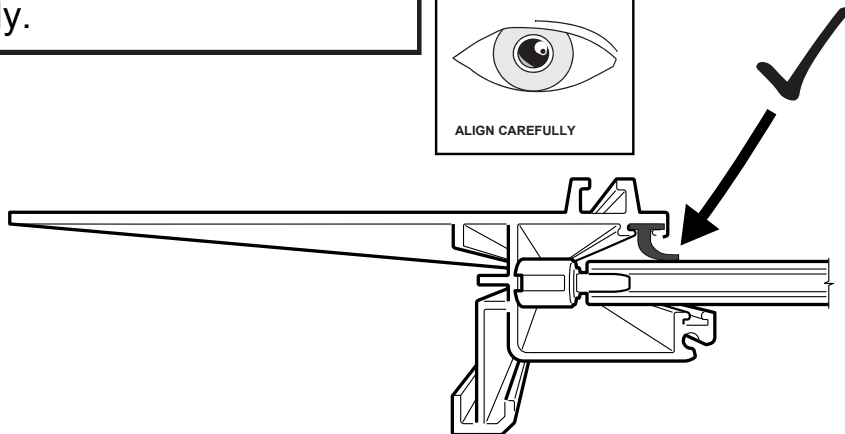


Align side rail to side of canister, guide the track to go in between the curtain end rubber stop.


NOTE: LHS side rail to be assembled first.

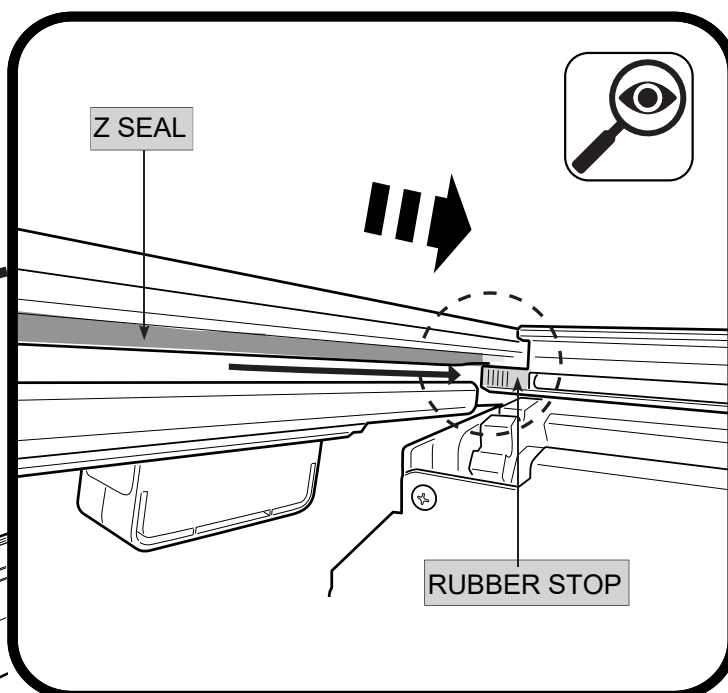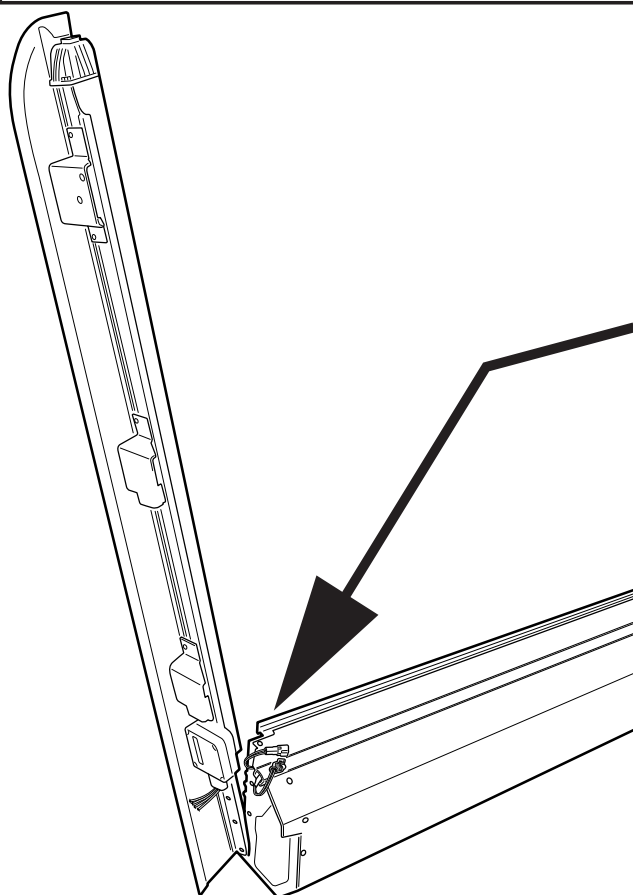


1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
2. Side rail edge must compress and meet with the canister profile as indicated below.
3. Fasten all screws tight.

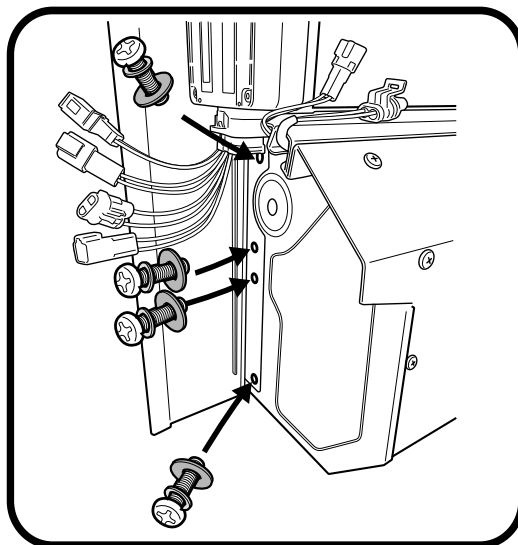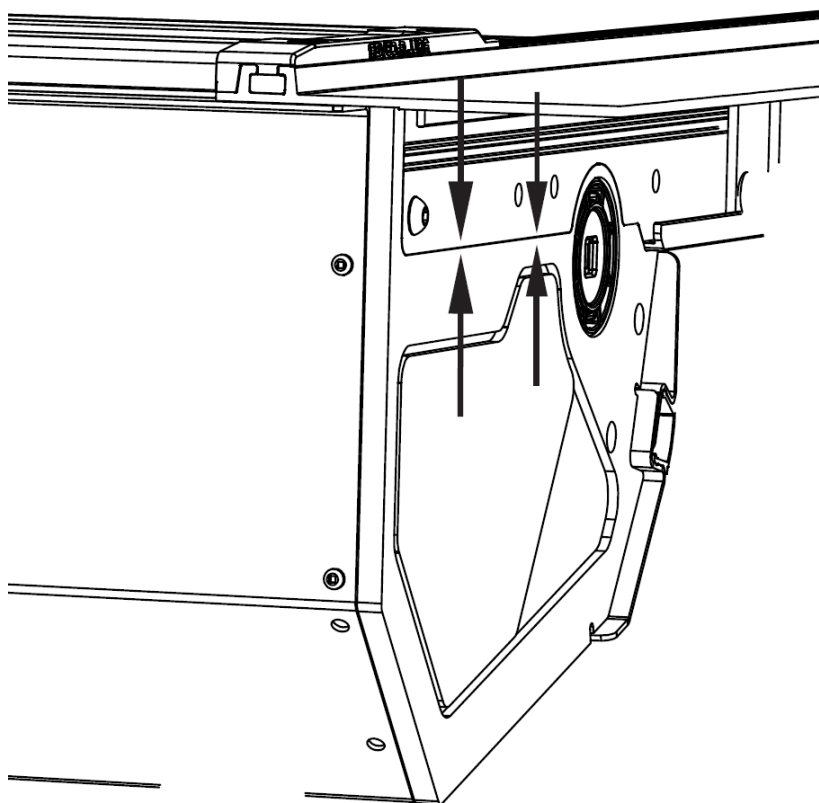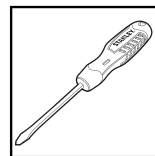

Connect motor connector to receiver




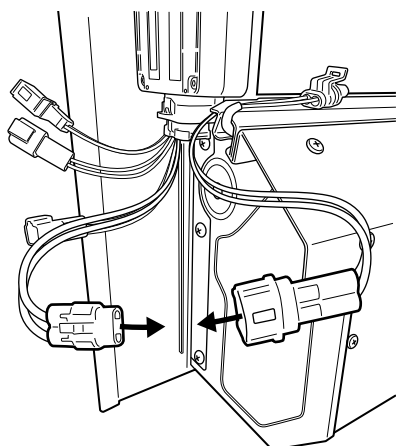


Connect LED Loom to receiver

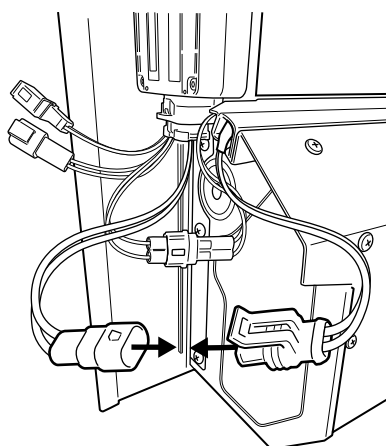





Important Note: Ensure that the Z seal within the track is positioned over the curtain and not folded inward. **WARRANTY** voided if assembled incorrectly.

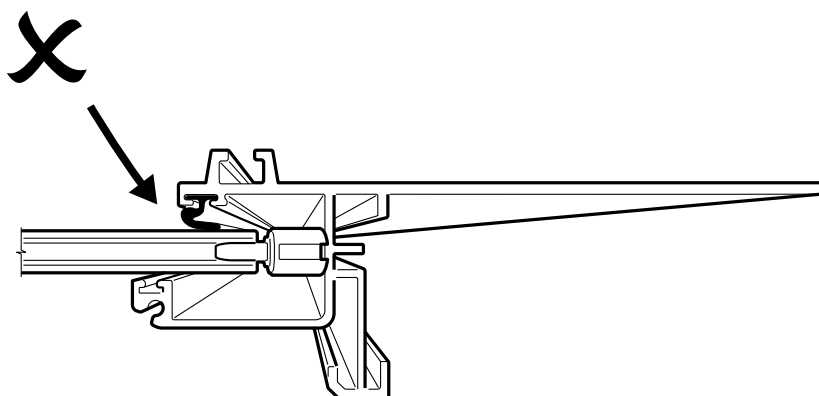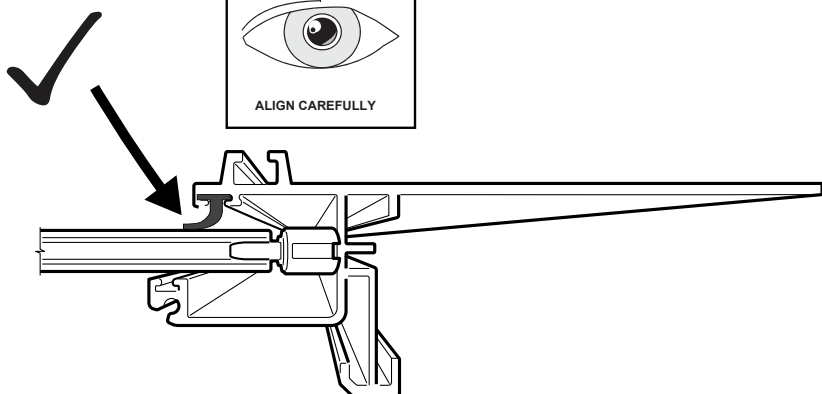

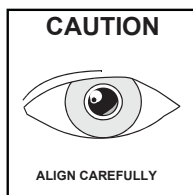


Align side rail to side of canister, guide the track to go in between the curtain end rubber stop.

NOTE: LHS side rail to be assembled first.

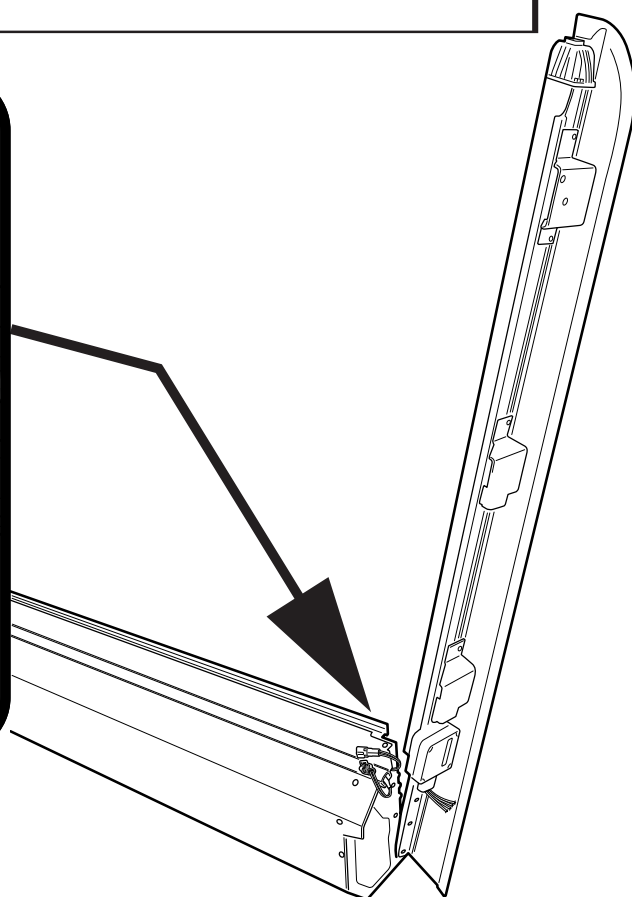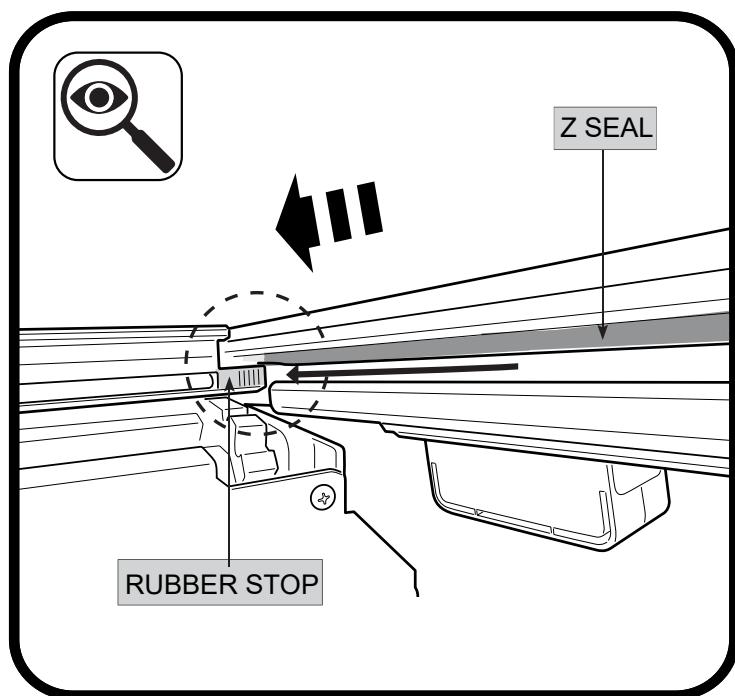


1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
2. Side rail edge must compress and meet with the canister profile as indicated below.
3. Fasten all screws tight.

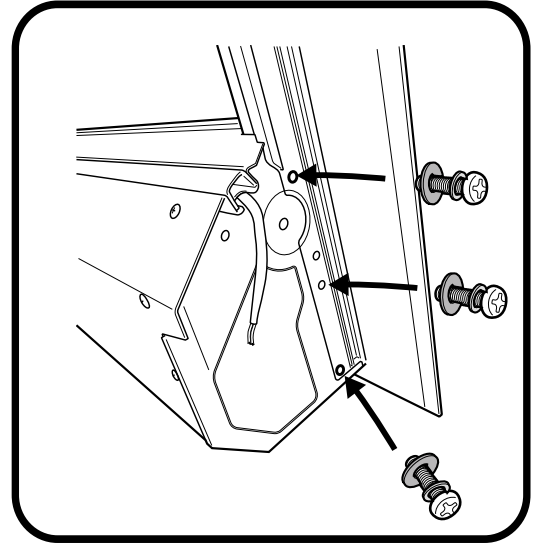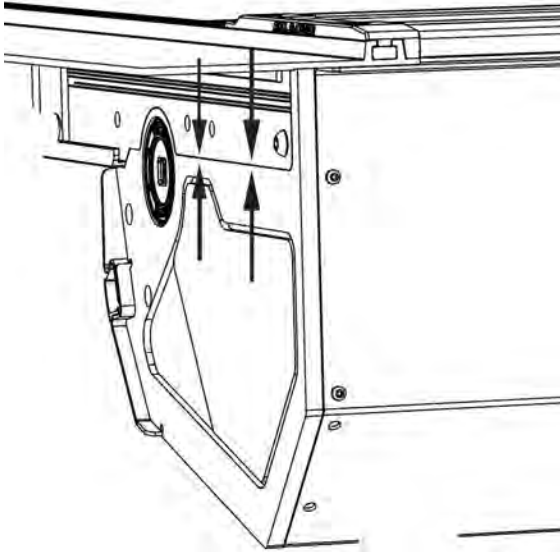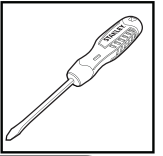



Feed M6 bolt through spring washer, motor and rubber bush.

NOTE: Rubber bush orientation has to be as per image. (side with text on rubber, to face the motor).

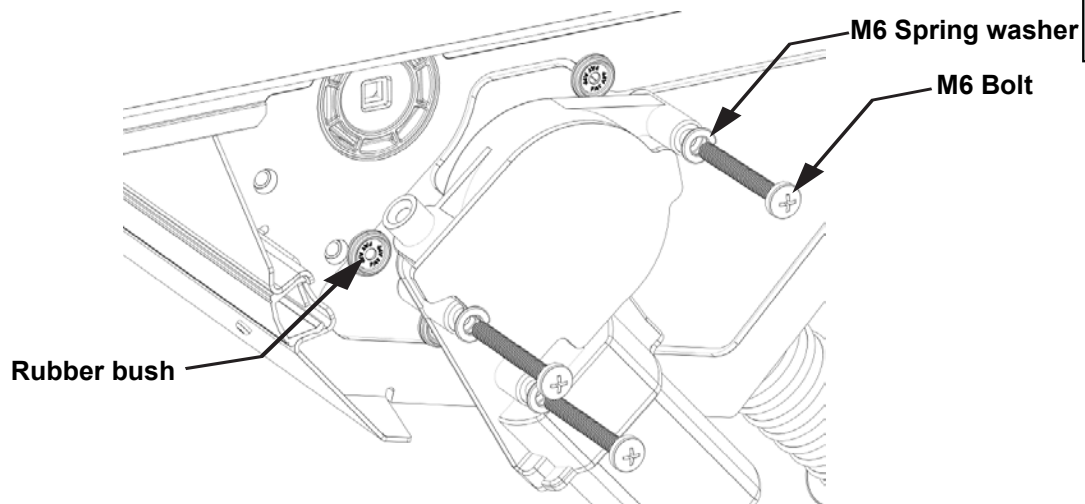



Align & insert motor shaft to axle.

NOTE: Pull / push curtain for axle to rotate.

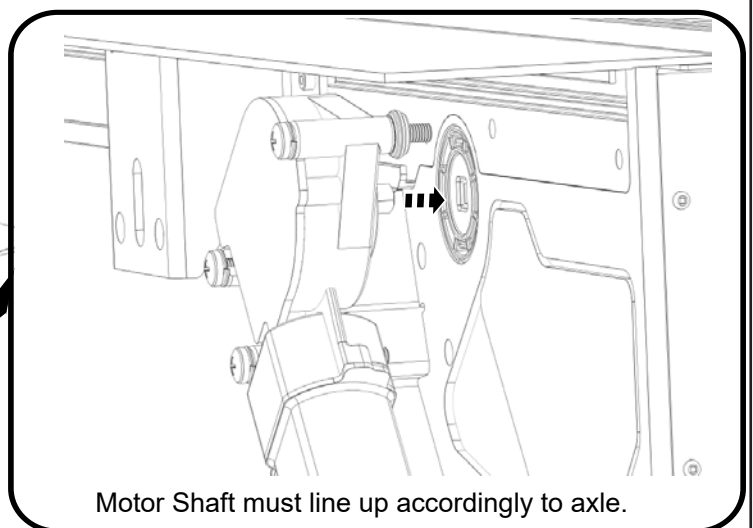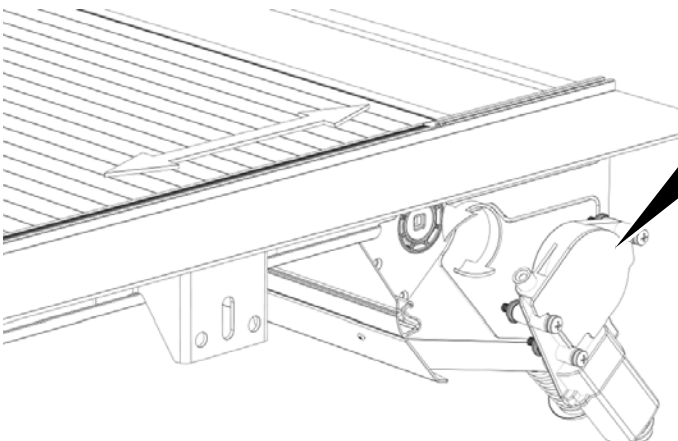

Motor Shaft must line up accordingly to axle.


Fasten all 3 screws to 2nm torque. Over tensioning will cause operating issue's.

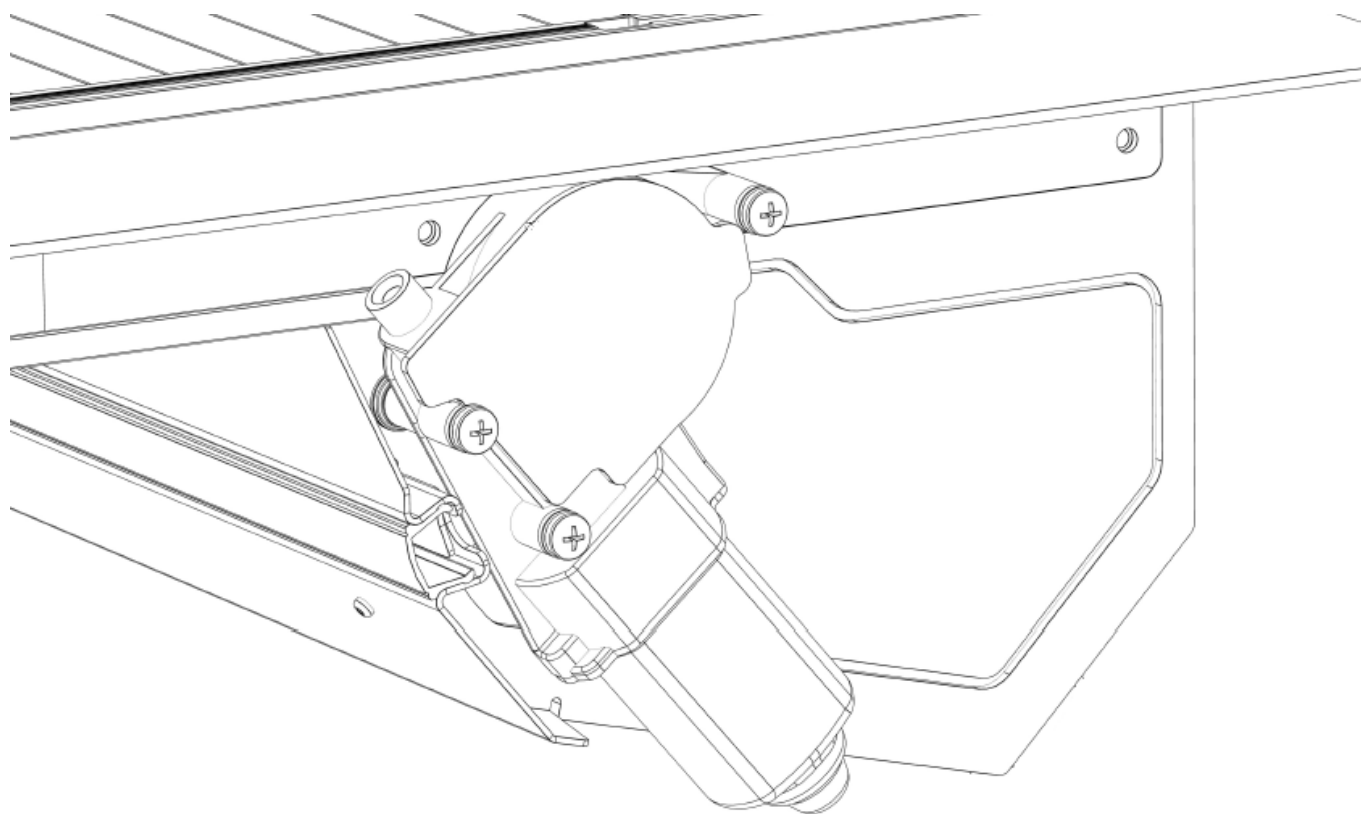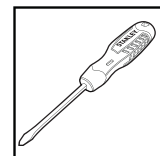


Motor is to sit level.

Any obstructions between motor and canister may cause operating issues.


Carefully bring down the assembled unit.

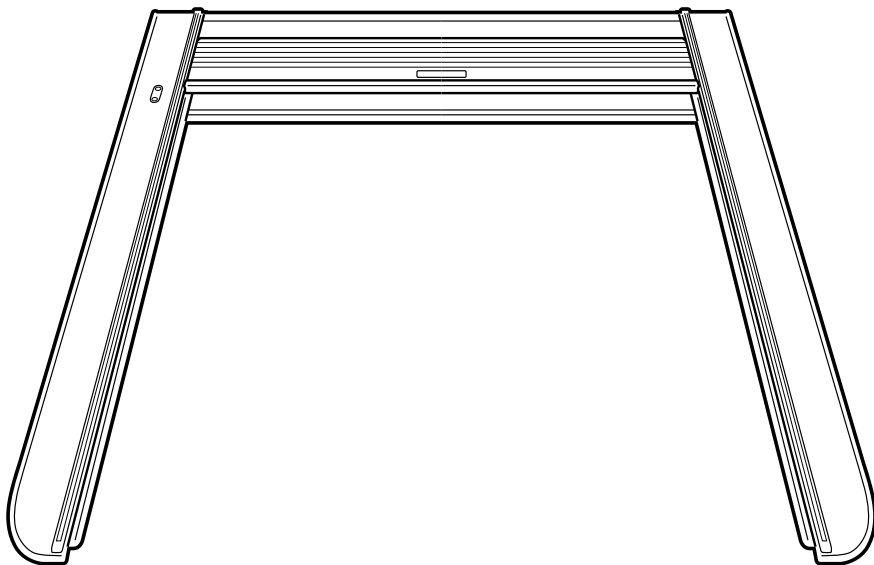


Insert side end caps to the top cover.

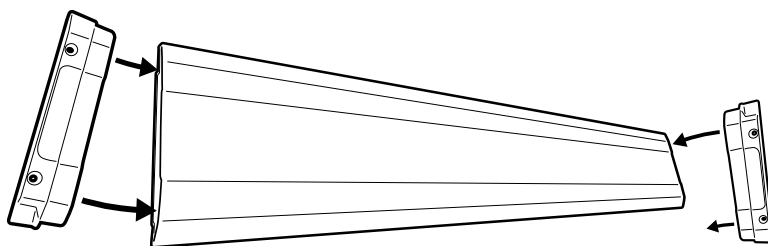


Place & Align top cover over the canister and side rails.

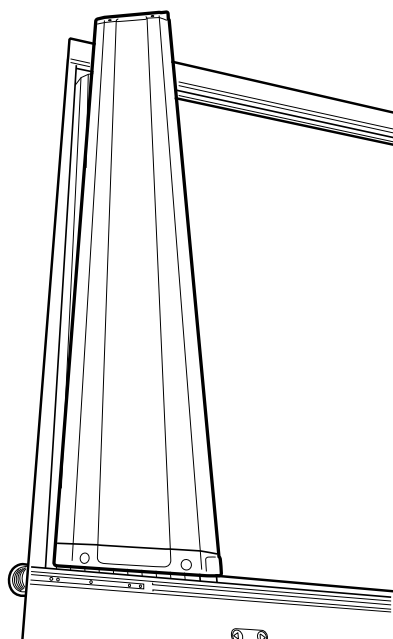


Using countersunk screws provided, line up end cap holes to the threads on the side rail. Fasten to 3nm torque. Repeat to the other side.

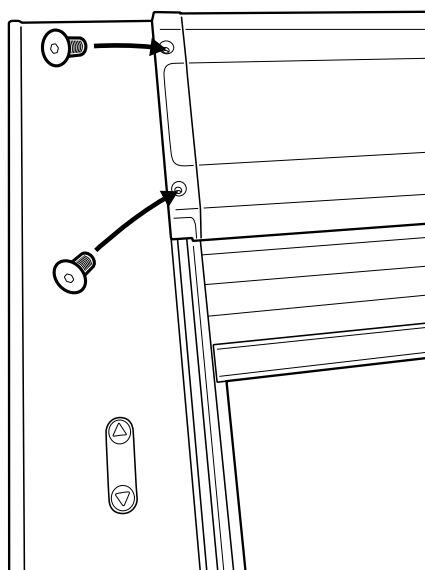



Place the Roll-R-Cover unit on to Ute bed.

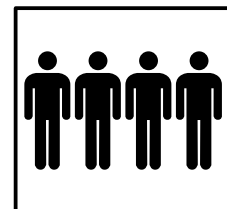

4 People
Recommended for lift

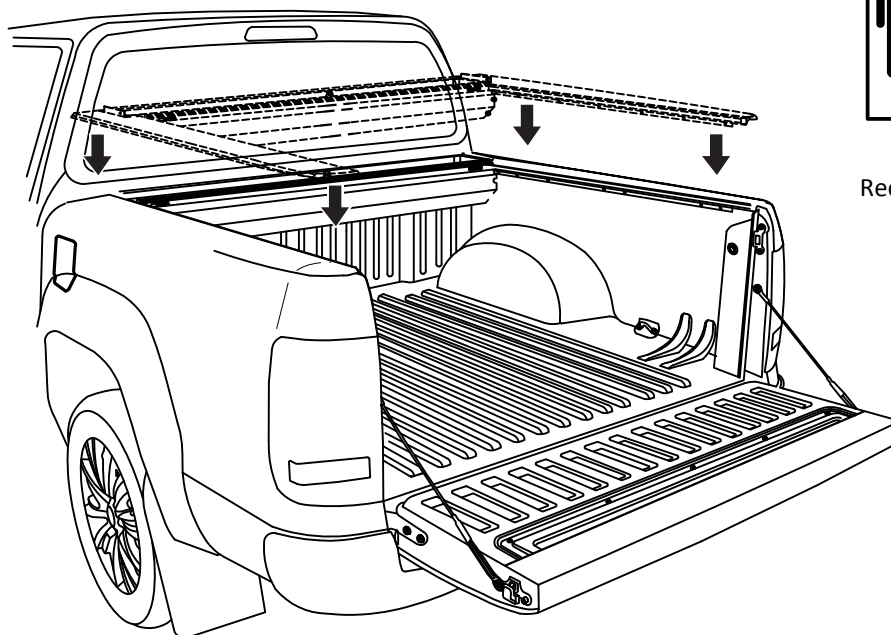

With care, pull out any side rubber
that has folded under the side rail.

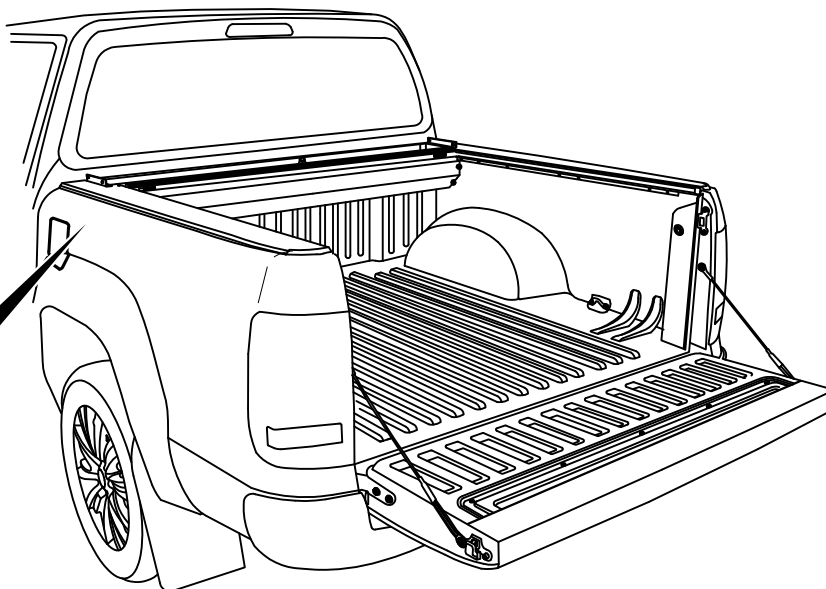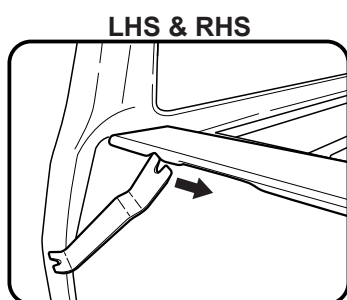

With the tailgate up (Closed position), Pull left & right hand side rails towards the tailgate, stopping short by 7mm between tailgates plastic top covers inner wall and side-rail end-cap.



Foam compressed to 7mm when tailgate is closed.

7mm



Gap between tailgate and side-rail end cap to be 7mm.



Foam compressed to 7mm when tailgate is closed.

Side rail end cap


Foam seal

TAILGATE



10 20 30 40 50

7mm


Locate spacers with 1 notch to the areas indicated.
Push the spacer up and level with the side rail clamp bracket as indicated.

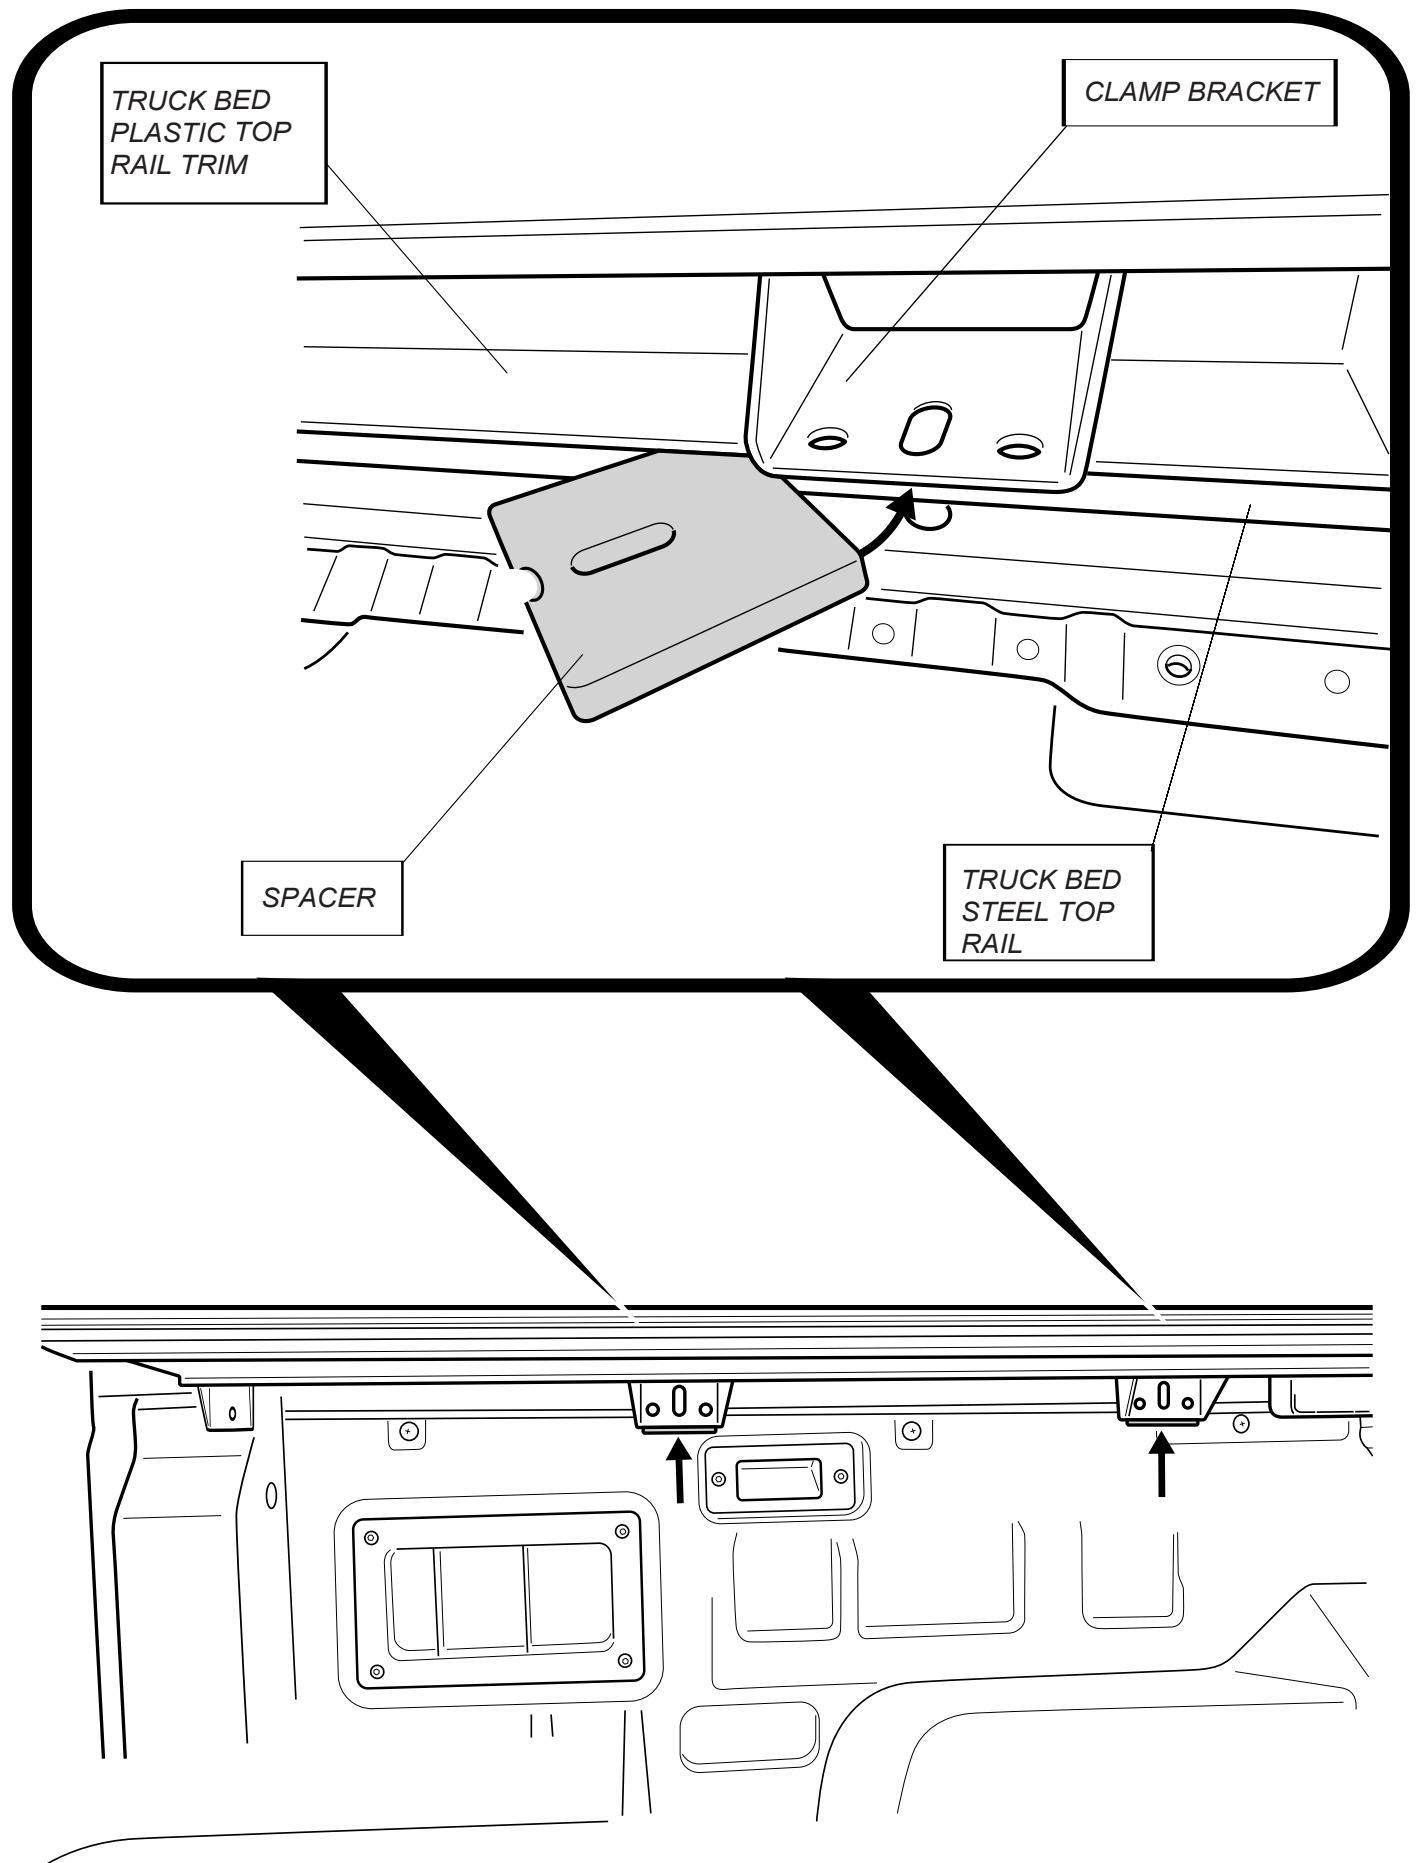

1. Rear brackets elongated hole will line up with the thread in the body as indicated.
2. Feed assembled M6x20mm pan head bolt through bracket and loosely fasten to the thread of the ute bed.


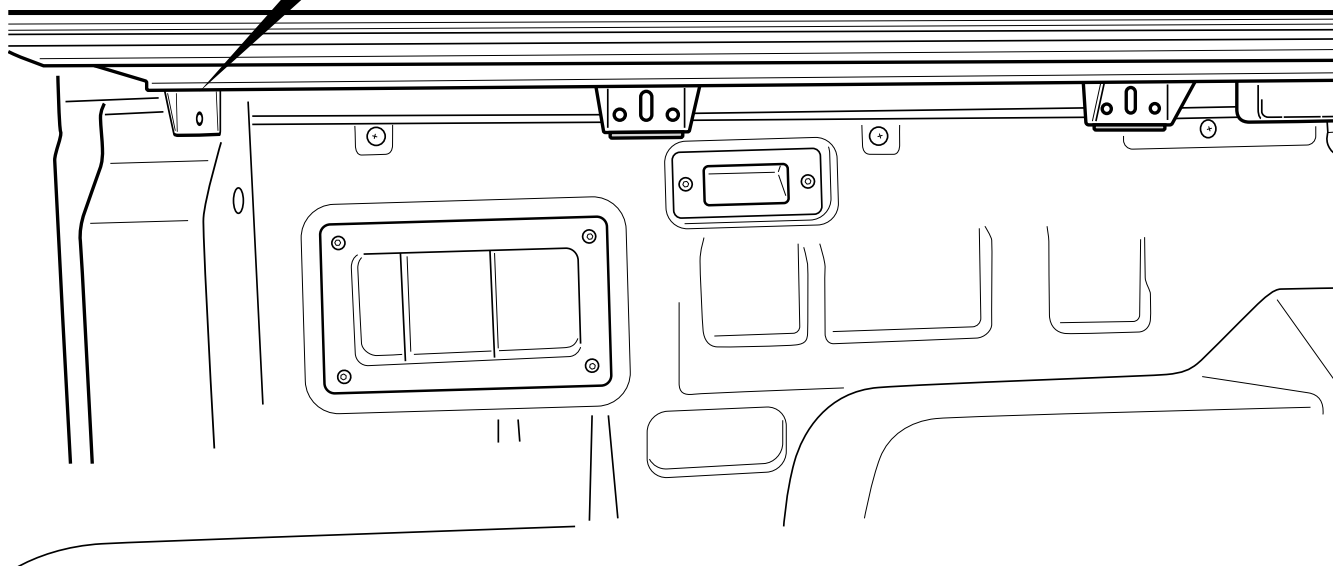
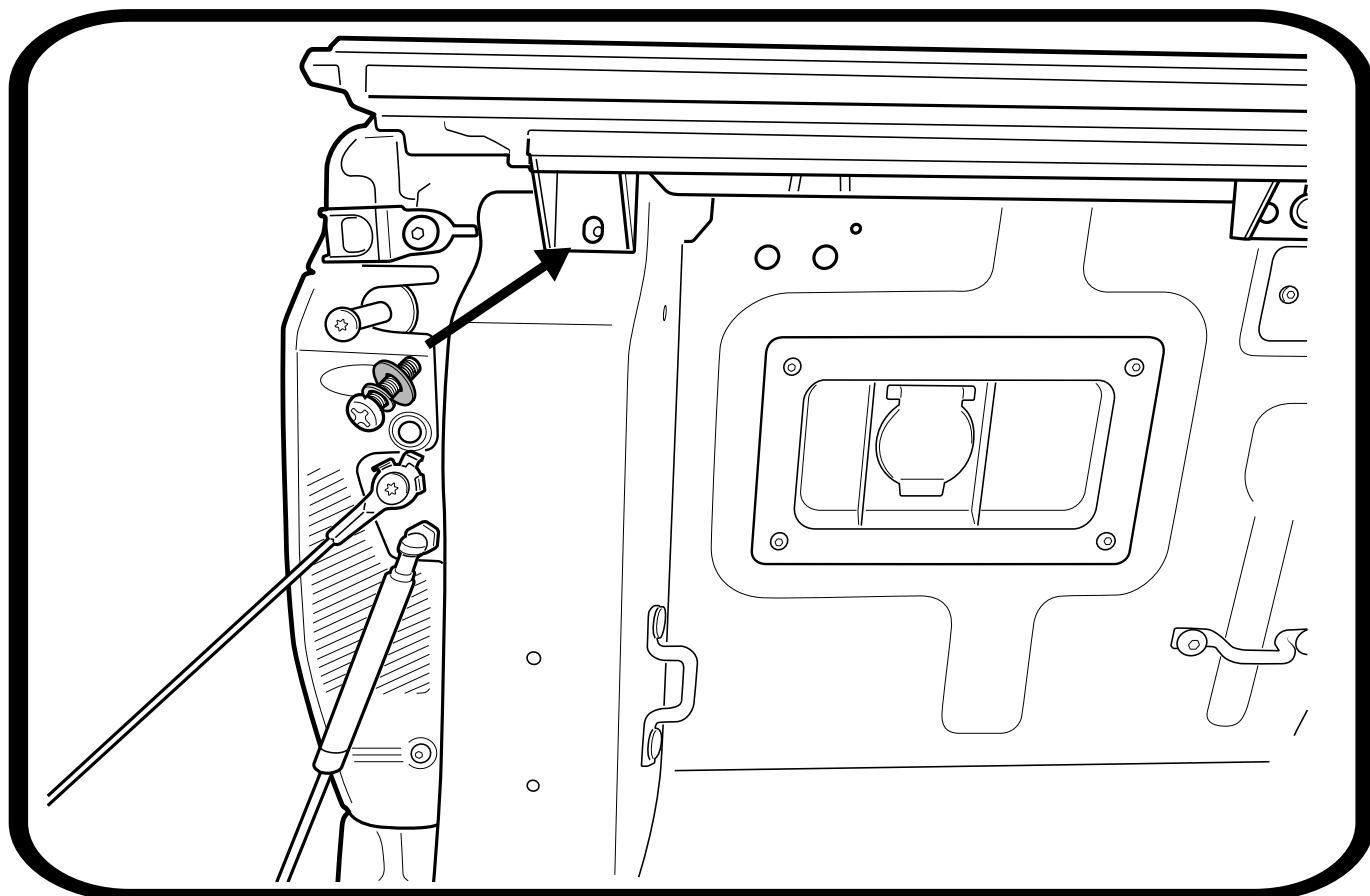


To the locations indicated below position clamp behind the inner top lip of the bed rail and the center elongated hole of the side rail mounting brackets. **Note:** The line on the clamp indicates that the clamp should be facing upright toward the side rails. Repeat to other side.

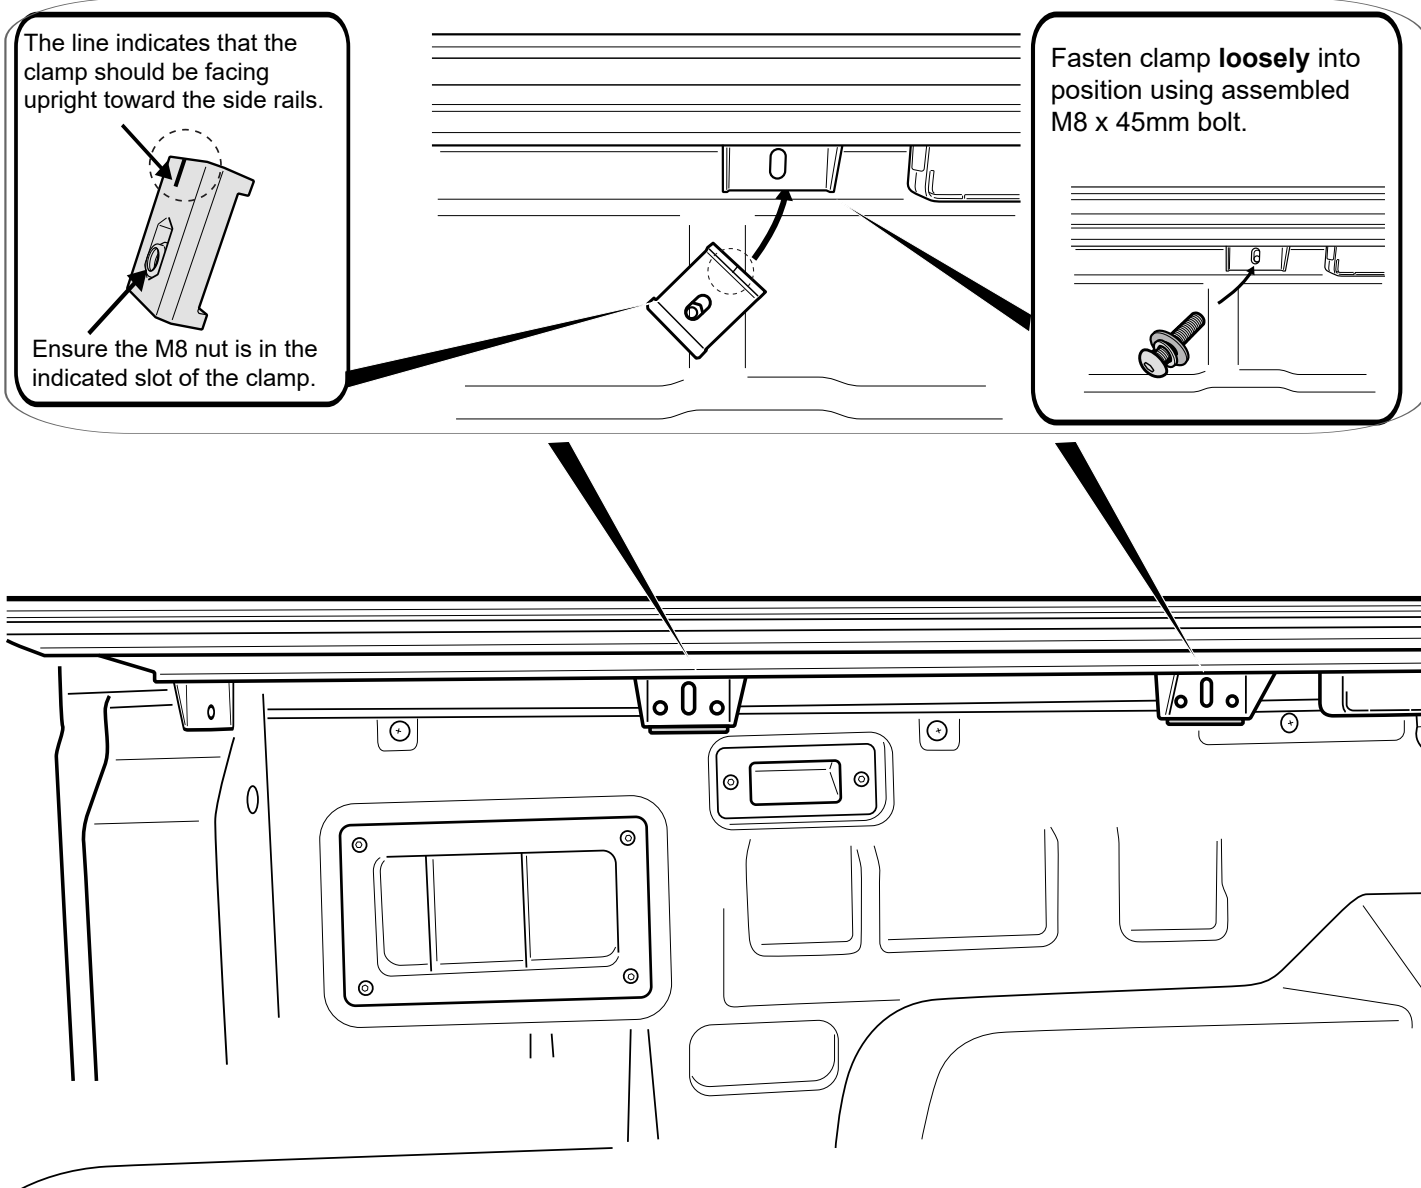




Please follow the steps in order starting with point 1.

1. With assistance apply down pressure to the side rail surface. Keeping that position, now fasten the M6 x 20mm pan head bolt to 8Nm torque.
2. Making sure the black spacer is still in-line with the bottom of side rails clamp bracket, push clamps up as far as possible into the inner rail of the tub and fasten bolts to 10Nm torque.
3. Making sure the black spacer is still in-line with the bottom of side rails clamp bracket, push clamps up as far as possible into the inner rail of the tub and fasten bolts to 10Nm torque.

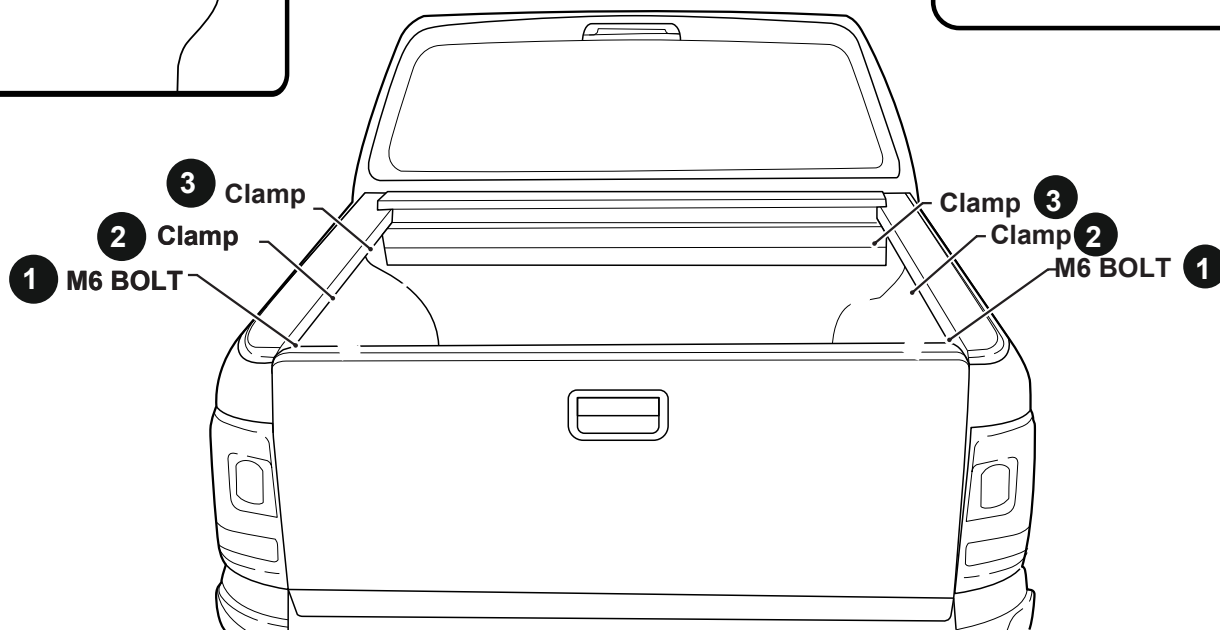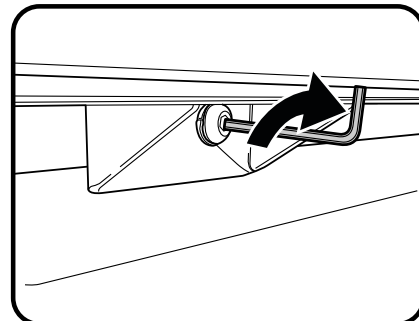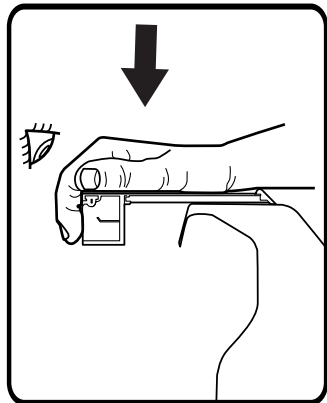


Side rail to sit level, side rail seal will sit below the top of the tailgate in the closed position.

If required M6 pan head bolt can be loosened to push the side rails further down or lift up. Fasten bolt to 8Nm torque.

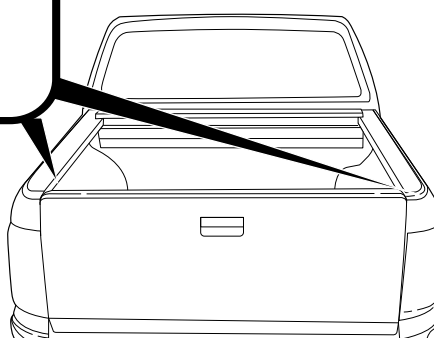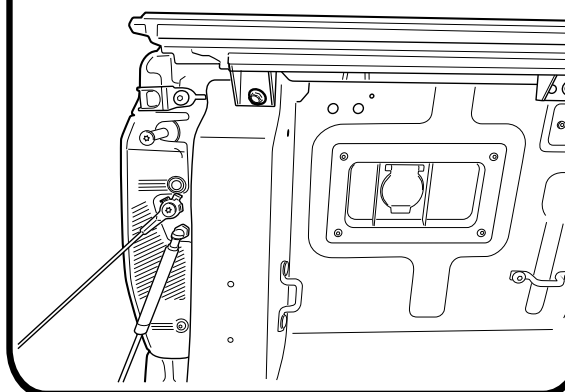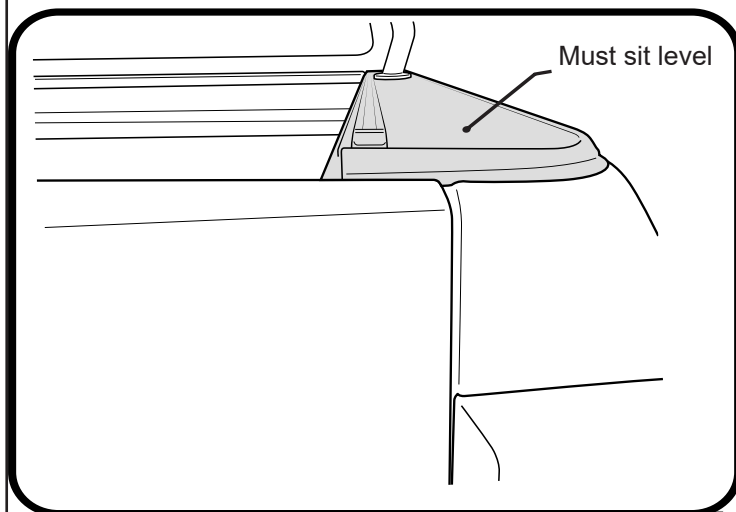

Siderail seal will sit tucked in at indicated position of the the tailgate plastic trim.

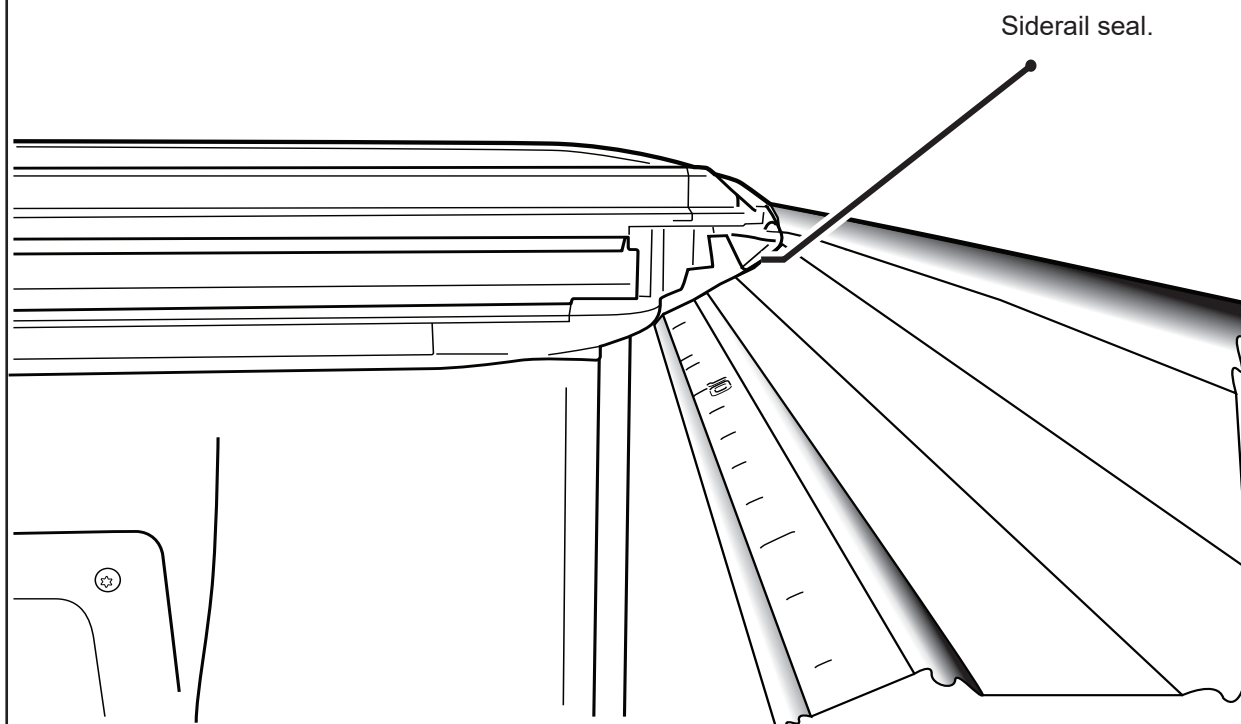




Install front drain pipes through pre-drilled holes of the canister. (RHS/LHS)







Note: With care push tube in. Gently pull the tube back so it seals correctly against the front panel of the tub.



VISUAL TIP

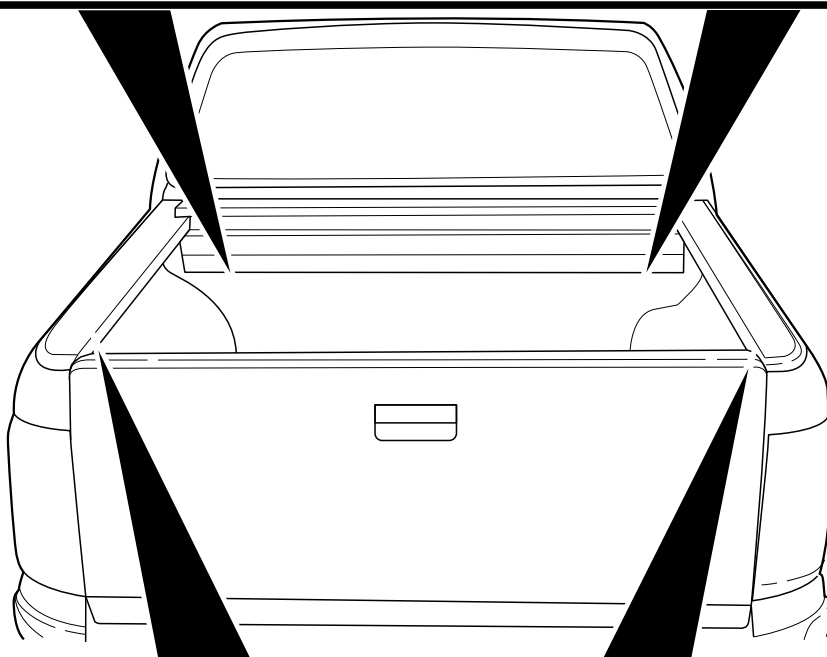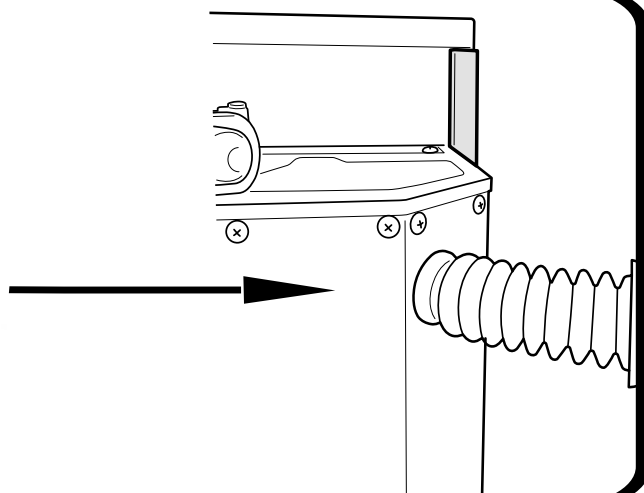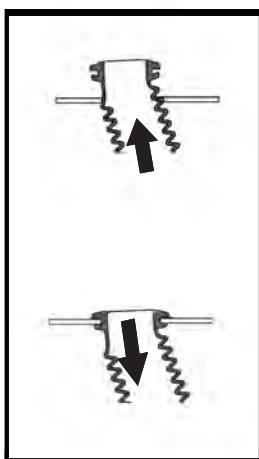

Note: With care push rear pipe in. Gently pull the pipe back so it seals correctly within the side rail channel.

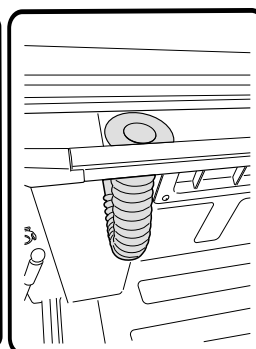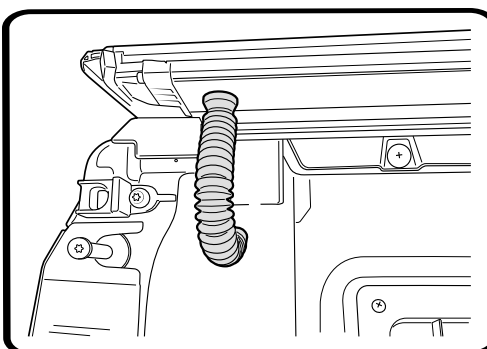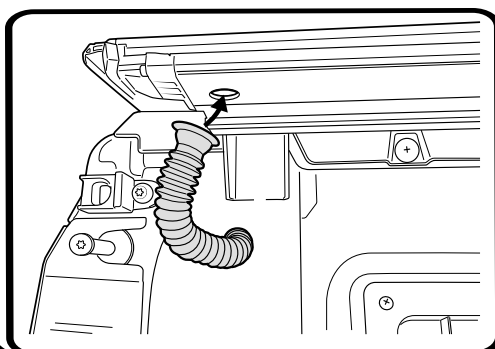
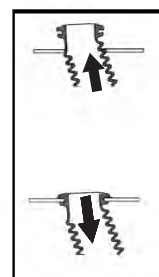


Install rear drain pipes through pre-drilled holes of the siderails. (RHS/LHS)

- a. Connect Battery loom S2.75 to Receiver loom.
- b. **Carefully** connect CI-Loom-short to Receiver loom.



Align connectors carefully to avoid pushing pins out.

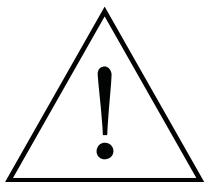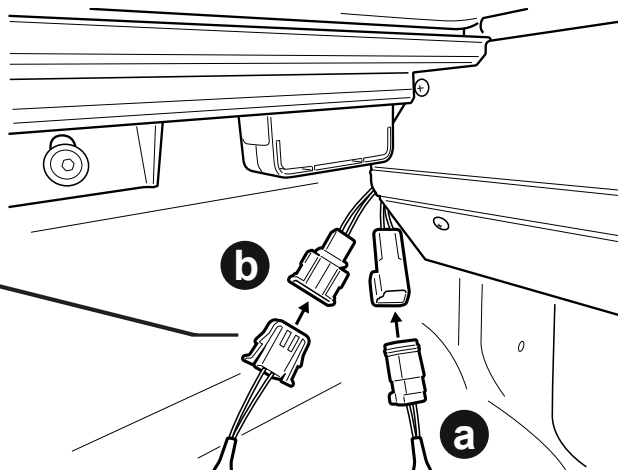

NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open.

Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.




Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

Touch & let go to open, touch & let go again to pause.

Touch & let go to close, touch & let go again to pause.

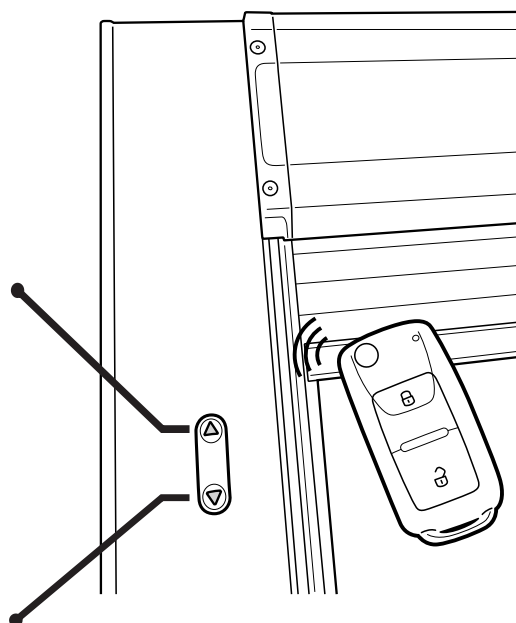

Trouble shooting visual tips:

side rail Parallel test

